STR-DE875/DE975

SERVICE MANUAL

Ver 1.3 2006. 02

US Model
Canadian Model
STR-DE875/DE975
AEP Model
UK Model
E Model
Chinese Model
Australian Model
STR-DE875

Photo : BLACK

Dolby Laboratories Licensing Corporation.
"DOLBY" the double-D symbol □□ "AC-3" and "PRO LOGIC"
are trademarks of Dolby Laboratories Licensing Corporation.

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:
With 8 ohm loads, both channels driven, from 20 - 20,000 Hz; rated 110 watts (STR-DE975) and 100 watts (STR-DE875) per channel minimum RMS power, with no more than 0.09 % total harmonic distortion from 250 milliwatts to rated output (USA model only).

Amplifier section

US, Canadian MODELS
Rated Power Output at Stereo mode
(8 ohms 20 Hz - 20 kHz, THD 0.09%)
STR-DE975:
110 W + 110W
STR-DE875:
100 W + 100W

Reference Power Output
(8 ohms at 1 kHz, THD 0.7%)
STR-DE975:
Front[1]: 110 W / ch
Center[1]: 110 W
Surround[1]: 110 W / ch

STR-DE875:
Front[1]: 100 W / ch
Center[1]: 100 W
Surround[1]: 100 W / ch

AEP, UK MODELS :
Rated Power Output at Stereo mode
(8 ohms 1 kHz, THD 0.7%)
100 W + 100 W
Reference Power Output
(8 ohms 1 kHz, THD 0.7%)
Front : 100 W / ch
Center : 100 W
Surround : 100 W / ch

Chinese MODEL :
Rated Power output at Stereo mode
(8 ohms 1 kHz, THD 0.7%)
90 W + 90 W
(at 220 V AC, 50 Hz)
100 W + 100 W
(at 230 V AC, 50 Hz)
Reference Power output
(8 ohms 1 kHz, THD 10% at 230 V AC, 50 Hz)
Front : 110 W / ch
Center : 110 W
Surround : 110 W / ch

Others :
Rated Power Output at Stereo Mode
(8 ohms 1 kHz, THD 0.7 %)
100 W + 100 W
Reference Power Output
(8 ohms 1 kHz, THD 10 %)
FRONT : 110 W / ch
CENTER : 110 W
SURROUND : 110 W / ch

1) Depending on the sound field settings and sources, there may be no sound output.

AEP, UK MODELS :
Frequency response
PHONO: RIAA equalization curve ±0.5 dB
MULTI CH IN, CD / SACD, MD / TAPE, DVD / LD, TV / SAT, VIDEO 1, VIDEO 2 : 10 Hz - 100 kHz +0.5 / –3 dB (with sound field, and equalizer by passed)

Others :
Frequency response
PHONO: RIAA equalization curve ±0.5 dB
MULTI CH IN, CD / SACD, MD / DAT*, MD / TAPE**, DVD / LD, TV / SAT, VIDEO 1, VIDEO 2 VIDEO 3*: 10 Hz - 50 kHz +0.5 / –2 dB (with sound field and equalizer by passed)

Inputs (Analog)
PHONO:
Sensitivity: 4.0 mV
Impedance: 50 kilohms
S / N[a]: 86 dB (A, 4.0 mV[b])
MULTI CH IN, CD / SACD, DVD / LD, MD / DAT*, MD / TAPE**, TV / SAT, VIDEO 1, VIDEO 2 VIDEO 3*:
Sensitivity: 250 mV
Impedance: 50 kilohms
S / N[a]: 96 dB(A, 250 mV[b])

a) Input short.
b) Weighted network, input level

— Continued on next page —

FM STEREO FM-AM RECEIVER

9-873-911-14
2006B16-1
© 2006.02
Sony Corporation
Home Audio Division
Published by Sony Techno Create Corporation

SONY®

This file was downloaded and provided FREE OF CHARGE from the ManualDirectory community.

You can find many free to download Service Manuals & Schematics at

http://www.manualdirectory.co.uk

Inputs (Digital)

DVD / LD (coaxial):
Sensitivity: –
Impedance: 75 ohms
S / N: 100 dB
(A, 20 kHz LPF)
DVD / LD, TV / SAT, MD / DAT*, MD / TAPE** (Optical):
Sensitivity: –
Impedance: –
S / N: 100 dB
(A, 20 kHz LPF)

Outputs MD / DAT*, MD / TAPE** (OUT); VIDEO 1, VIDEO 2: (AUDIO OUT):
Voltage: 250 mV,
Impedance: 10 kilohms
SUB WOOFER:
Voltage: 2 V
Impedance: 1 kilohms
PHONES:
Accepts low- and high-impedance headphones

EQ BASS:
99 Hz~1.0 kHz
(21 steps)
MID:
198 Hz~10 kHz
(37 steps)
TREBLE:
1.0 kHz~10 kHz
(23 steps)
Gain levels:
±10 dB, 1dB step

Sampling Frequency

48 kHz (TV / SAT, MD / DAT*, MD / TAPE** OPTICAL IN)
96 kHz (DVD / LD OPTICAL IN, COAXIAL IN)

* *STR-DE975 only*
** *STR-DE875 only*

FM tuner section

Tuning range
87.5 - 108.0 MH

Antenna terminals
75 ohms, unbalanced

Intermediate frequency
10.7 MHz

Sensitivity Mono: 18.3 dBf, 2.2 µV / 75 ohms
Stereo: 38.3 dBf 22.5 µV / 75 ohms

Usable sensitivity
11.2 dBf, 1 µV / 75 ohms

S/N Mono: 76 dB
Stereo: 70 dB

Harmonic distortion at 1 kHz
Mono: 0.3%
Stereo: 0.5%

Separation 45 dB at 1 kHz

Frequency response
30 Hz - 15 kHz +0.5 / –2 dB

Selectivity 60 dB at 400 kHz

AM tuner section

Tuning range US, Canadian MODELS :
With 10-kHz tuning scale:
530 - 1710 kHz [c)]
With 9-kHz tuning scale:
531 - 1710 kHz [c)]
AEP, UK MODELS :
531 - 1602 kHz
E MODEL :
530 - 1610 kHz (10 kHz step) [d)]
531 - 1602 kHz (9 kHz step) [d)]
Others :
531 - 1602 kHz (9 kHz step)

Antenna Loop antenna

Intermediate frequency
450 kHz

Usable sensitivity
AEP, UK MODELS :
50 dB / m (at 999 kHz)
Others :
50 dB / m (at 1,000 kHz or 999 kHz)

S/N 54 dB (at 50 mV / m)

Harmonic distortion
0.5 % (50 mV / m, 400 Hz)

Selectivity AEP, UK MODELS :
35 dB
Others :
At 9 kHz: 35 dB
At 10 kHz: 40 dB

c) You can change the AM tuning interval to 9 kHz. After tuning in any AM station, turn off the receiver. Hold down the PRESET TUNING + button and press the I/⏻ button. All preset stations will be erased when you change the tuning interval. To reset the scale to 10 kHz, repeat the procedure.

d) You can change the AM tuning interval to 10 kHz. After tuning in any AM station, turn off the receiver. Hold down the TUNING + button and press the I/⏻ button. All preset stations will be erased when you change the tuning interval. To reset the scale to 9 kHz, repeat the procedure.

Video section

Inputs Video: 1 Vp-p 75 ohms
S-video:
Y: 1 Vp-p 75 ohms
C: 0.286 Vp-p 75 ohms

Outputs Video: 1 Vp-p 75 ohms
S-video:
Y: 1 Vp-p 75 ohms
C: 0.286 Vp-p 75 ohms

General

System Tuner section:
PLL quartz-locked digital synthesizer system
Preamplifier section:
Low-noise NF type equalizer
Power amplifier section:
Pure-complementary SEPP

Power requirements
US, Canadian MODELS :
120 V AC, 60 Hz
AEP, UK MODELS :
230 V AC, 50 / 60 Hz
E MODEL :
120 / 220 / 240 V AC, 50 / 60 Hz
Australian MODEL :
240 V AC, 50 Hz
Others :
220-230 V AC, 50 / 60 Hz

Power consumption
US MODEL :
STR-DE975: 270 W
In standby condition: 0.9 W
STR-DE875: 260 W
In standby condition: 0.9 W
Canadian MODEL :
STR-DE975: 350 VA
In standby condition: 0.9 W
STR-DE875: 340 VA
In standby condition: 0.9 W
Others :
220 W
In standby condition: 0.9 W

AC outlets US, Canadian MODELS :
2 switched, total 120 W / 1A Max
AEP, UK MODELS :
1 switched, max 100 W
E, Chinese MODELS :
2 switched, total 100 W max
Others :
1 switched, total 100 W max

Dimensions 430 × 157.5 × 369 mm (17 × 6 1/8 × 14 4/8 in.) including projecting parts and controls

Mass (Approx.)
9.5 kg (20 lbs. 16 oz.)

Supplied accessories

- FM wire antenna (1)
- AM loop antenna (1)
- R6 (size-AA) batteries (2)
- US, Canadian model only
  - Audio / video / control S connecting cord (1)
  - Control S connecting cord (1)
- STR-DE975 only
  - Remote commander RM-PP505L (remote) (1)
- STR-DE875 : US, Canadian, E, Malaysia, Singapore, Chinese, Australian model only
  - Remote commander RM-PP505 (remote) (1)
- STR-DE875 : AEP, UK model only
  - Commander, standard RM-U305A (remote)

Design and specifications are subject to change without notice.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer: Check the antenna terminals, metal trim, "metallized" knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers' instructions to use these instruments.

2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.

3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The "limit" indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

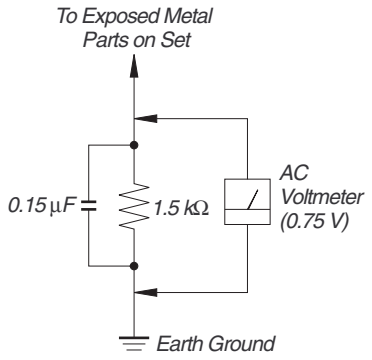

Fig. A. Using an AC voltmeter to check AC leakage.

MODEL IDENTIFICATION
— BACK PANEL —

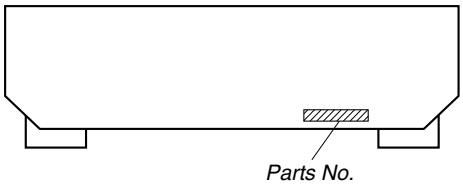

MODEL	PARTS No.
DE975:US model	4-232-578-0☐
DE975:Canadian model	4-232-578-1☐
DE875:US model	4-233-045-0☐
DE875:Canadian model	4-233-045-1☐
DE875:Australian model	4-233-045-2☐
DE875:Malaysia,Singapore model	4-233-045-3☐
DE875:Chinese model	4-233-045-4☐
DE875:E model	4-233-045-5☐
DE875:AEP model	4-233-045-6☐
DE875:UK model	4-233-045-7☐

与安全有关的零部件须知

在原理图上用阴影及 ⚠ 标记来识别的零部件在安全操作上是具有关键性的。这些零部件要用本手册中所示的部件号对应的索尼零部件进行更换。

在安全操作上具有关键性的电路调整与索尼公司出版的维修手册完全一致。在更换关键零部件时或怀疑动作失常时，请进行这些调整操作。

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈSES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPÉMENTS PUBLIÉS PAR SONY.

TABLE OF CONTENTS

1. GENERAL 5

2. TEST MODE 7

3. DIAGRAMS

3-1. Circuit Boards Location 8
3-2. Block Diagrams 10
• Main Section 10
• Power Section 11
3-3. Printed Wiring Board – Digital Section – 12
3-4. Schematic Diagram – Digital Section (1/4) – 13
3-5. Schematic Diagram – Digital Section (2/4) – 14
3-6. Schematic Diagram – Digital Section (3/4) – 15
3-7. Schematic Diagram – Digital Section (4/4) – 16
3-8. Printed Wiring Board – Main Section – 17
3-9. Schematic Diagram – Main Section (1/3) – 18
3-10. Schematic Diagram – Main Section (2/3) – 19
3-11. Schematic Diagram – Main Section (3/3) – 20
3-12. Printed Wiring Board – Display Section – 21
3-13. Schematic Diagram – Display Section – 22
3-14. Printed Wiring Board – Video Section – 23
3-15. Schematic Diagram – Video Section – 24
3-16. Printed Wiring Board – Speaker Section – 25
3-17. Schematic Diagram – Speaker Section – 26
3-18. Printed Wiring Board – Power Section – 27
3-19. Schematic Diagram – Power Section – 28
3-20. IC Block Diagrams 29
3-21. IC Pin Function Description 33

4. EXPLODED VIEWS

4-1. Front Panel Section 36
4-2. Chassis Section 37

5. ELECTRICAL PARTS LIST 39

SECTION 1
GENERAL

This section is extracted from instruction manual.

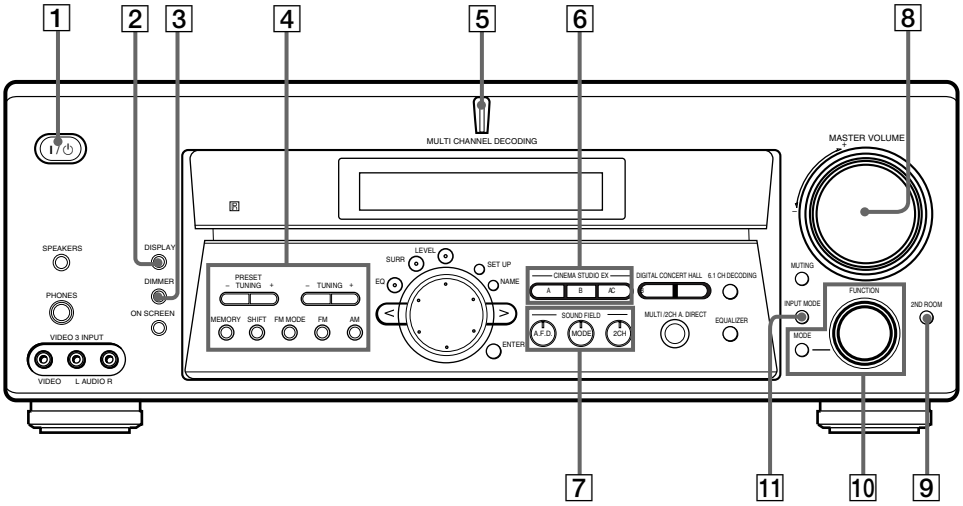

1 I/⏻ switch
Press to turn the receiver on and off.

2 DISPLAY button
Press repeatedly to change the information on the display window as follows:

Index name of the component or the preset station*
↓
FUNCTION button indication or frequency**
↓
Sound field applied to the program source

* *Index name appears only when you have assigned one to the component or preset station (see page 49). Index name does not appear when only blank spaces have been entered, or it is the same as the function button.*
** *Frequency appears only when the tuner is selected.*

3 DIMMER button
Press DIMMER repeatedly to adjust the brightness of the display (5 steps).
When set to the dimmest setting, the display is turned off. However, when you press any button, the display becomes the brightest setting temporary.

4 The following buttons operate the built-in tuner. For details, see "Receiving Broadcasts" starting from page 44.

PRESET TUNING +/– buttons
Scan all preset stations.

TUNING +/- buttons
Scan all the available radio stations.

MEMORY button
Press to memorize a preset station.

SHIFT button
Selects a memory page for preset stations.

FM MODE button
If "STEREO" flashes in the display and the FM stereo reception is poor, press this button. You will not have the stereo effect but the sound is improved.

FM button
Selects the FM band.

AM button
Selects the AM band.

5 MULTI CHANNEL DECODING indicator
This indicator lights up when the unit is decoding signals recorded in a multi channel format.

6 Use the CINEMA STUDIO EX buttons to enjoy the CINEMA STUDIO EX sound effects.

A/B/C buttons
Press to activate the CINEMA STUDIO EX A, B or C sound field (page 32).

7 Use the SOUND FIELD buttons to enjoy surround sound. For details, see "Enjoying Surround Sound" starting from page 30.

A.F.D. button / indicator
Press to set the receiver to automatically detect the type of audio signal being input and perform proper decoding (if necessary).

MODE button / indicator
Press to activate the sound field selection mode (page 31).

2CH button / indicator
Press to output sound from only the front (left and right) speakers.

8 MASTER VOLUME control
After turning on the component you selected, rotate to adjust the volume.

9 2ND ROOM button (STR-DE975 only)
Press repeatedly to select the audio signals for output to a stereo amplifier or speakers in another room (page 12).
Each press selects another audio source (except PHONO) to be output from the 2ND ROOM jacks. "SOURCE" selects the same program source as the main function controls.

- Even if 2ND ROOM is set to "SOURCE", the sound from front speakers (L/R) is not output when the receiver is set to MULTI CH IN.
- Only signals from components connected to the analog inputs are output through the 2ND ROOM OUT jacks. No signals are output from components connected to only the digital input jacks.

10 FUNCTION control
Rotate to select the component you want to use.

To select	Rotate to display
VCR	VIDEO 1 or VIDEO 2
Camcorder or video game	VIDEO 3 (STR-DE975 only)
DVD or LD player	DVD/LD
TV or satellite tuner	TV/SAT
Tape deck MD or Tape deck	TAPE (STR-DE975 only) MD/TAPE (STR-DE875 only)
MD or DAT deck	MD/DAT (STR-DE975 only)
CD or SACD player	CD/SACD
Built in tuner	TUNER
Turntable	PHONO

After selecting the component, turn on the component you selected and play the program source.

- After selecting VCR, camcorder, video game, DVD player, or LD player, turn on the TV and set the TV's video input to match the component you selected.

MODE button
Press to select and play another video/audio source in combination with the selected component.
Each time you press the button, the display changes as follows:

Standard display

→V: XXX → A:XXX
selected component ←

Press MODE to display	And rotate FUNCTION to select
V:XXX	Any video source to enjoy with the audio from the selected component
A:XXX	Any audio source to enjoy with the video from the selected component

11 INPUT MODE button
Press INPUT MODE to select the input mode for your digital components. Each time you press the button, the input mode of the currently selected component switches.

Select	To
AUTO 2CH	Give priority to the analog audio signals input to the AUDIO IN (L/R) jacks when there is no digital signals.
COAXIAL FIXED	Specify the digital audio signals input to the DIGITAL COAXIAL input jacks.
OPTICAL FIXED	Specify the digital audio signals input to the DIGITAL OPTICAL input jacks.
ANALOG 2CH FIXED	Specify the analog audio signals input to the AUDIO IN (L/R) jacks.

When the MULTI CH is assigned to a specific function using SET UP menu (page 51), "AUTO MULTI CH" and "MULTI CH FIXED" are displayed instead of "AUTO 2CH" and "ANALOG 2CH FIXED".

Select	To
AUTO MULTI CH	Give priority to the analog audio signals input to the MULTI CH IN jacks when there is no digital signals.
MULTI CH FIXED	Specify the analog audio signals input to the MULTI CH IN jacks.

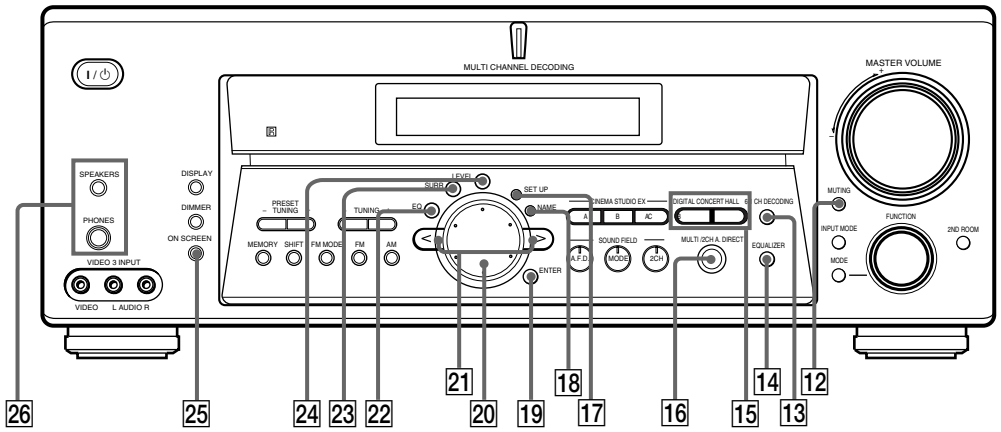

12 MUTING button
Press to mute the sound. MUTING appears in the display when the sound is muted.

13 6.1 CH DECODING button
Press 6.1 CH DECODING to adjust the 6.1 channel matrix parameter in the SET UP menu (page 51).
This function works only for the multi channel format [3/2].
This function is effective for the following sound fields.
- A.F.D.*
- NORMAL SURROUND
- CINEMA STUDIO EX A-C
- SEMI CINEMA STUDIO EX A-C
- NIGHT THEATER
- MONO MOVIE
- STEREO MOVIE
- V. MULTI DIMENSION
- VIRTUAL MULTI REAR
- V. SEMI M. DIMENSION
- VIRTUAL ENHANCED A, B

* *"AUTO" only.*

14 EQUALIZER button
Press to turn the equalizer on or off. The EQ indicator in the display lights when the equalizer is turned on. When you adjust the equalizer using the EQ parameters (page 38), the settings are stored automatically and can be reproduced wherever you turn on the equalizer.

- The equalizer is not compatible with 96 kHz digital audio signals and during MULTI CH IN input.

15 DIGITAL CONCERT HALL buttons
Use the DIGITAL CONCERT HALL buttons to enjoy the DIGITAL CONCERT HALL sound effects.

A/B buttons
Press to activate the DIGITAL CONCERT HALL A or B sound field (page 32).

16 MULTI/2CH A. DIRECT button
Press MULTI/2CH A. DIRECT to enjoy the audio source connected to the MULTI CH IN jacks or analog 2 channel input jacks. Only volume control and the front speaker balance can be adjusted when set to 2CH ANALOG DIRECT. When set to MULTI DIRECT, you can adjust balance and level of all the speakers. When this function is on, the surround effects are turned off.

Select	To
MULTI	Enjoy the audio source connected to the MULTI CH IN jacks. MULTI CH IN indicator lights up in the display. This mode is suitable for enjoying high quality analog source.
2CH A. DIRECT	Enjoy the audio source connected to analog 2 channel jacks. This mode is suitable for enjoying high quality analog source.

17 SET UP button
Press to activate the setup mode, then use the cursor buttons (21) to select any of the following indications. You can then make various settings using the jog dial (20). For details, see "Adjustment Using the SET UP Button" starting from page 51.

18 NAME button
Press to activate the name function and enter names for preset stations and program sources (page 49).

19 ENTER button
Press to enter individual characters for the preset station and program source names.

20 Jog dial
Turn to adjust the selected speaker level, surround, and equalizer parameters (etc.).

21 Cursor buttons (</>)
Press to select various speaker level, surround, and equalizer parameters (etc.).

22 EQ button
Press to activate the equalizer parameters (page 38). The indicator on the button lights up and you can adjust the various equalizer parameters.

23 SURR button
Press to activate the surround parameters (page 36). The indicator on the button lights up and you can adjust the various surround parameters (effect level, wall type, etc.).

24 LEVEL button
Press to activate the speaker level parameters (page 37). The indicator on the button lights up and you can adjust the various speaker level parameters (front balance, surround balance, etc.).

25 ON SCREEN button (STR-DE975 only)
Press to turn the on-screen display on or off (page 8). Press to display the current sound field, and the parameters for SURR, LEVEL, EQ, and SET UP. Press again to turn off the on-screen display.

26 SPEAKERS button
Press SPEAKERS button to ON. Press again to OFF.

PHONES jack
Connects headphones.
- When you connect the headphones, no sound will come from the speakers and "SP. OFF" lights up in the display.

SECTION 2
TEST MODE

FACTORY PRESET MODE

* All preset contents are reset to the default setting.
* Procedure:
  While depressing the SET UP and the DIMMER buttons simultaneously, press the power I/⏻ button to turn on the main power. The message "TUNER FACTORY PRESET" appears and the present contents are reset to the default values.

AM CHANNEL STEP 9 KHZ/10 KHZ SELECTION MODE

* Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.
* Procedure:
  Set the FUNCTION to AM. Turn off the main power.
  While depressing the PRESET TUNING+ button, press the power. I/⏻ button to turn on the main power. Either the message 9 k STEP or 10 k STEP appears. Select the desired step.
* For US/Canadian/E model only

FLUORESCENT INDICATOR TUBE TEST MODE

* All fluorescent segments are tested. When this test is activated, all segments turn on at the same time, then each segment turns on one after another.
* Procedure:
  While depressing the A.F.D. and the DIMMER buttons simultaneously, press the power I/⏻ button to turn on the main power.

1. All segments turn on.
   VIDEO 3, SURR, LEVEL, SOUND FIELD MODE and MULTI/2CH A. DIRECT LEDs turn on.

2. Press the A.F.D. or the DIMMER button, confirm display.
(Display)

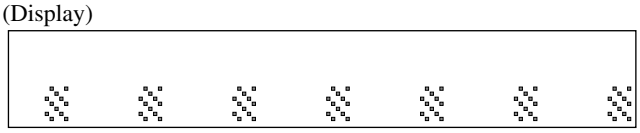

   MULTI CHANNEL DECODING (blue), VIDEO 1, DVD/LD, EQ, NAME and A.F.D. LEDs turn on.

3. Press the A.F.D. or the DIMMER button, confirm display.
(Display)

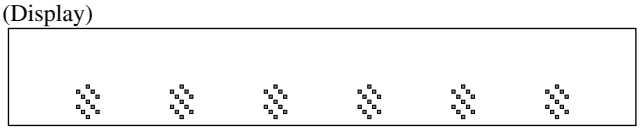

   Digital Cinema Sound, VIDEO 2, TV/SAT, 6.1CH DECODING, SET UP and 2CH LEDs turn on.

4. Press the A.F.D. or the DIMMER button, All segments turn off. ALL LEDs turn off.

5. Every pressing of the A.F.D. or the DIMMER button turns on each segment and LED one after another in the same order.

SOUND FIELD CLEAR MODE

* The preset sound field is cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.
* Procedure:
  While depressing the SOUND FIELD MODE button, press the power I/⏻ button to turn on the main power. The message "S.F Initialize" appears and initialization is performed.

DEMONSTRATION MODE

* Demonstration is performed.
* Procedure :
  While depressing the SET UP button, press the power I/⏻ button. The message appears and demonstration is performed.
* To finish DEMONSTRATION MODE, press the power I/⏻ button while the introduction message appears in the display.

VERSION DISPLAY MODE

* The version is displayed.
* Procedure:
  While depressing the MUTING and the DIMMER buttons simultaneously, press the power I/⏻ button to turn on the main power. The massage "VERSION" and the version number are displayed.

KEY CHECK MODE

* Button check
* Procedure:
  While depressing the LEVEL and the DISPLAY buttons simultaneously, press the power I/⏻ button to turn on the main power.
  "Rest 36 Key" appears.
  Every pressing of any button other than I/⏻ counts down the buttons. The buttons which are already counted once are not counted again. When all buttons are pressed "Rest 00 Key" appears.

AUTOBETICAL MODE (DE875: AEP, UK)

* This mode is installed in the Europe models only. When this mode is used, the receiver scans the broadcasts that can be received by tuner, and sets up the broadcasts. Be sure to start scanning after connecting the antenna.
  Procedure:
  Check that the antenna is connected. Press the I/⏻ button while pressing the MEMORY button to turn on the power. The message appears and scanning starts by tuner.

SECTION 3
DIAGRAMS

3-1. CIRCUIT BOARDS LOCATION

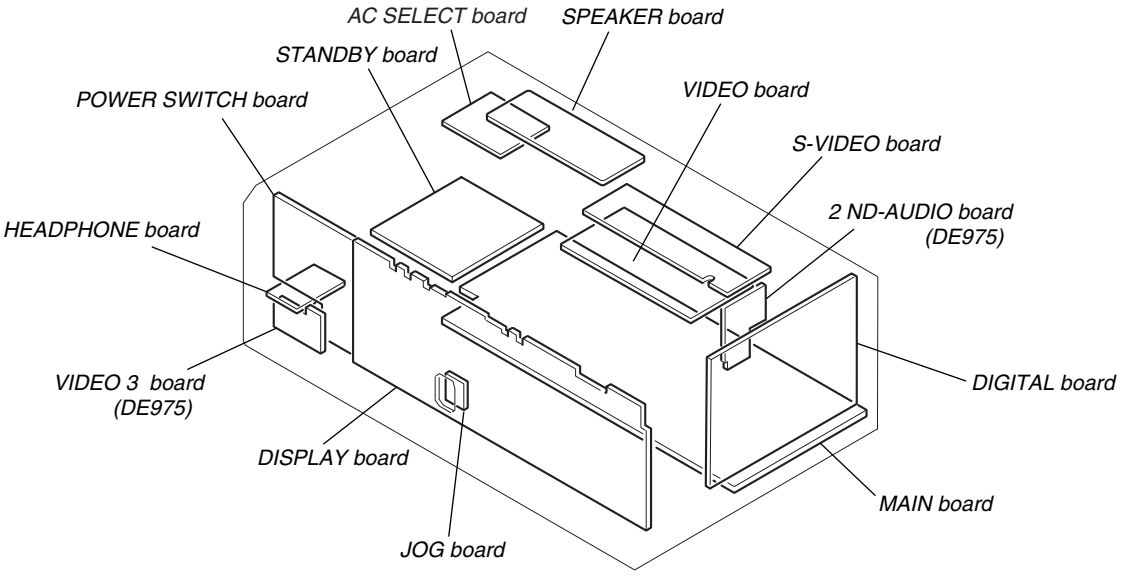

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this necessary note is printed in each block.)

For schematic diagrams.
Note:

- All capacitors are in µF unless otherwise noted. p : pF. 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- % : indicates tolerance.
- △ : internal component.
- : nonflammable resistor.
- : fusible resistor.
- : panel designation.

Note: The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	**Note:** Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。	

- : B+ Line.
- : B– Line.
- : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  No mark : FM
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
- Circled numbers refer to waveforms.
- Signal path.
  : FM
  : CD (ANALOG)
  : DVD (DIGITAL)
- Abbreviation
  CND : Canadian model
  MY : Malaysia model
  SP : Singapore model
  CH : Chinese model
  AUS : Australian model

For printed wiring boards.
Note:

- : parts extracted from the component side.
- ○ : Through hole.
- △ : internal component.
- : Pattern from the side which enables seeing.





Caution:	
Pattern face side: (Side A)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Side B)	Parts on the parts face side seen from the parts face are indicated.

• Waveform

VIDEO Board

① IC252 ⑧ (EXS)

DIGITAL Board

② IC1306 ⑦ (IY)

③ IC1501 ⑫ (MCLK2)

④ IC1101 ㊼ (XI)

3-2. BLOCK DIAGRAMS – MAIN SECTION –

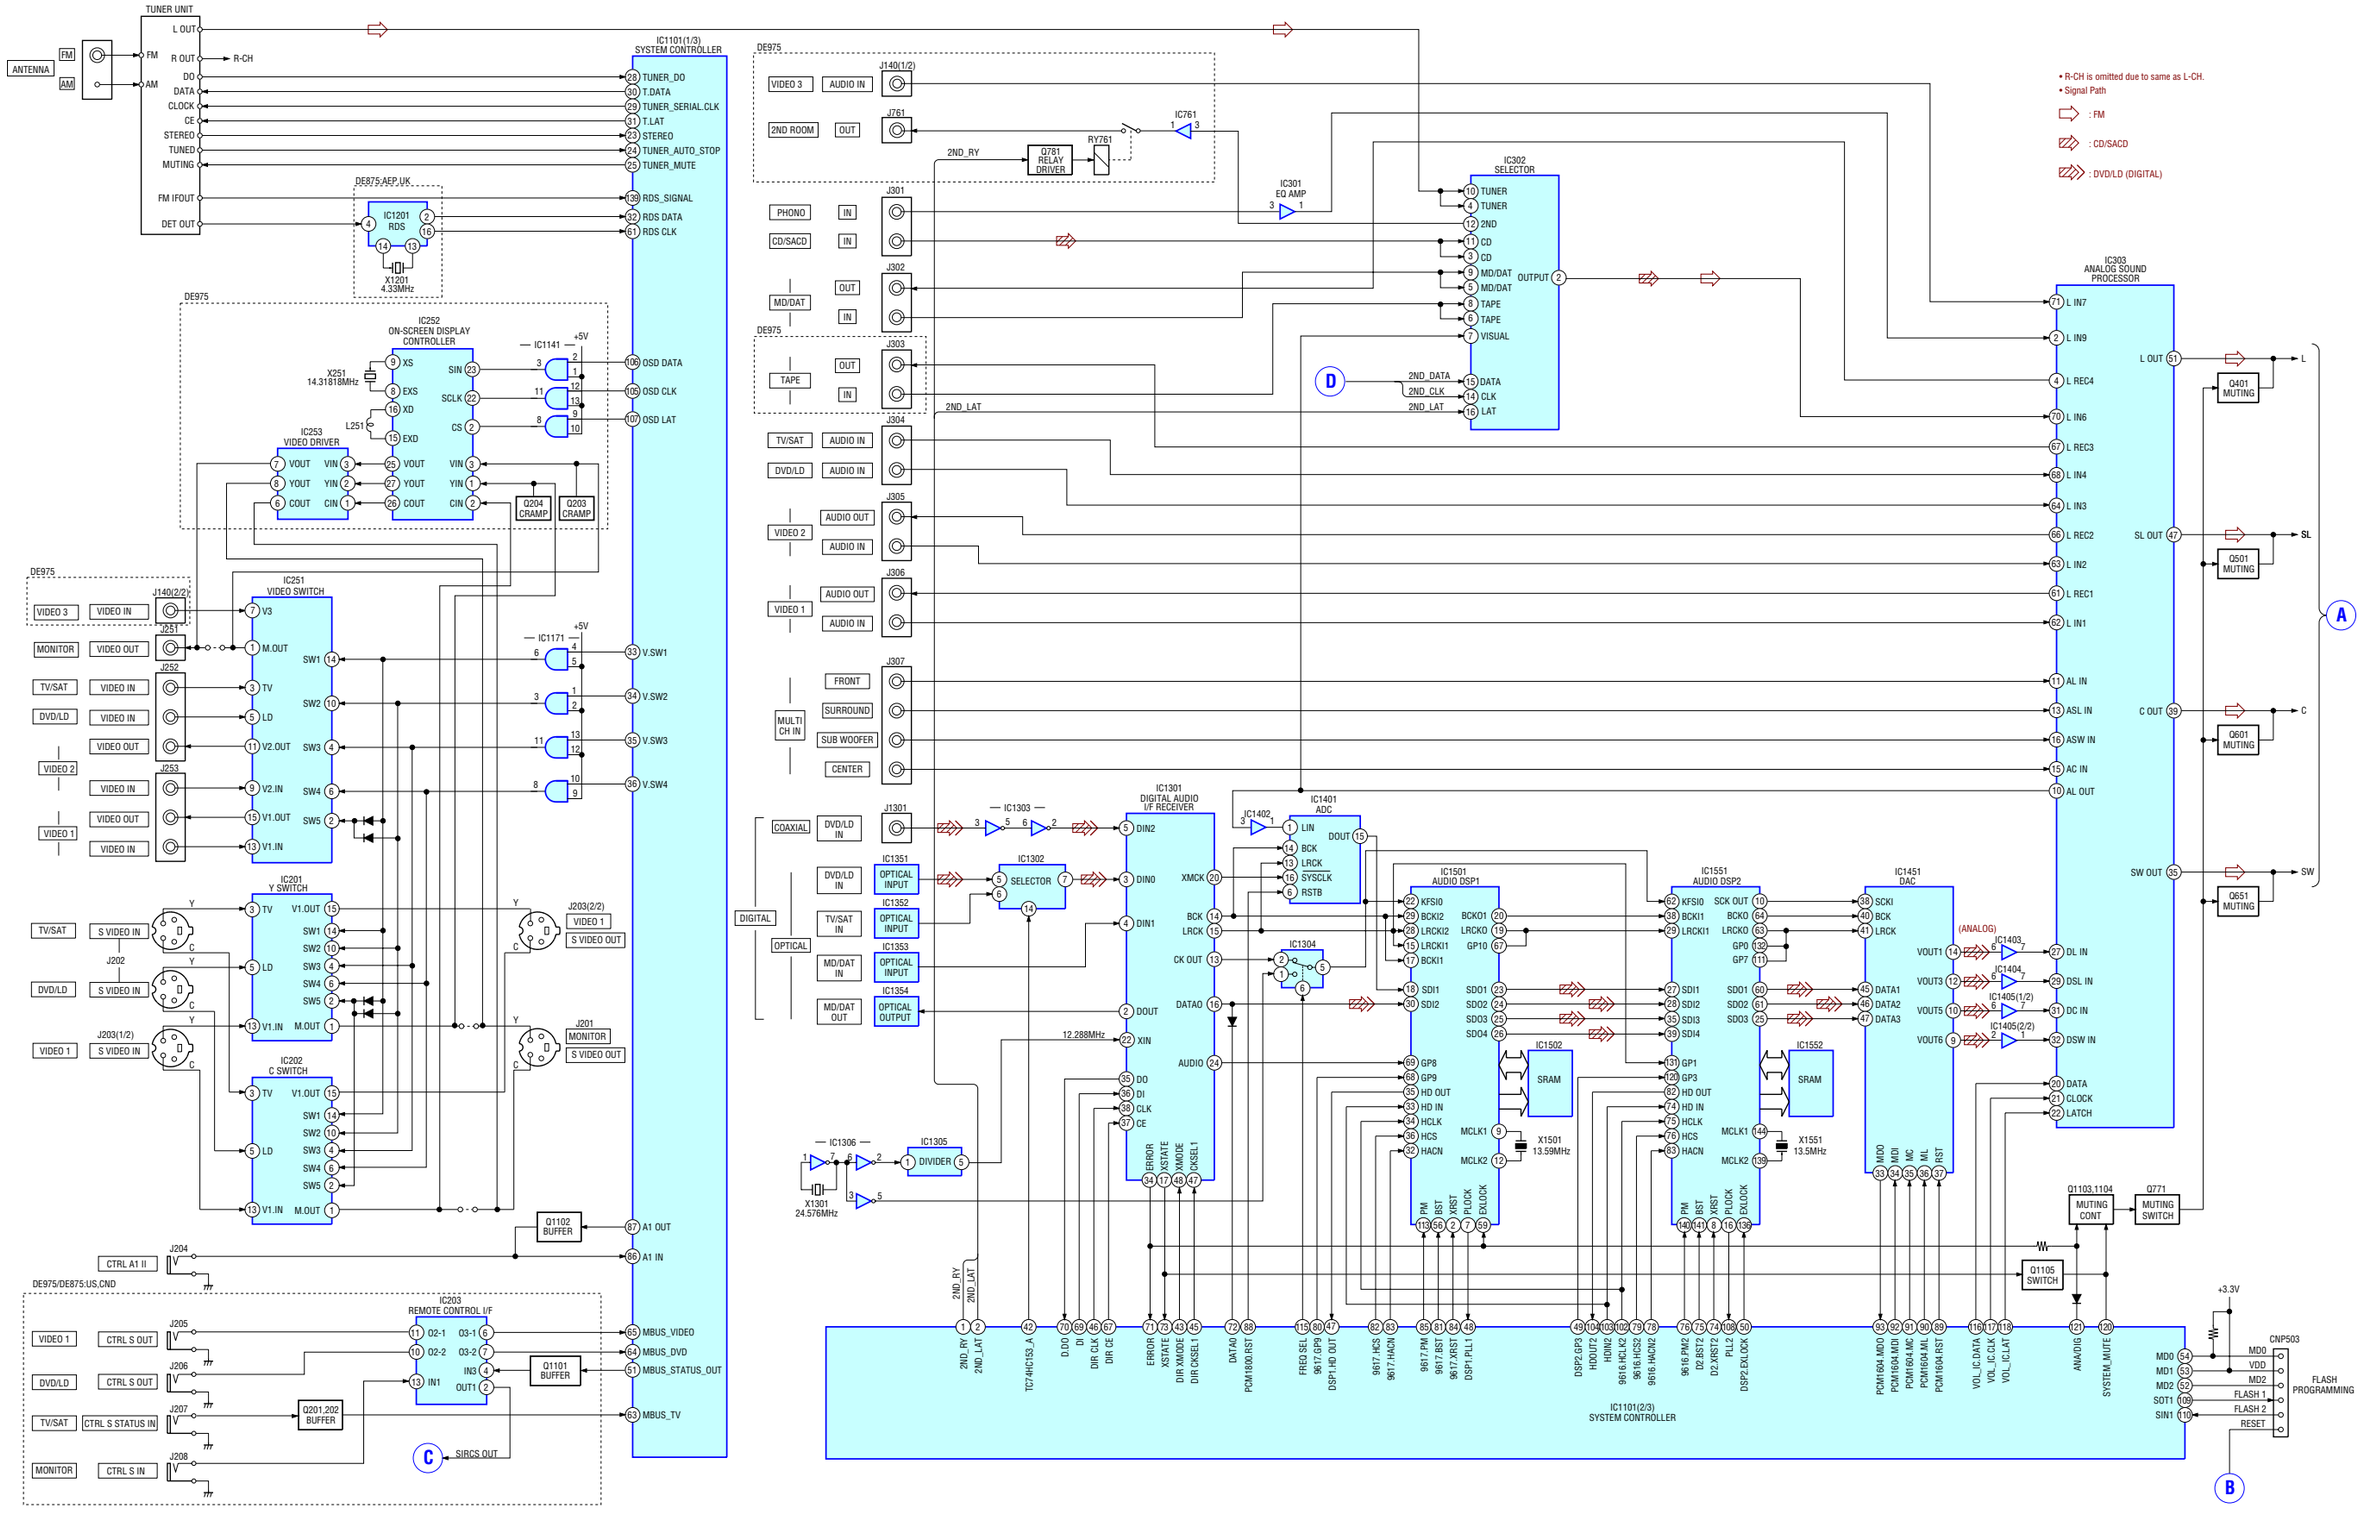

– DISPLAY/POWER SECTION –

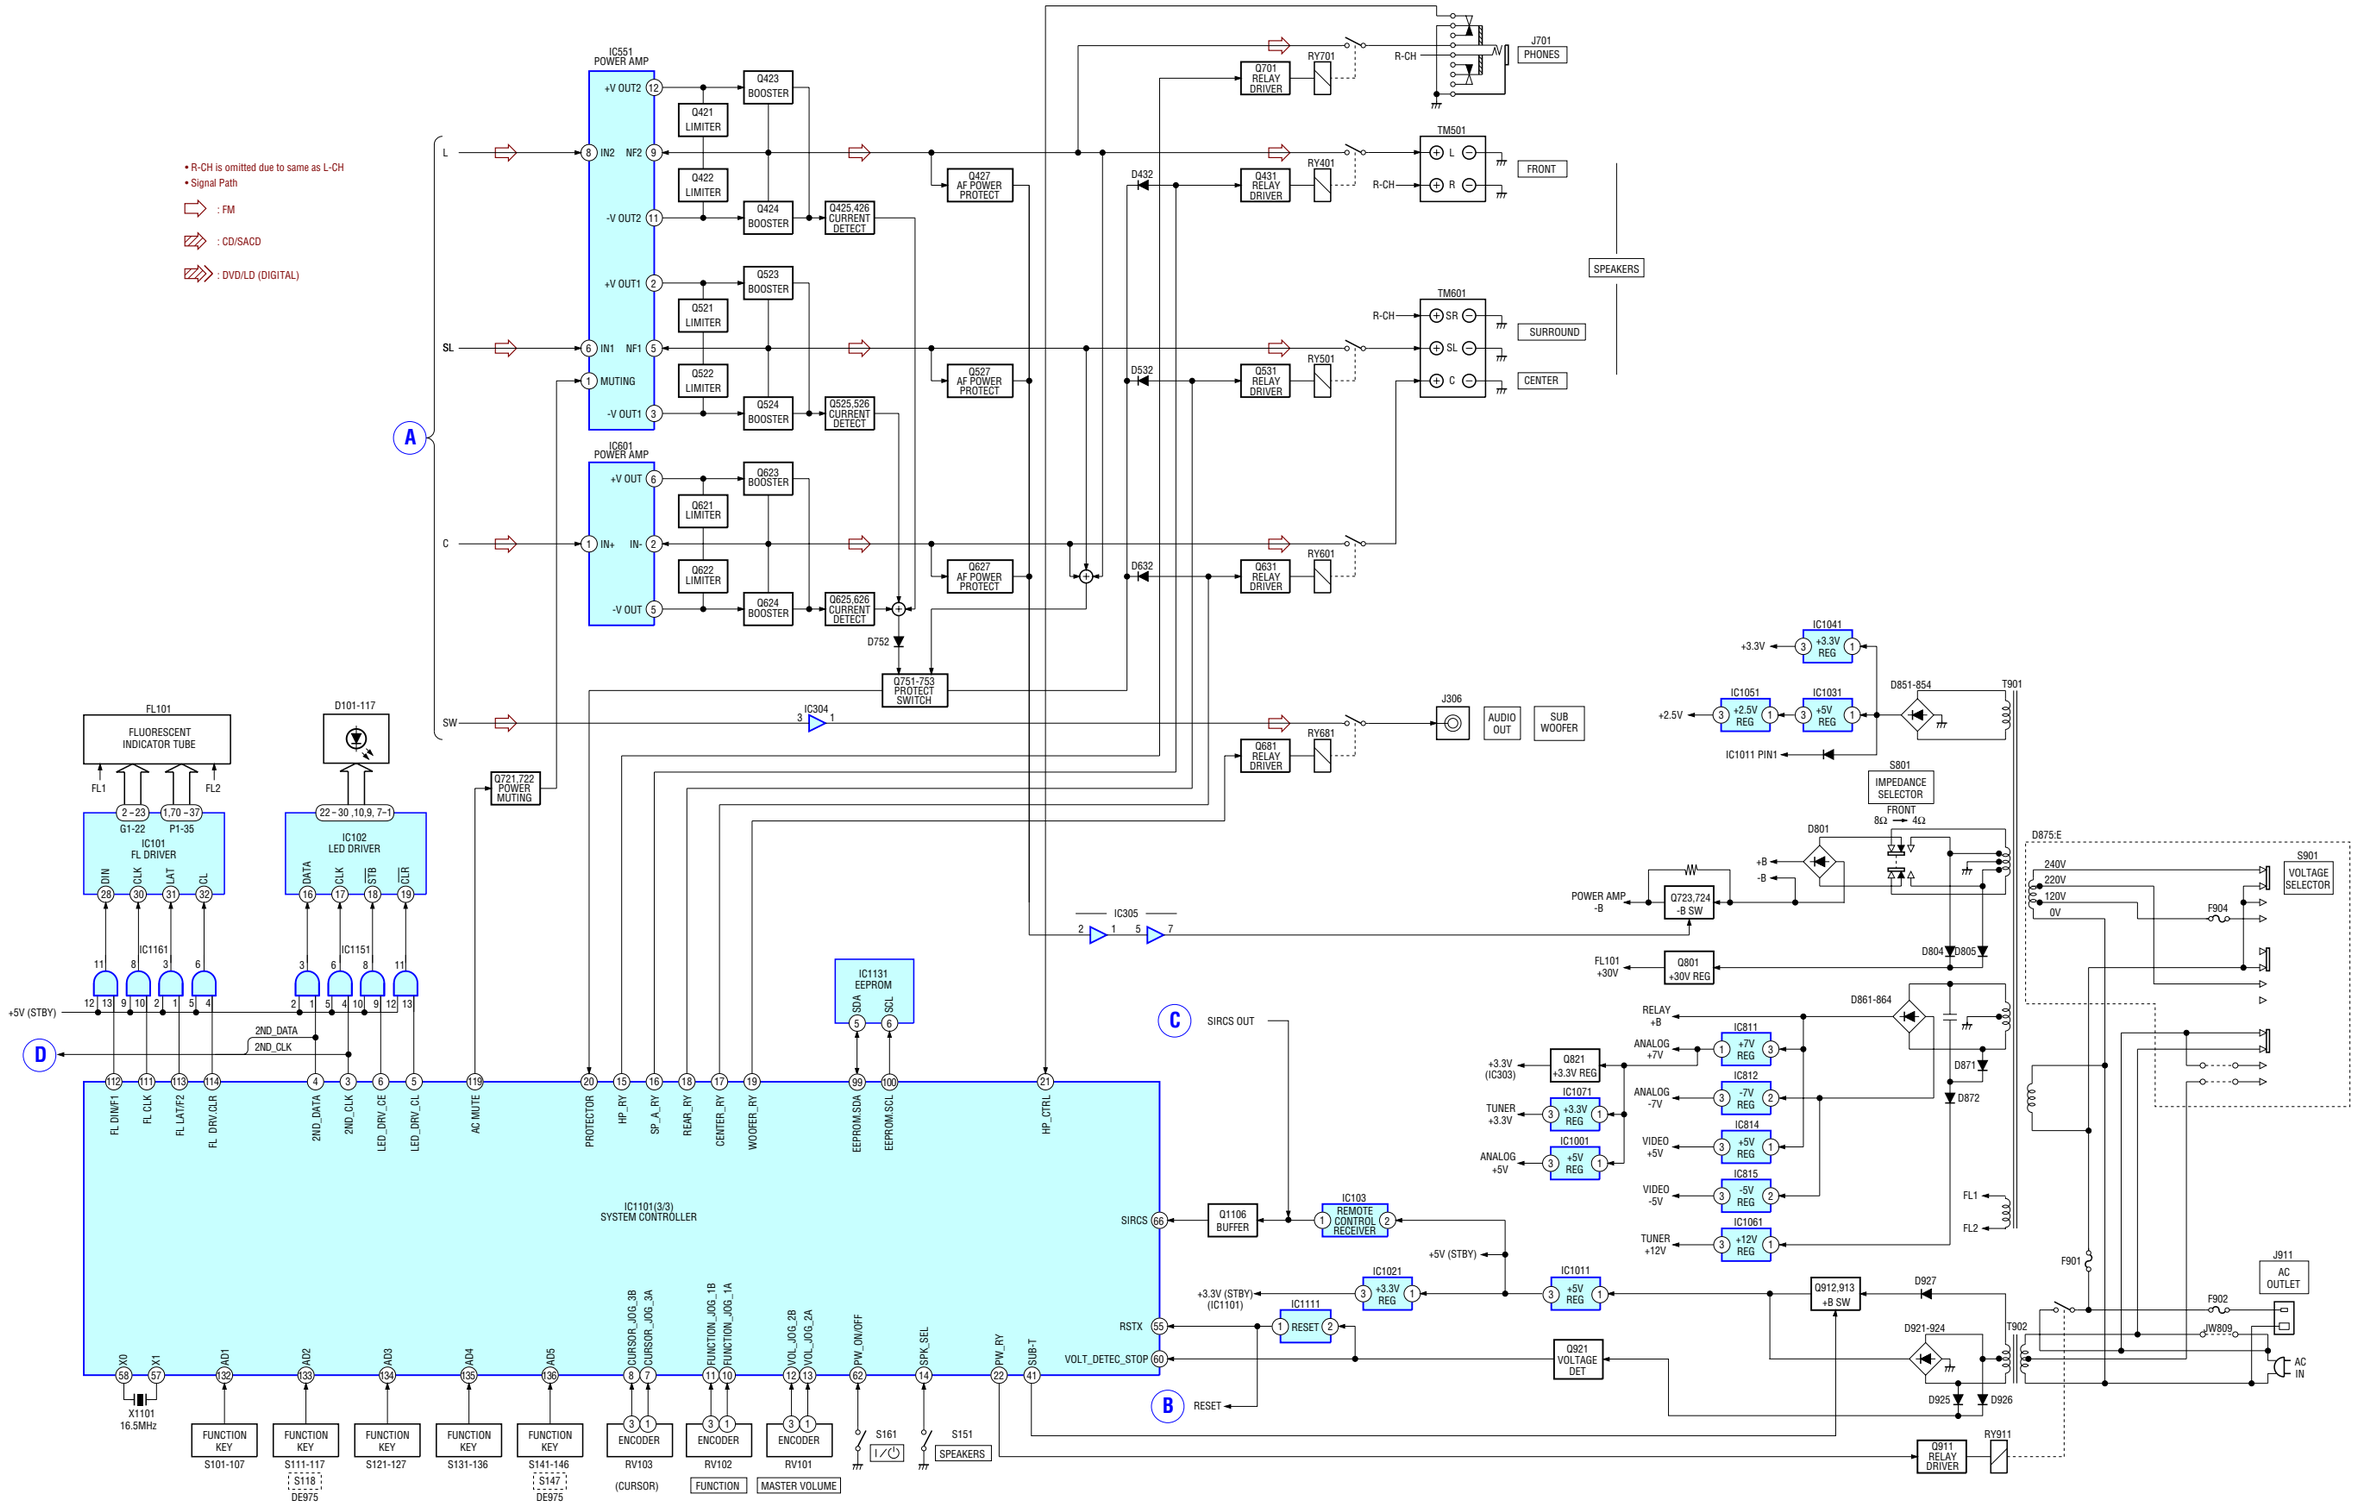

3-3. PRINTED WIRING BOARD – DIGITAL SECTION –

• See page 8 for Circuit Boards Location.

【DIGITAL BOARD】(SIDE A)

【DIGITAL BOARD】(SIDE B)

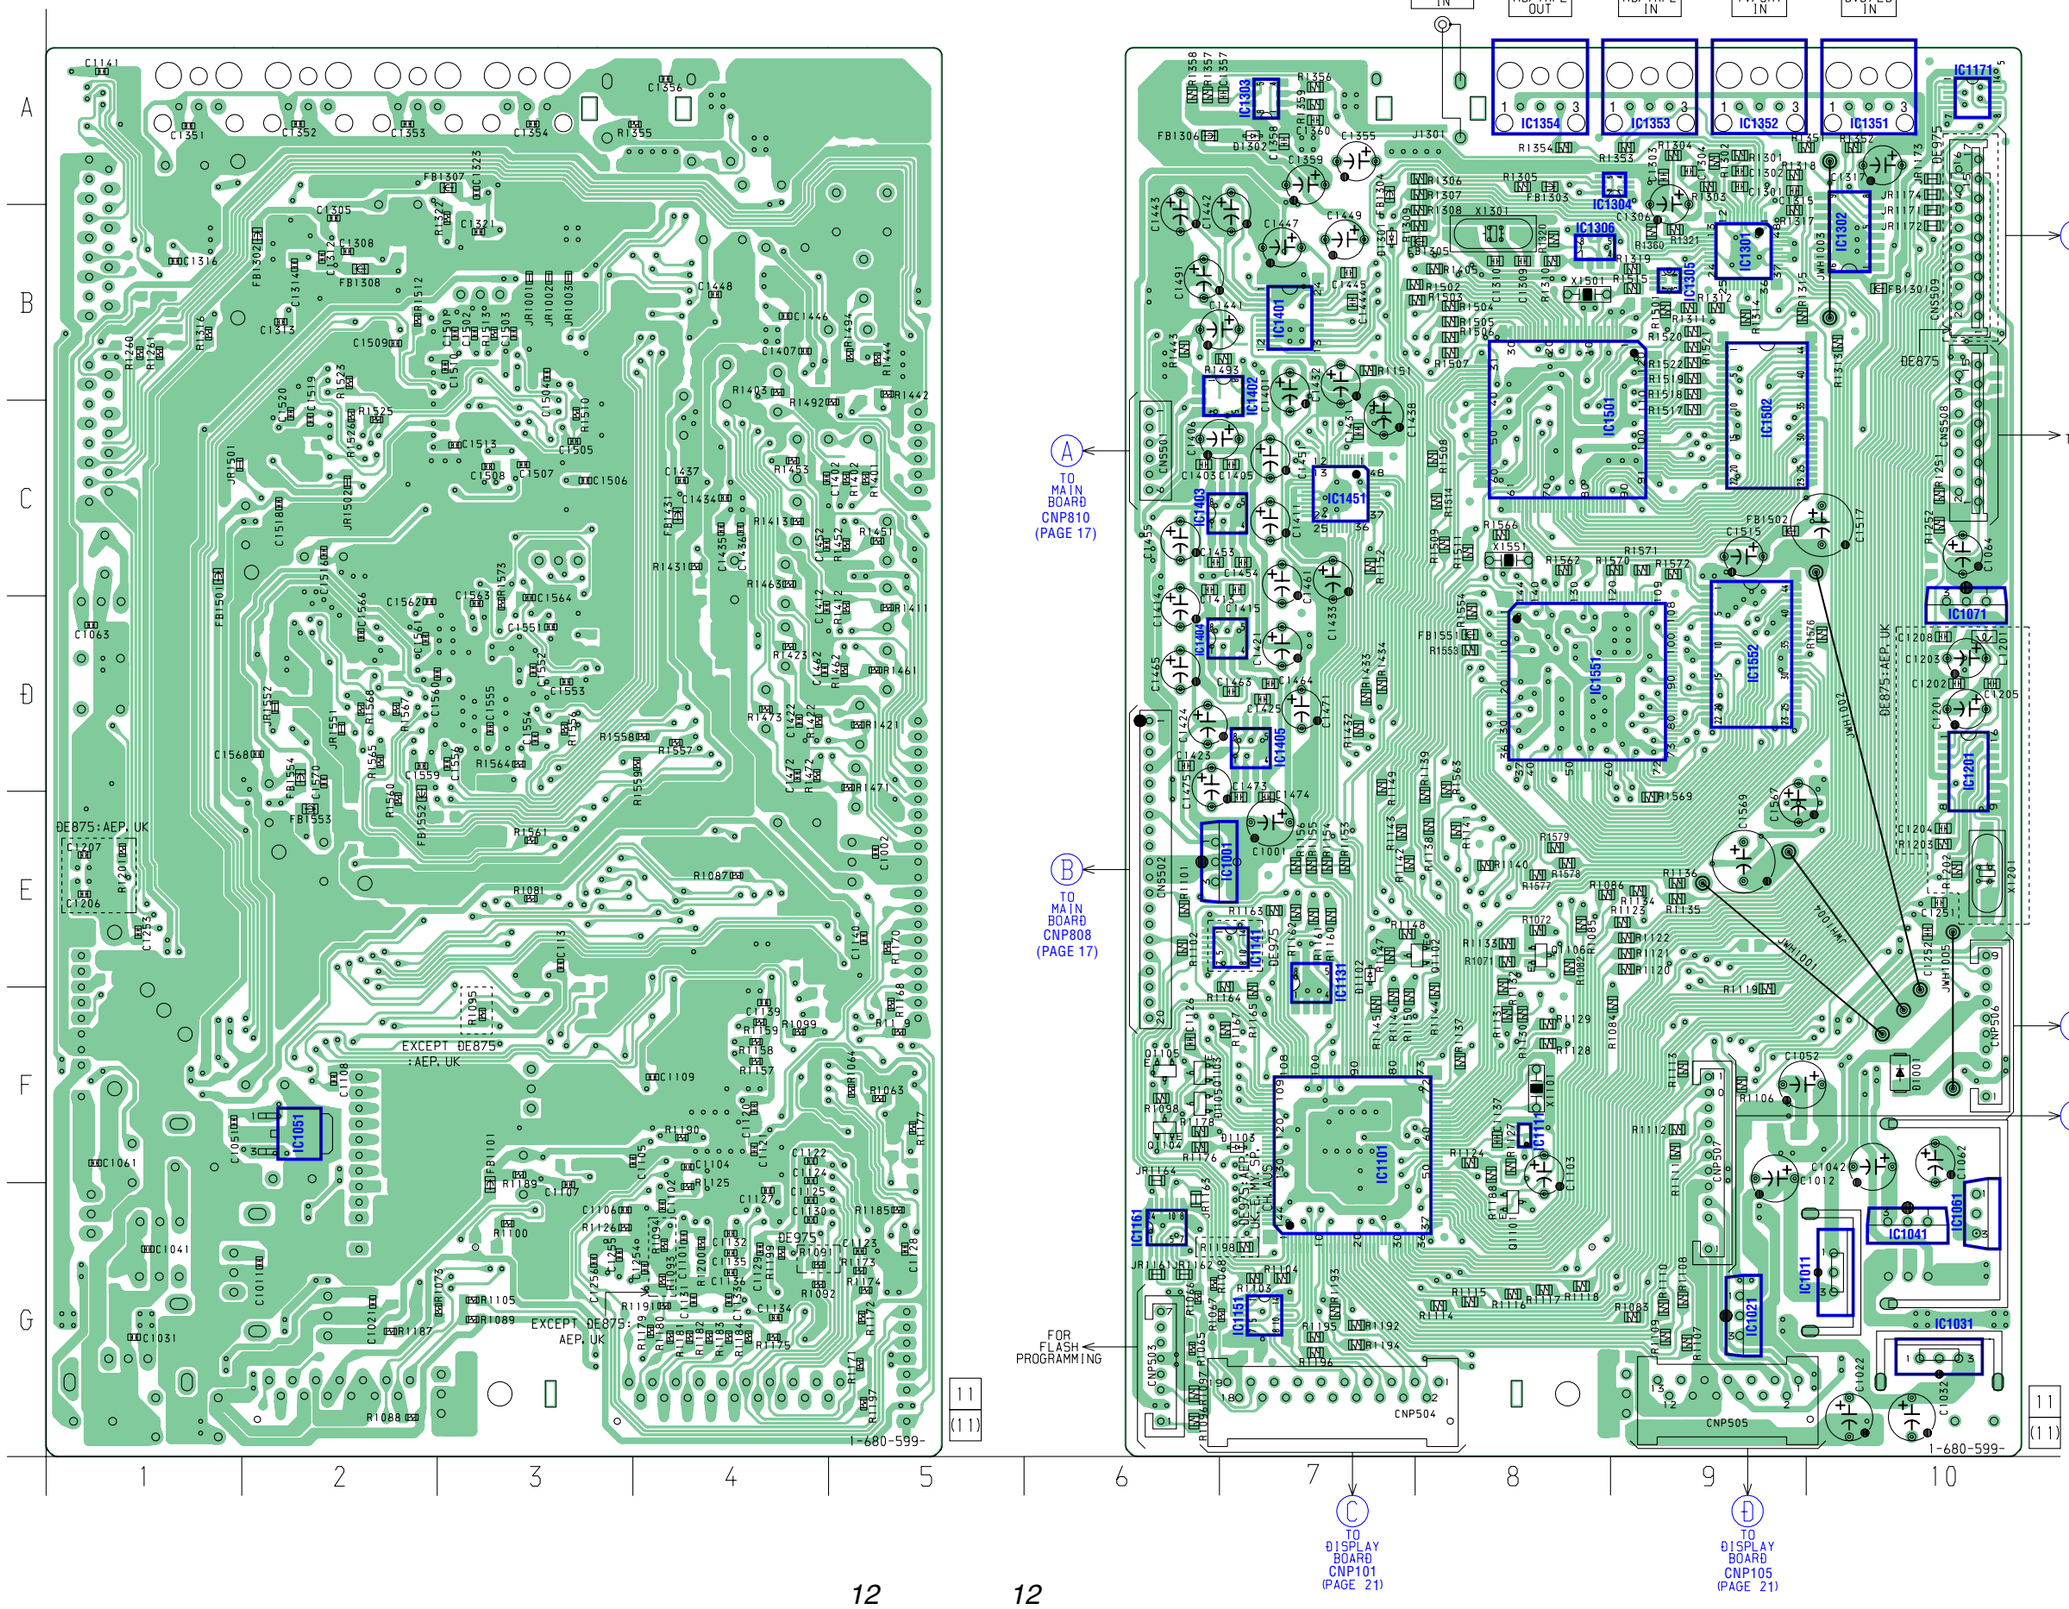

• **Semiconductor Location**

Ref.No.	Location
D1001	F-10
D1102	E-7
D1103	F-7
D1105	F-6
D1301	B-7
D1302	A-7
IC1001	E-7
IC1011	G-10
IC1021	G-9
IC1031	G-10
IC1041	G-10
IC1051	F-2
IC1061	G-10
IC1071	D-10
IC1101	F-7
IC1111	F-8
IC1131	E-7
IC1141	E-7
IC1151	G-7
IC1161	G-6
IC1171	A-10
IC1201	D-10
IC1301	B-9
IC1302	B-10
IC1303	A-7
IC1304	A-9
IC1305	B-9
IC1306	B-8
IC1351	A-10
IC1352	A-9
IC1353	A-9
IC1354	A-8
IC1401	B-7
IC1402	C-7
IC1403	C-7
IC1404	D-7
IC1405	D-7
IC1451	C-7
IC1501	C-8
IC1502	C-9
IC1551	D-8
IC1552	D-9
Q1101	G-8
Q1102	E-8
Q1103	F-6
Q1104	F-6
Q1105	F-6
Q1106	E-8

3-4. SCHEMATIC DIAGRAM – DIGITAL SECTION (1/4) –

• See page 9 for Waveform. • See page 29 for IC Block Diagrams.

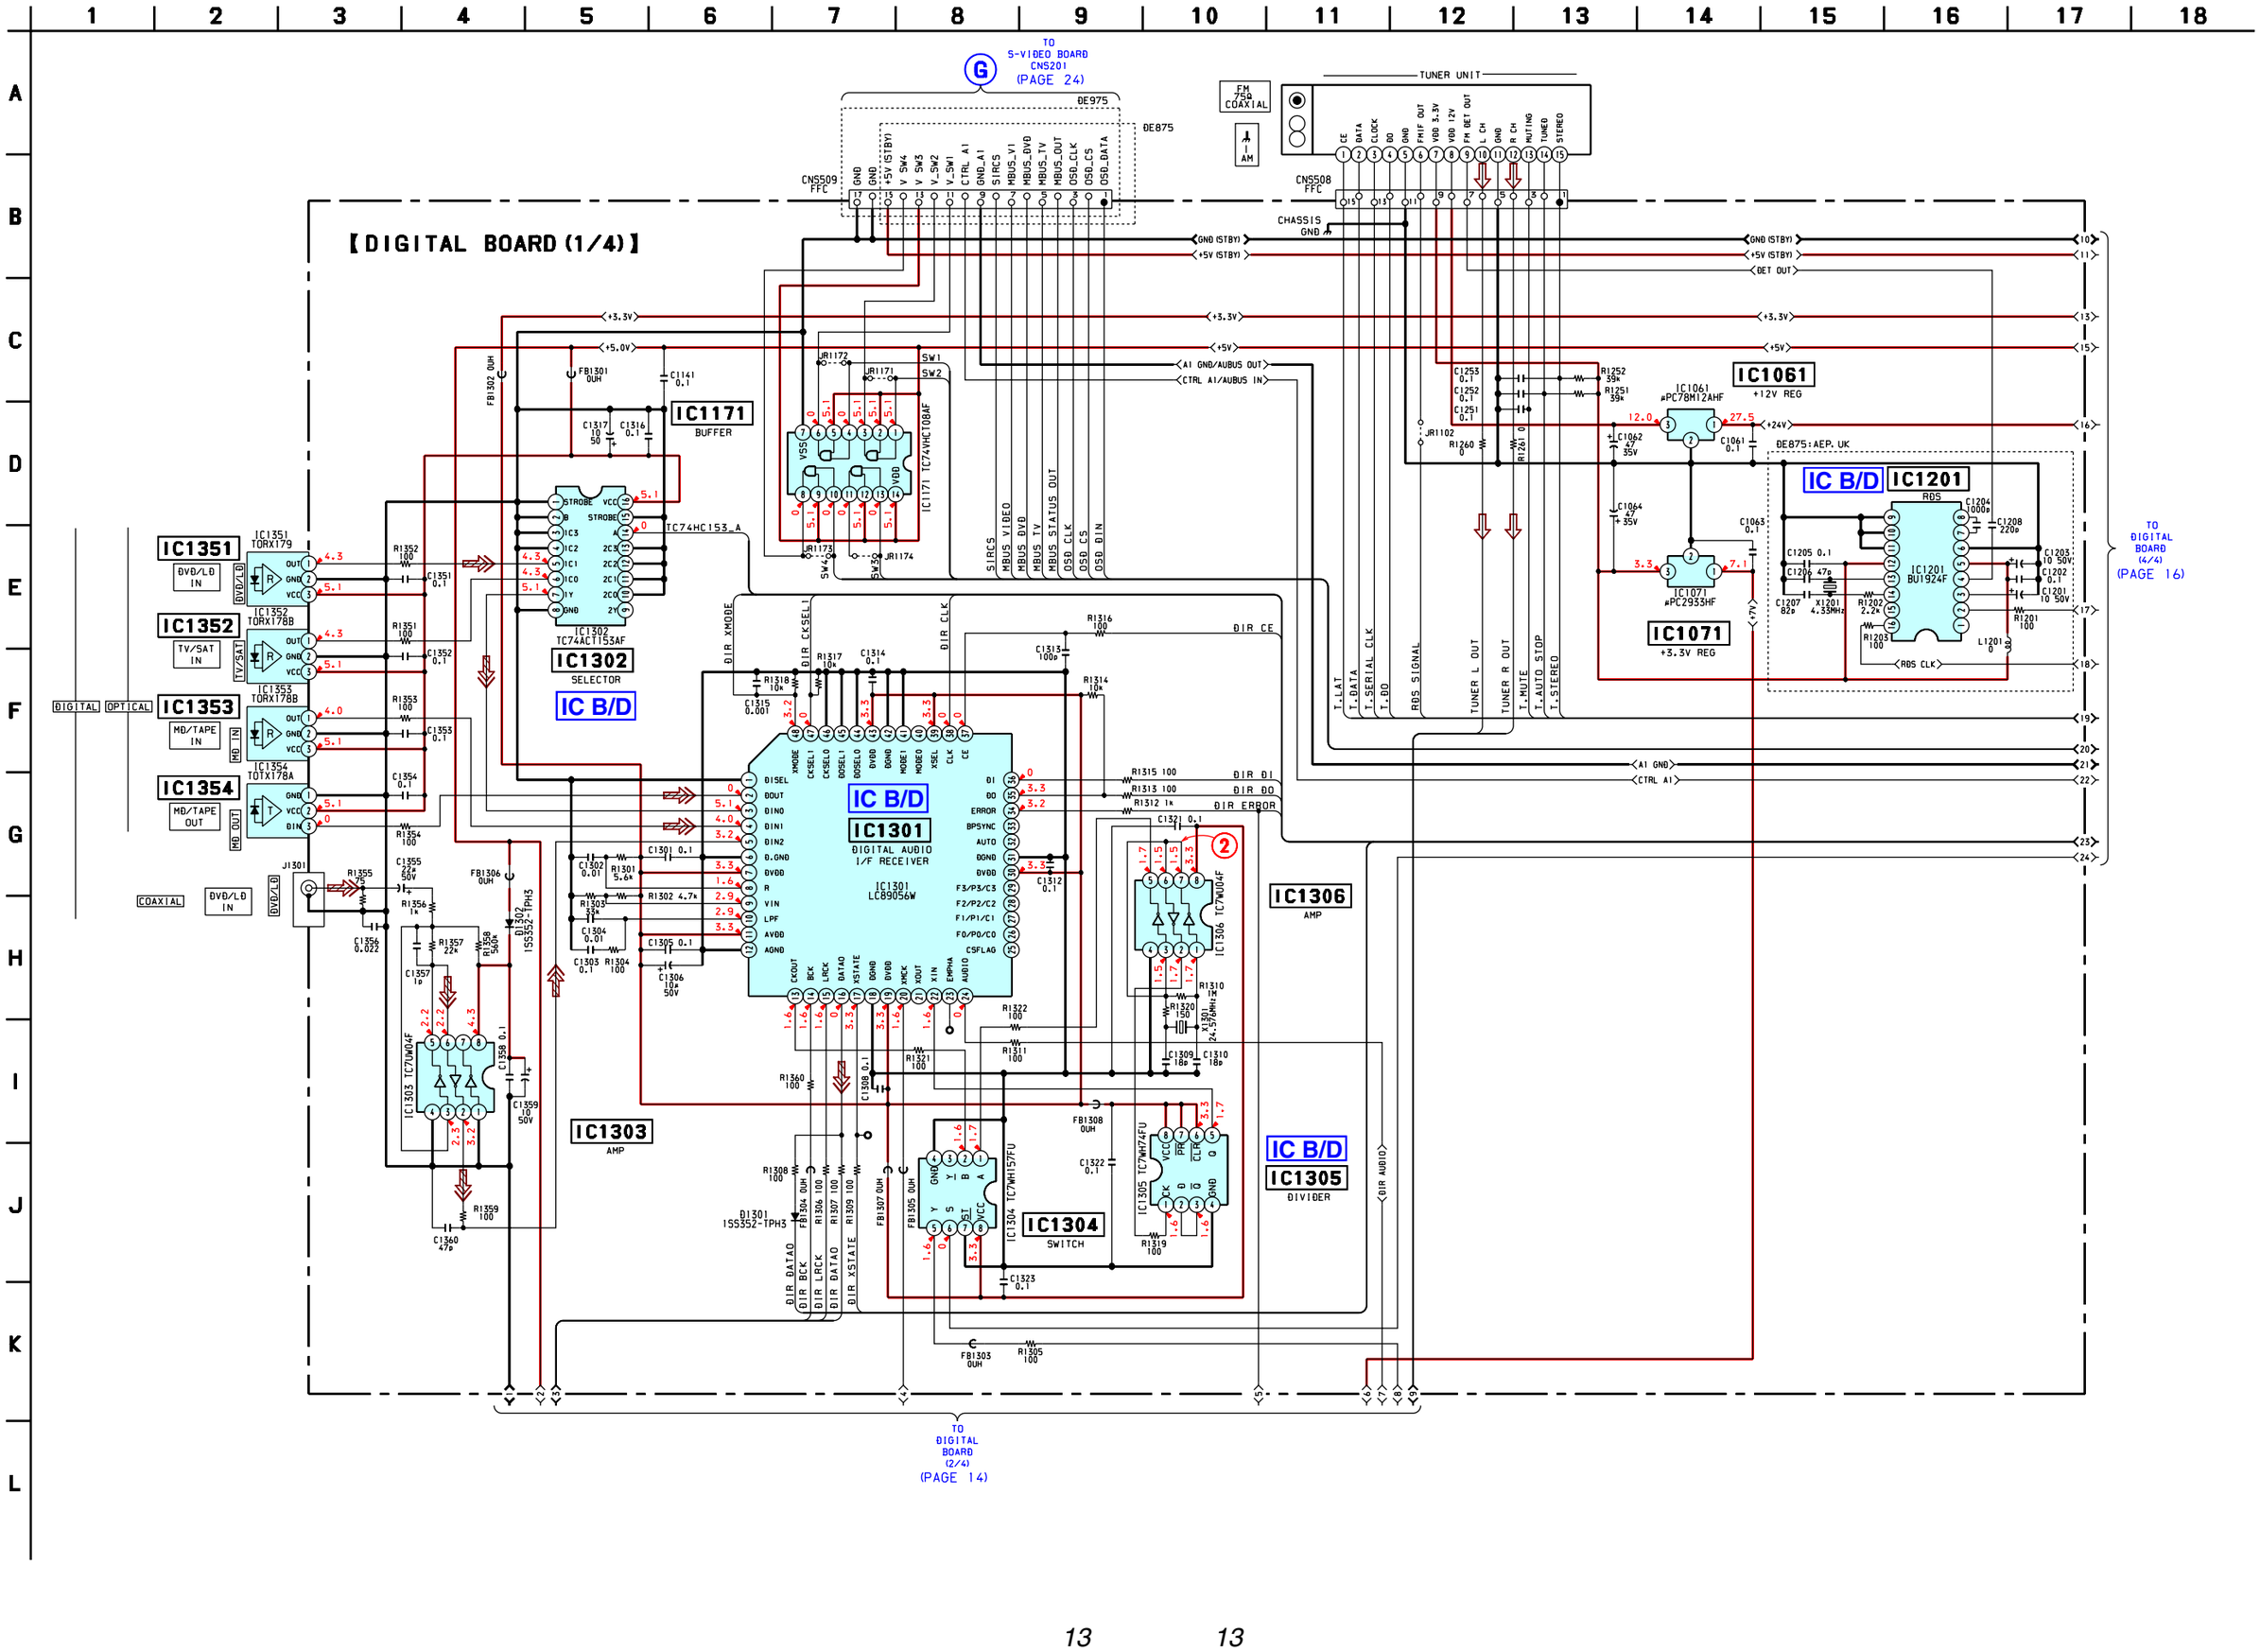

3-5. SCHEMATIC DIAGRAM – DIGITAL SECTION (2/4) –

• See page 9 for Waveform. • See page 30 for IC Block Diagrams.

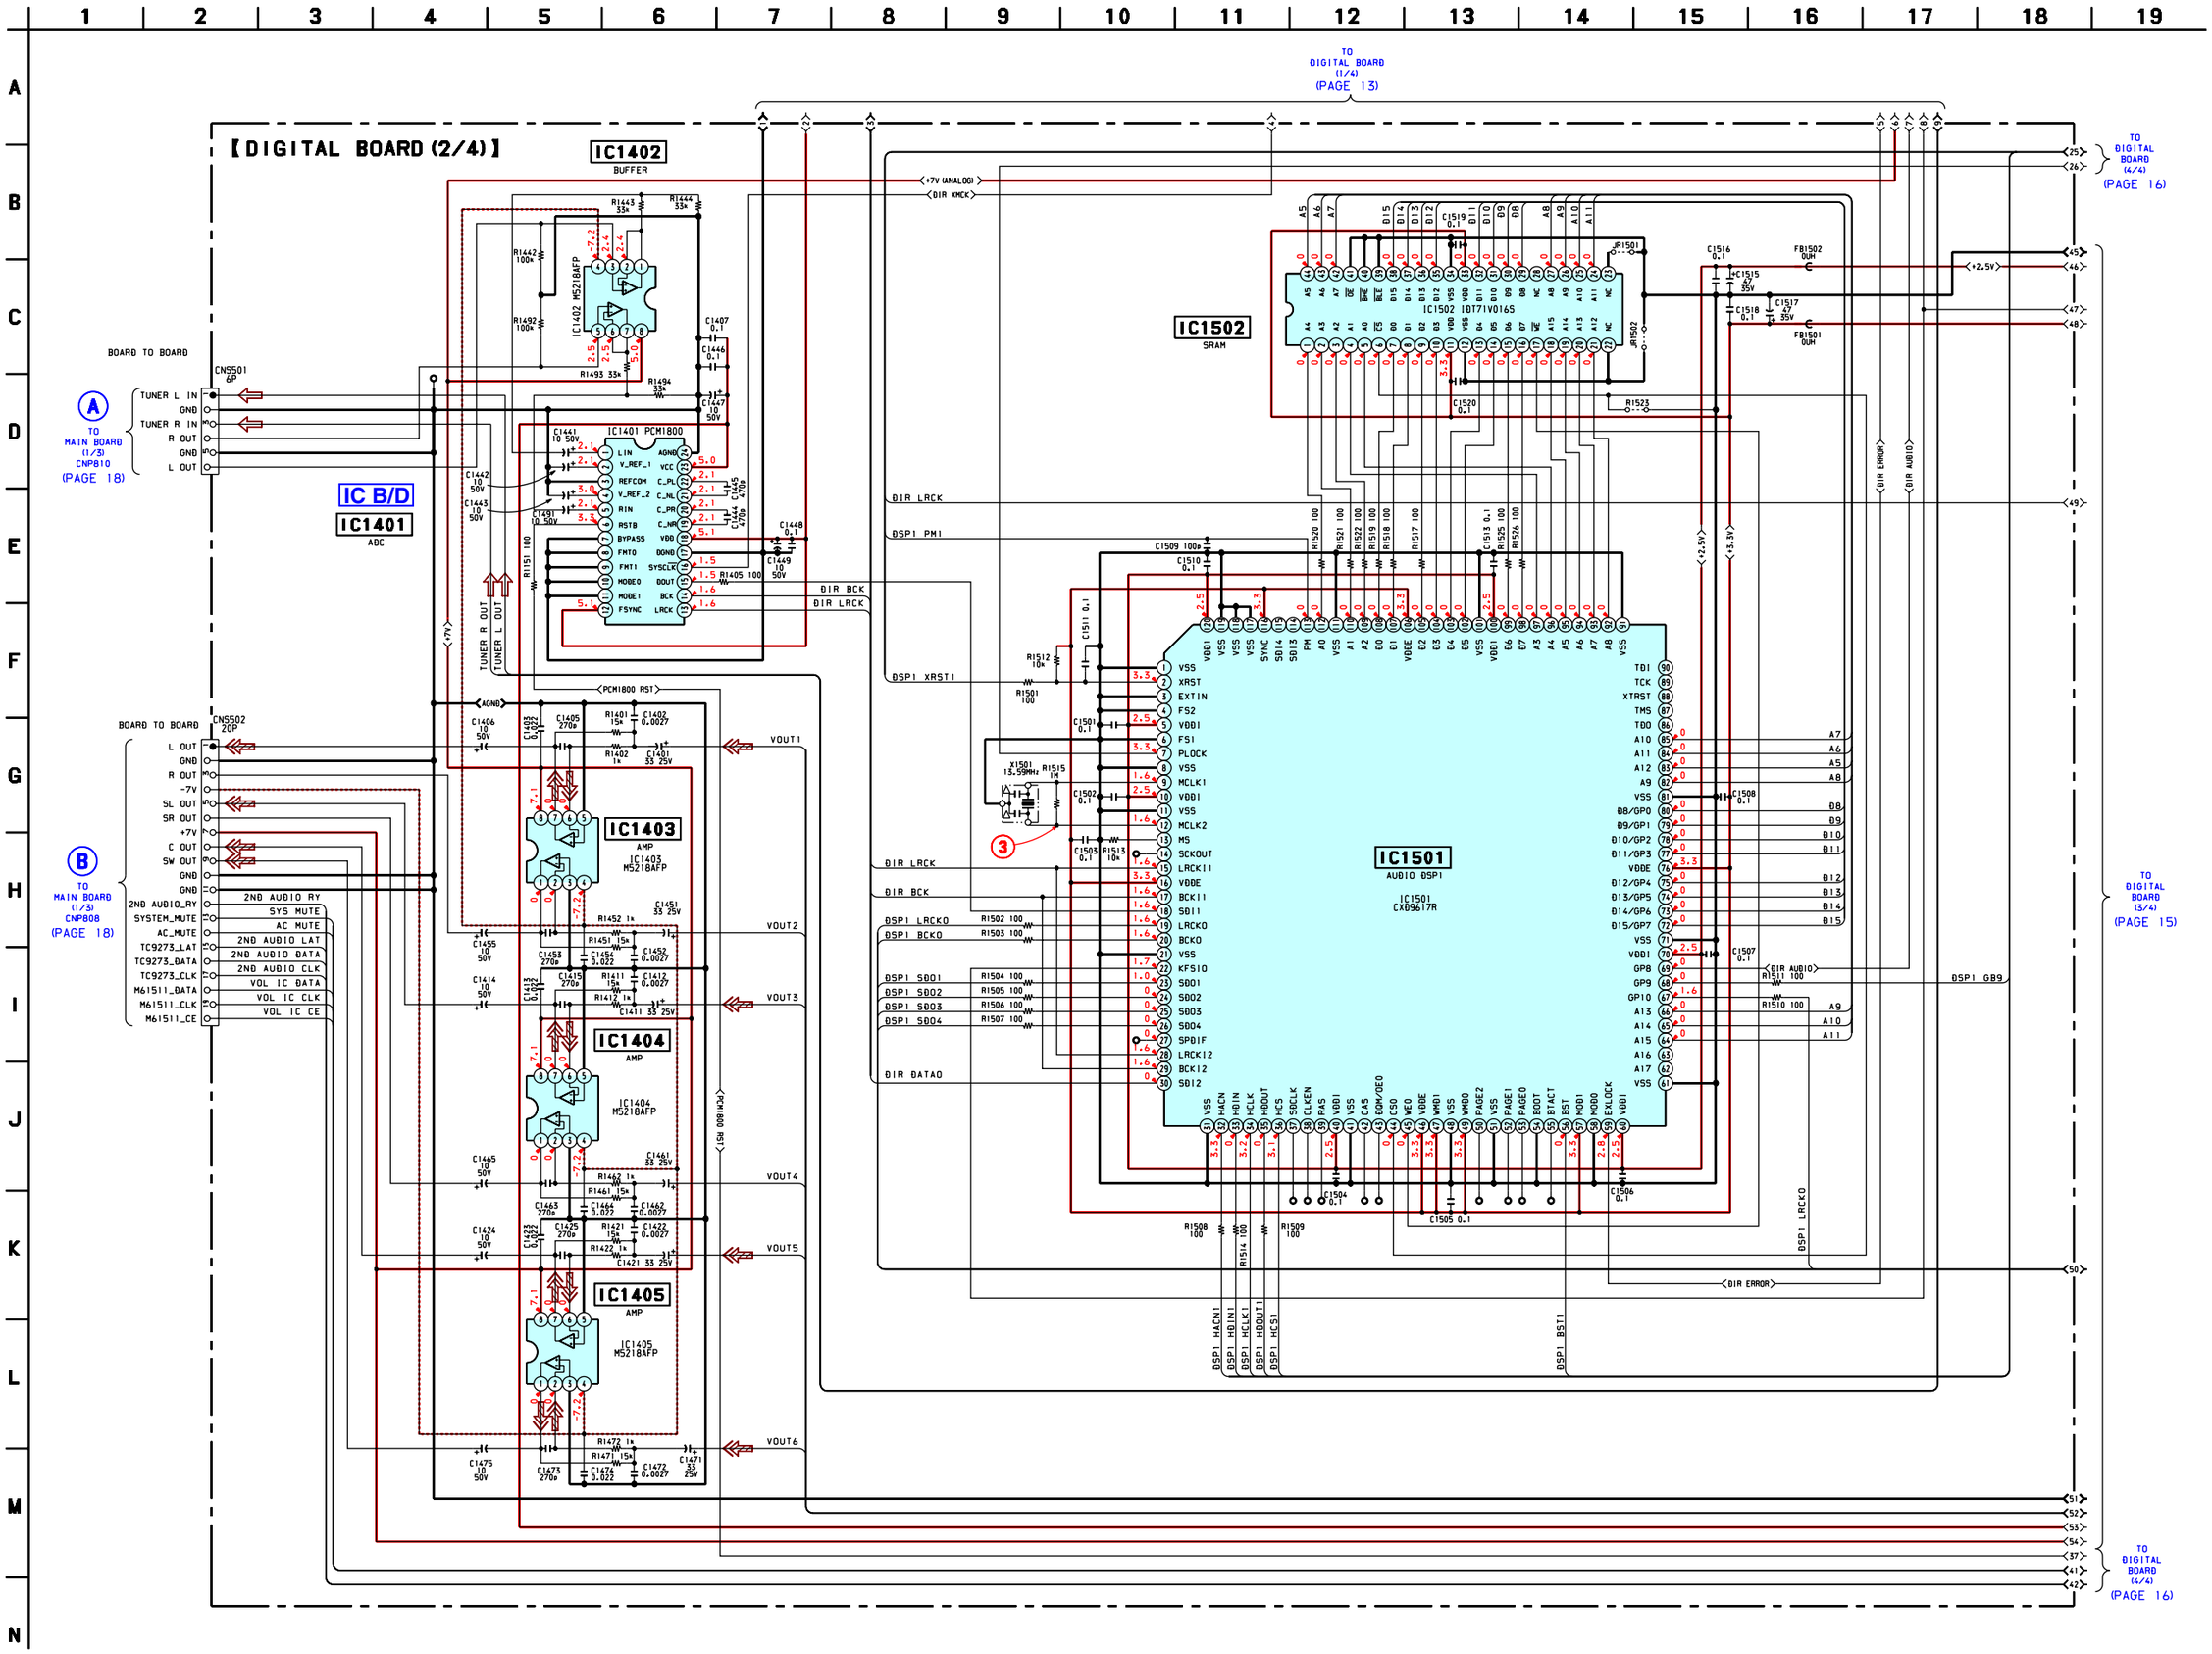

3-6. SCHEMATIC DIAGRAM – DIGITAL SECTION (3/4) –

• See page 30 for IC Block Diagrams.

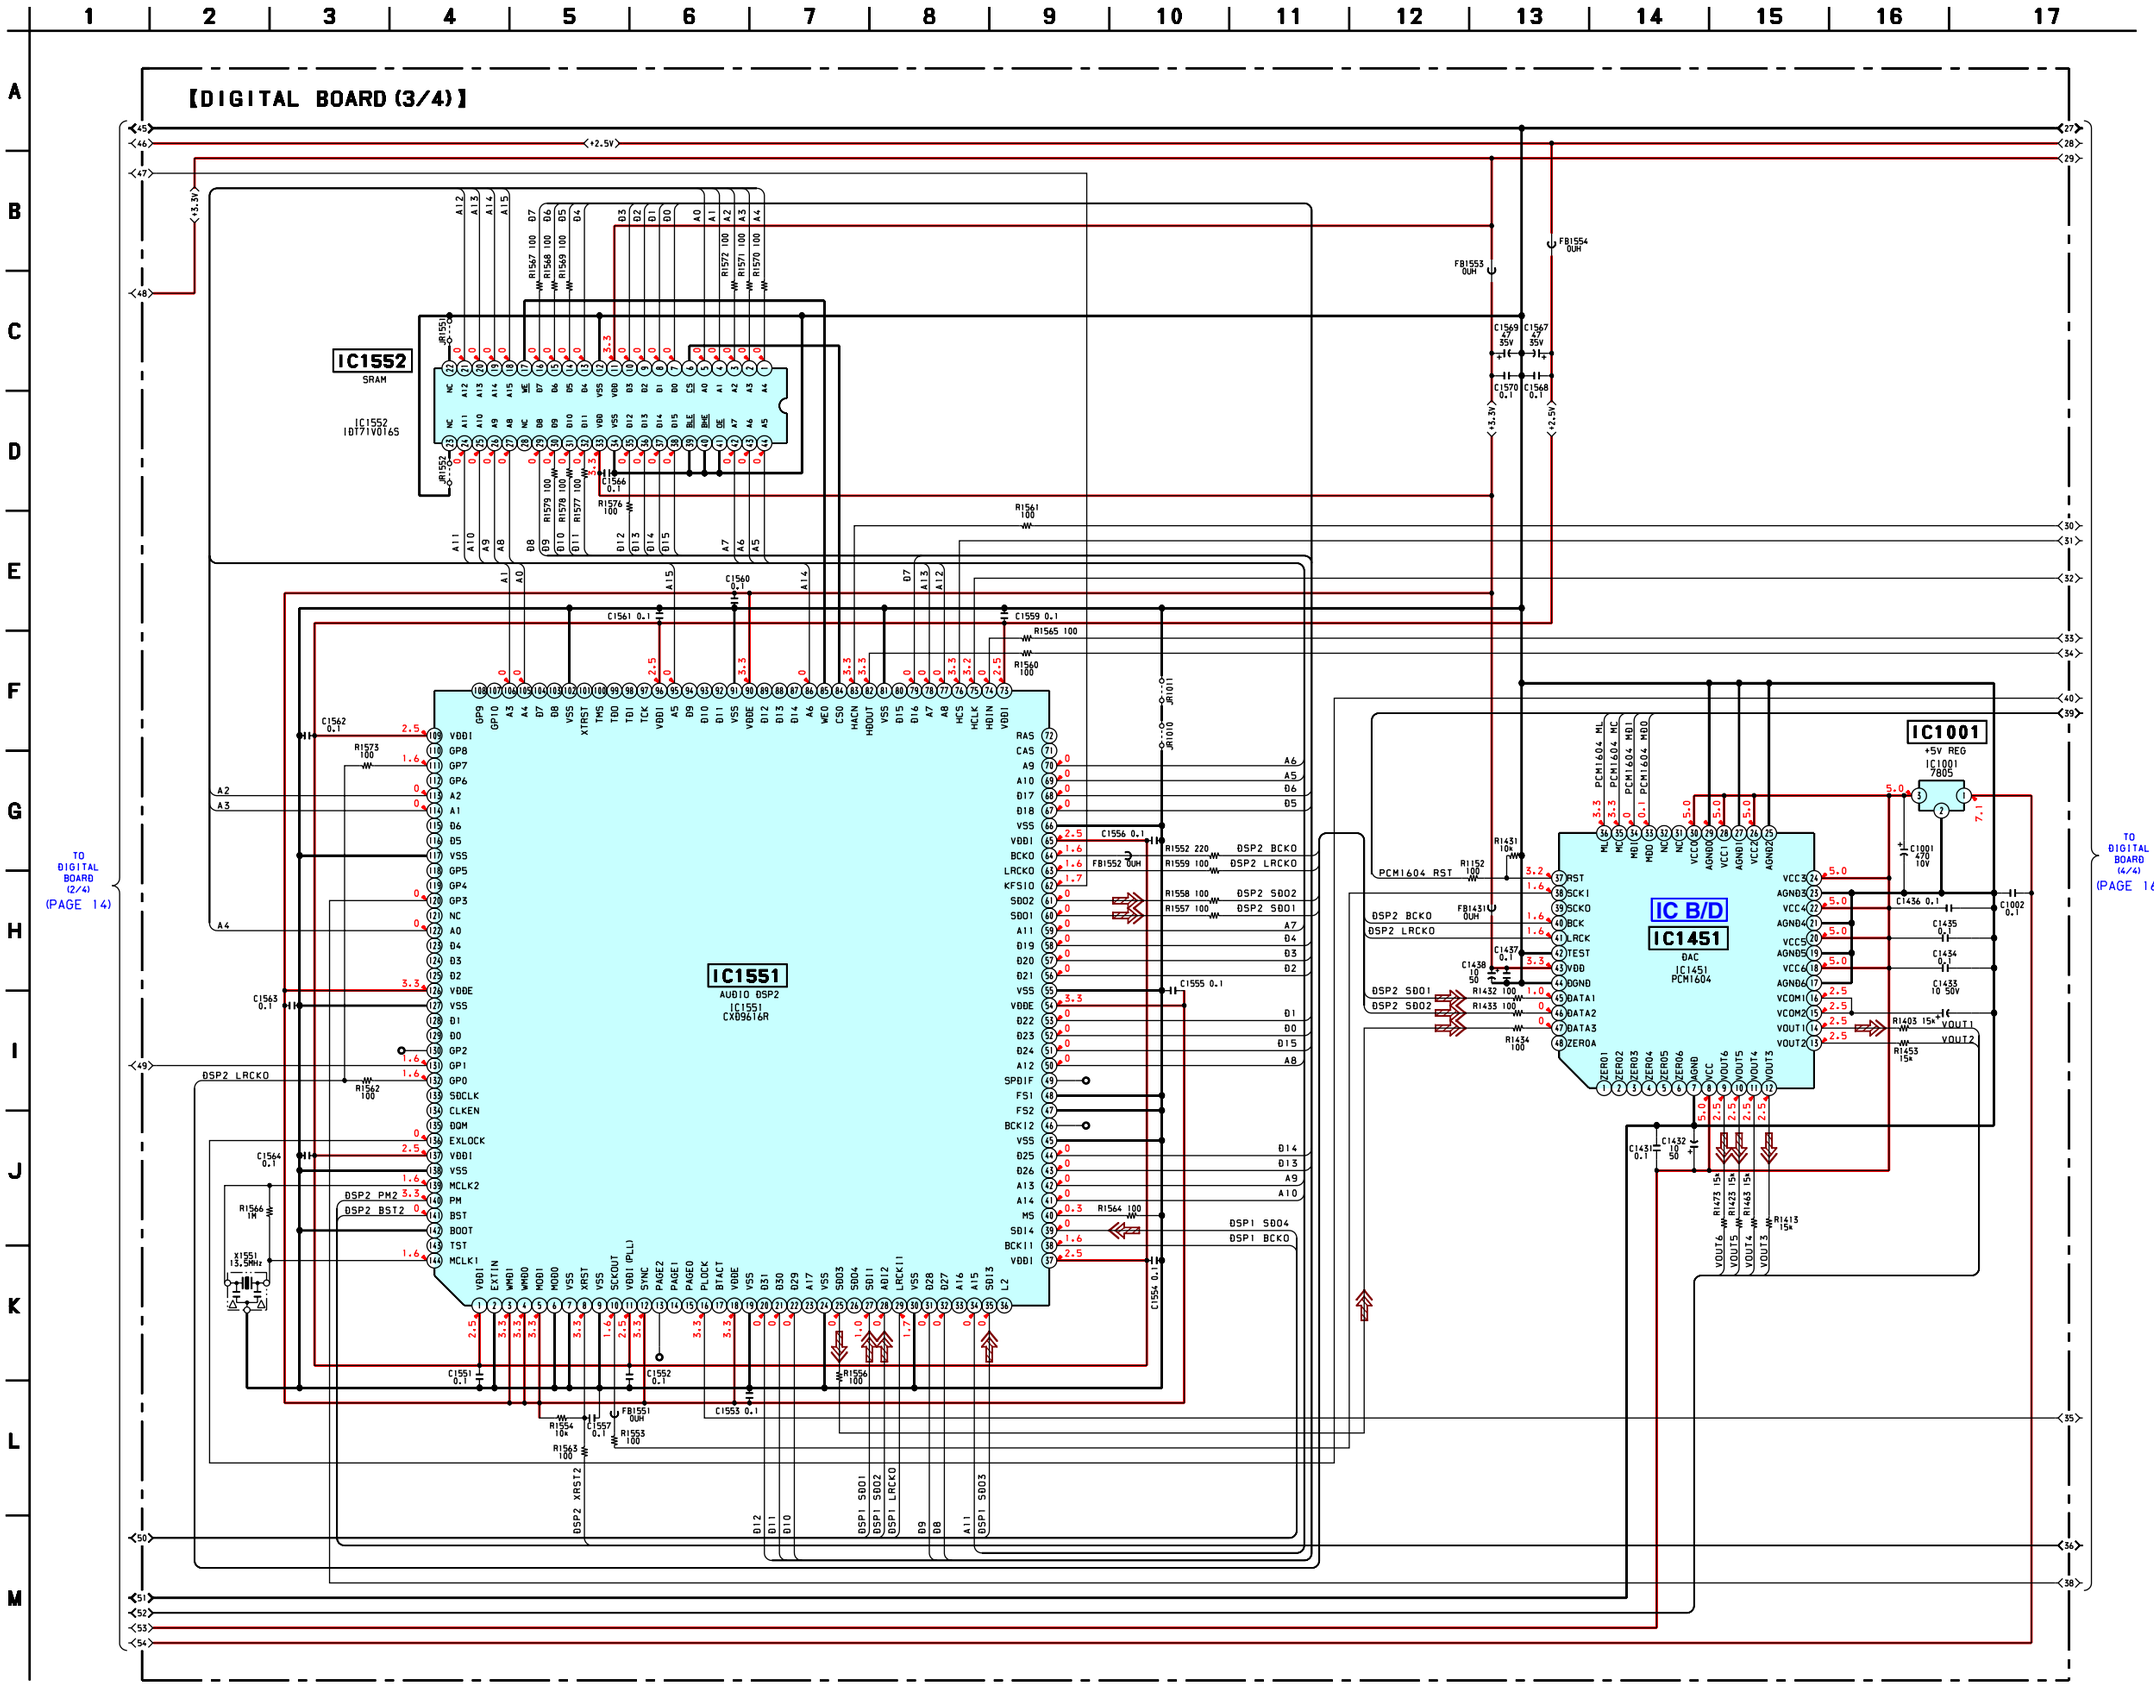

3-7. SCHEMATIC DIAGRAM – DIGITAL SECTION (4/4) –

• See page 9 for Waveform. • See page 33 for IC Pin Function.

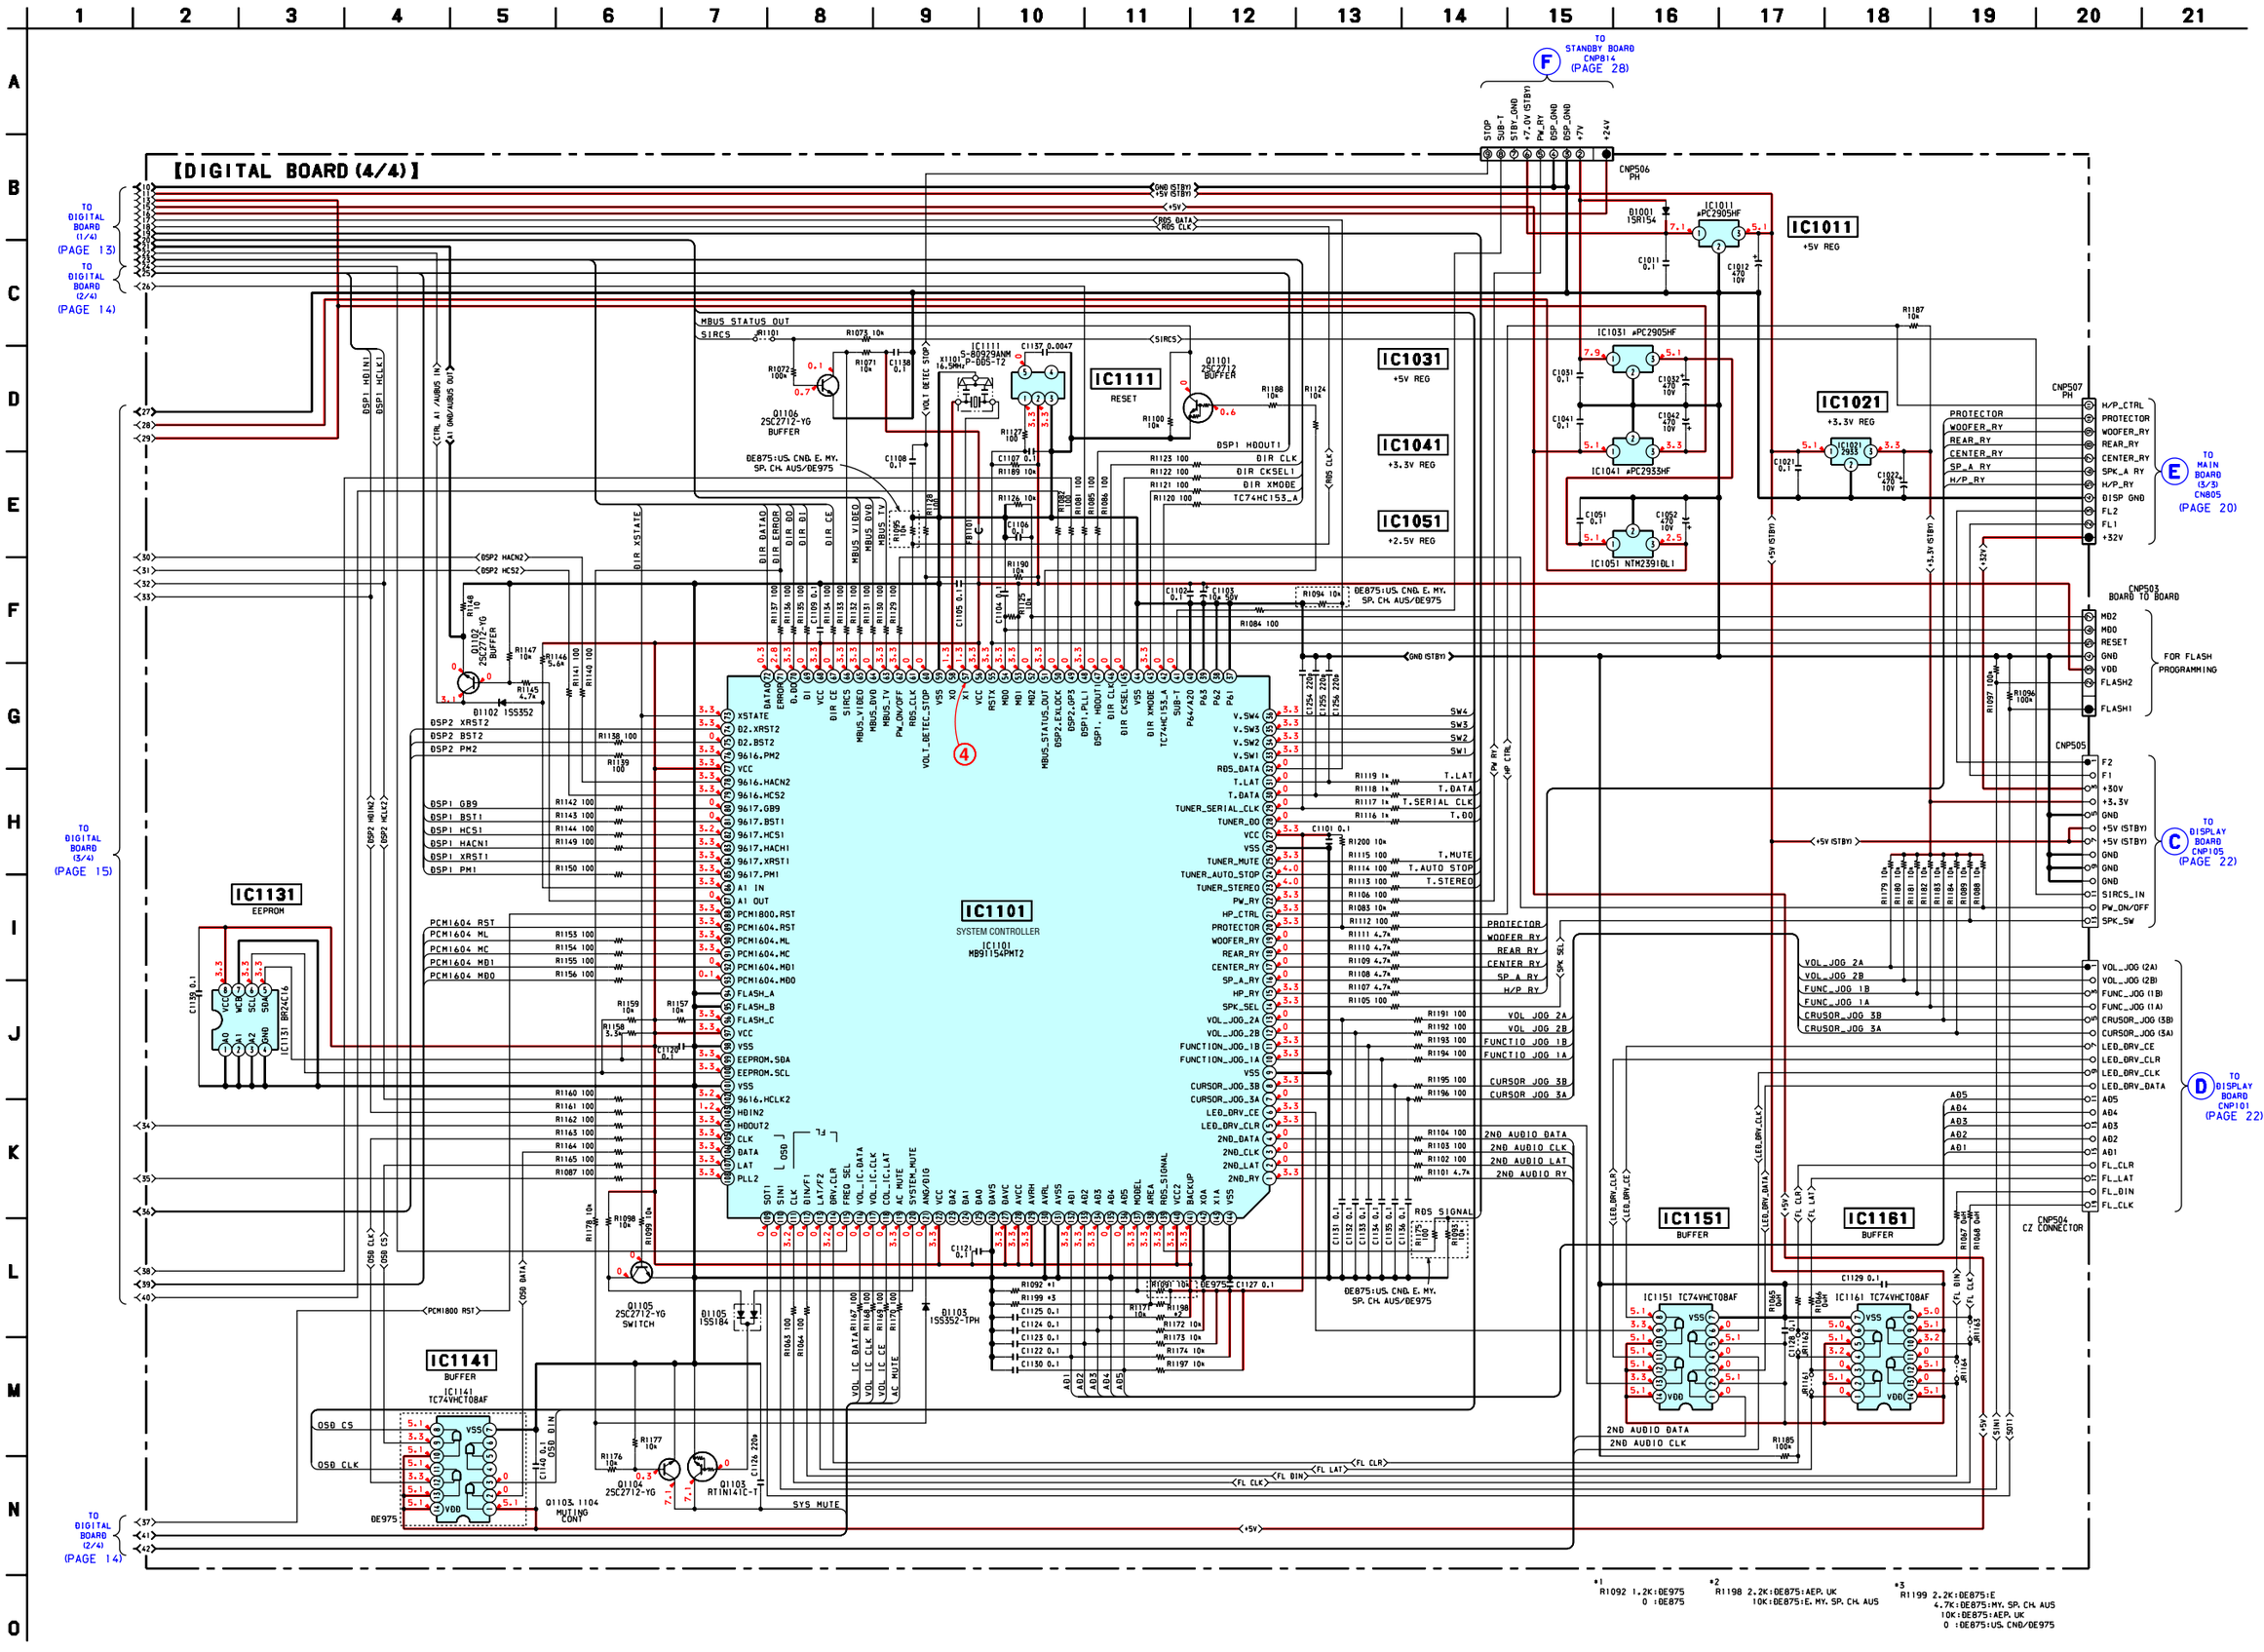

3-8. PRINTED WIRING BOARD – MAIN SECTION –

• See page 8 for Circuit Boards Location.

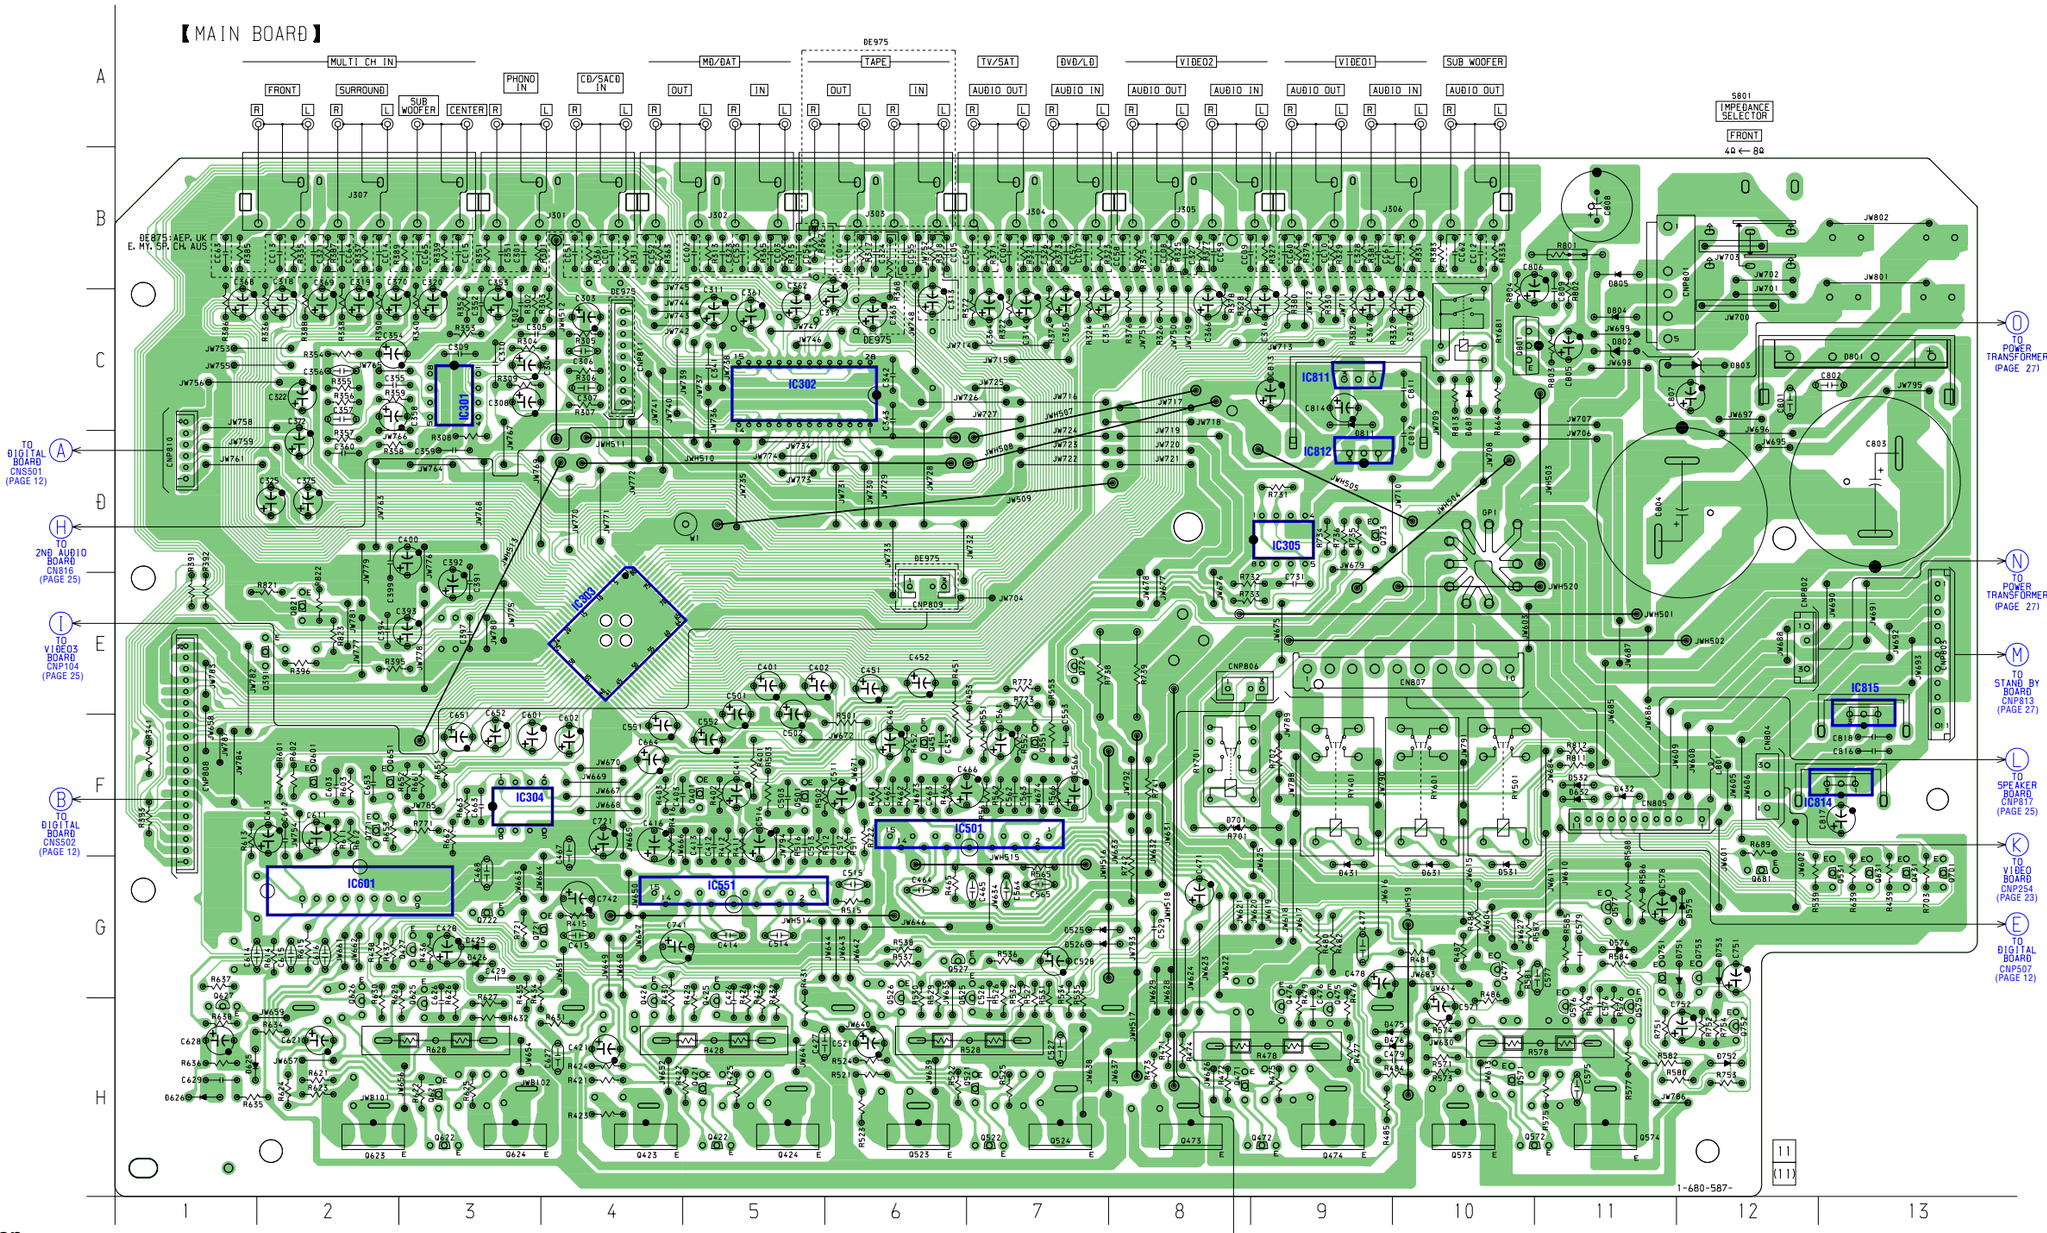

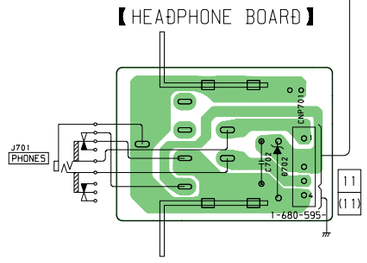

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D425	G-3	D753	G-12	Q391	E-2	Q522	H-7	Q625	H-3
D426	G-3	D801	C-13	Q401	F-5	Q523	H-6	Q626	H-2
D431	G-9	D802	C-11	Q421	H-5	Q524	H-7	Q627	H-1
D432	F-11	D803	C-12	Q422	H-5	Q525	H-7	Q631	G-13
D475	H-9	D804	C-11	Q423	H-4	Q526	H-6	Q651	F-2
D476	H-10	D805	B-11	Q424	H-5	Q527	G-6	Q681	G-12
D525	G-7	D811	D-9	Q425	H-5	Q531	G-13	Q701	G-13
D526	G-7			Q426	H-4	Q551	F-7	Q721	G-4
D531	G-10	IC301	C-3	Q427	G-3	Q571	H-10	Q722	G-3
D532	F-11	IC302	C-5	Q431	G-13	Q572	H-10	Q723	D-9
D575	G-12	IC303	E-4	Q451	F-6	Q573	H-10	Q724	E-7
D576	G-11	IC304	F-3	Q471	H-8	Q574	H-11	Q751	G-11
D625	H-2	IC305	D-9	Q472	H-9	Q575	H-11	Q752	H-12
D626	H-1	IC501	F-6	Q473	H-8	Q576	H-11	Q753	G-12
D631	G-10	IC551	G-5	Q474	H-9	Q577	G-11	Q771	F-2
D632	F-11	IC601	G-2	Q475	H-9	Q601	F-2	Q801	C-10
D681	C-10	IC811	C-9	Q476	H-9	Q621	H-3	Q821	E-2
D701	F-8	IC812	D-9	Q477	G-10	Q622	H-3		
D751	G-12	IC814	F-13	Q501	F-5	Q623	H-2		
D752	H-12	IC815	E-13	Q521	H-7	Q624	H-3		

3-9. SCHEMATIC DIAGRAM – MAIN SECTION (1/3) –

• See page 31 for IC Block Diagrams.

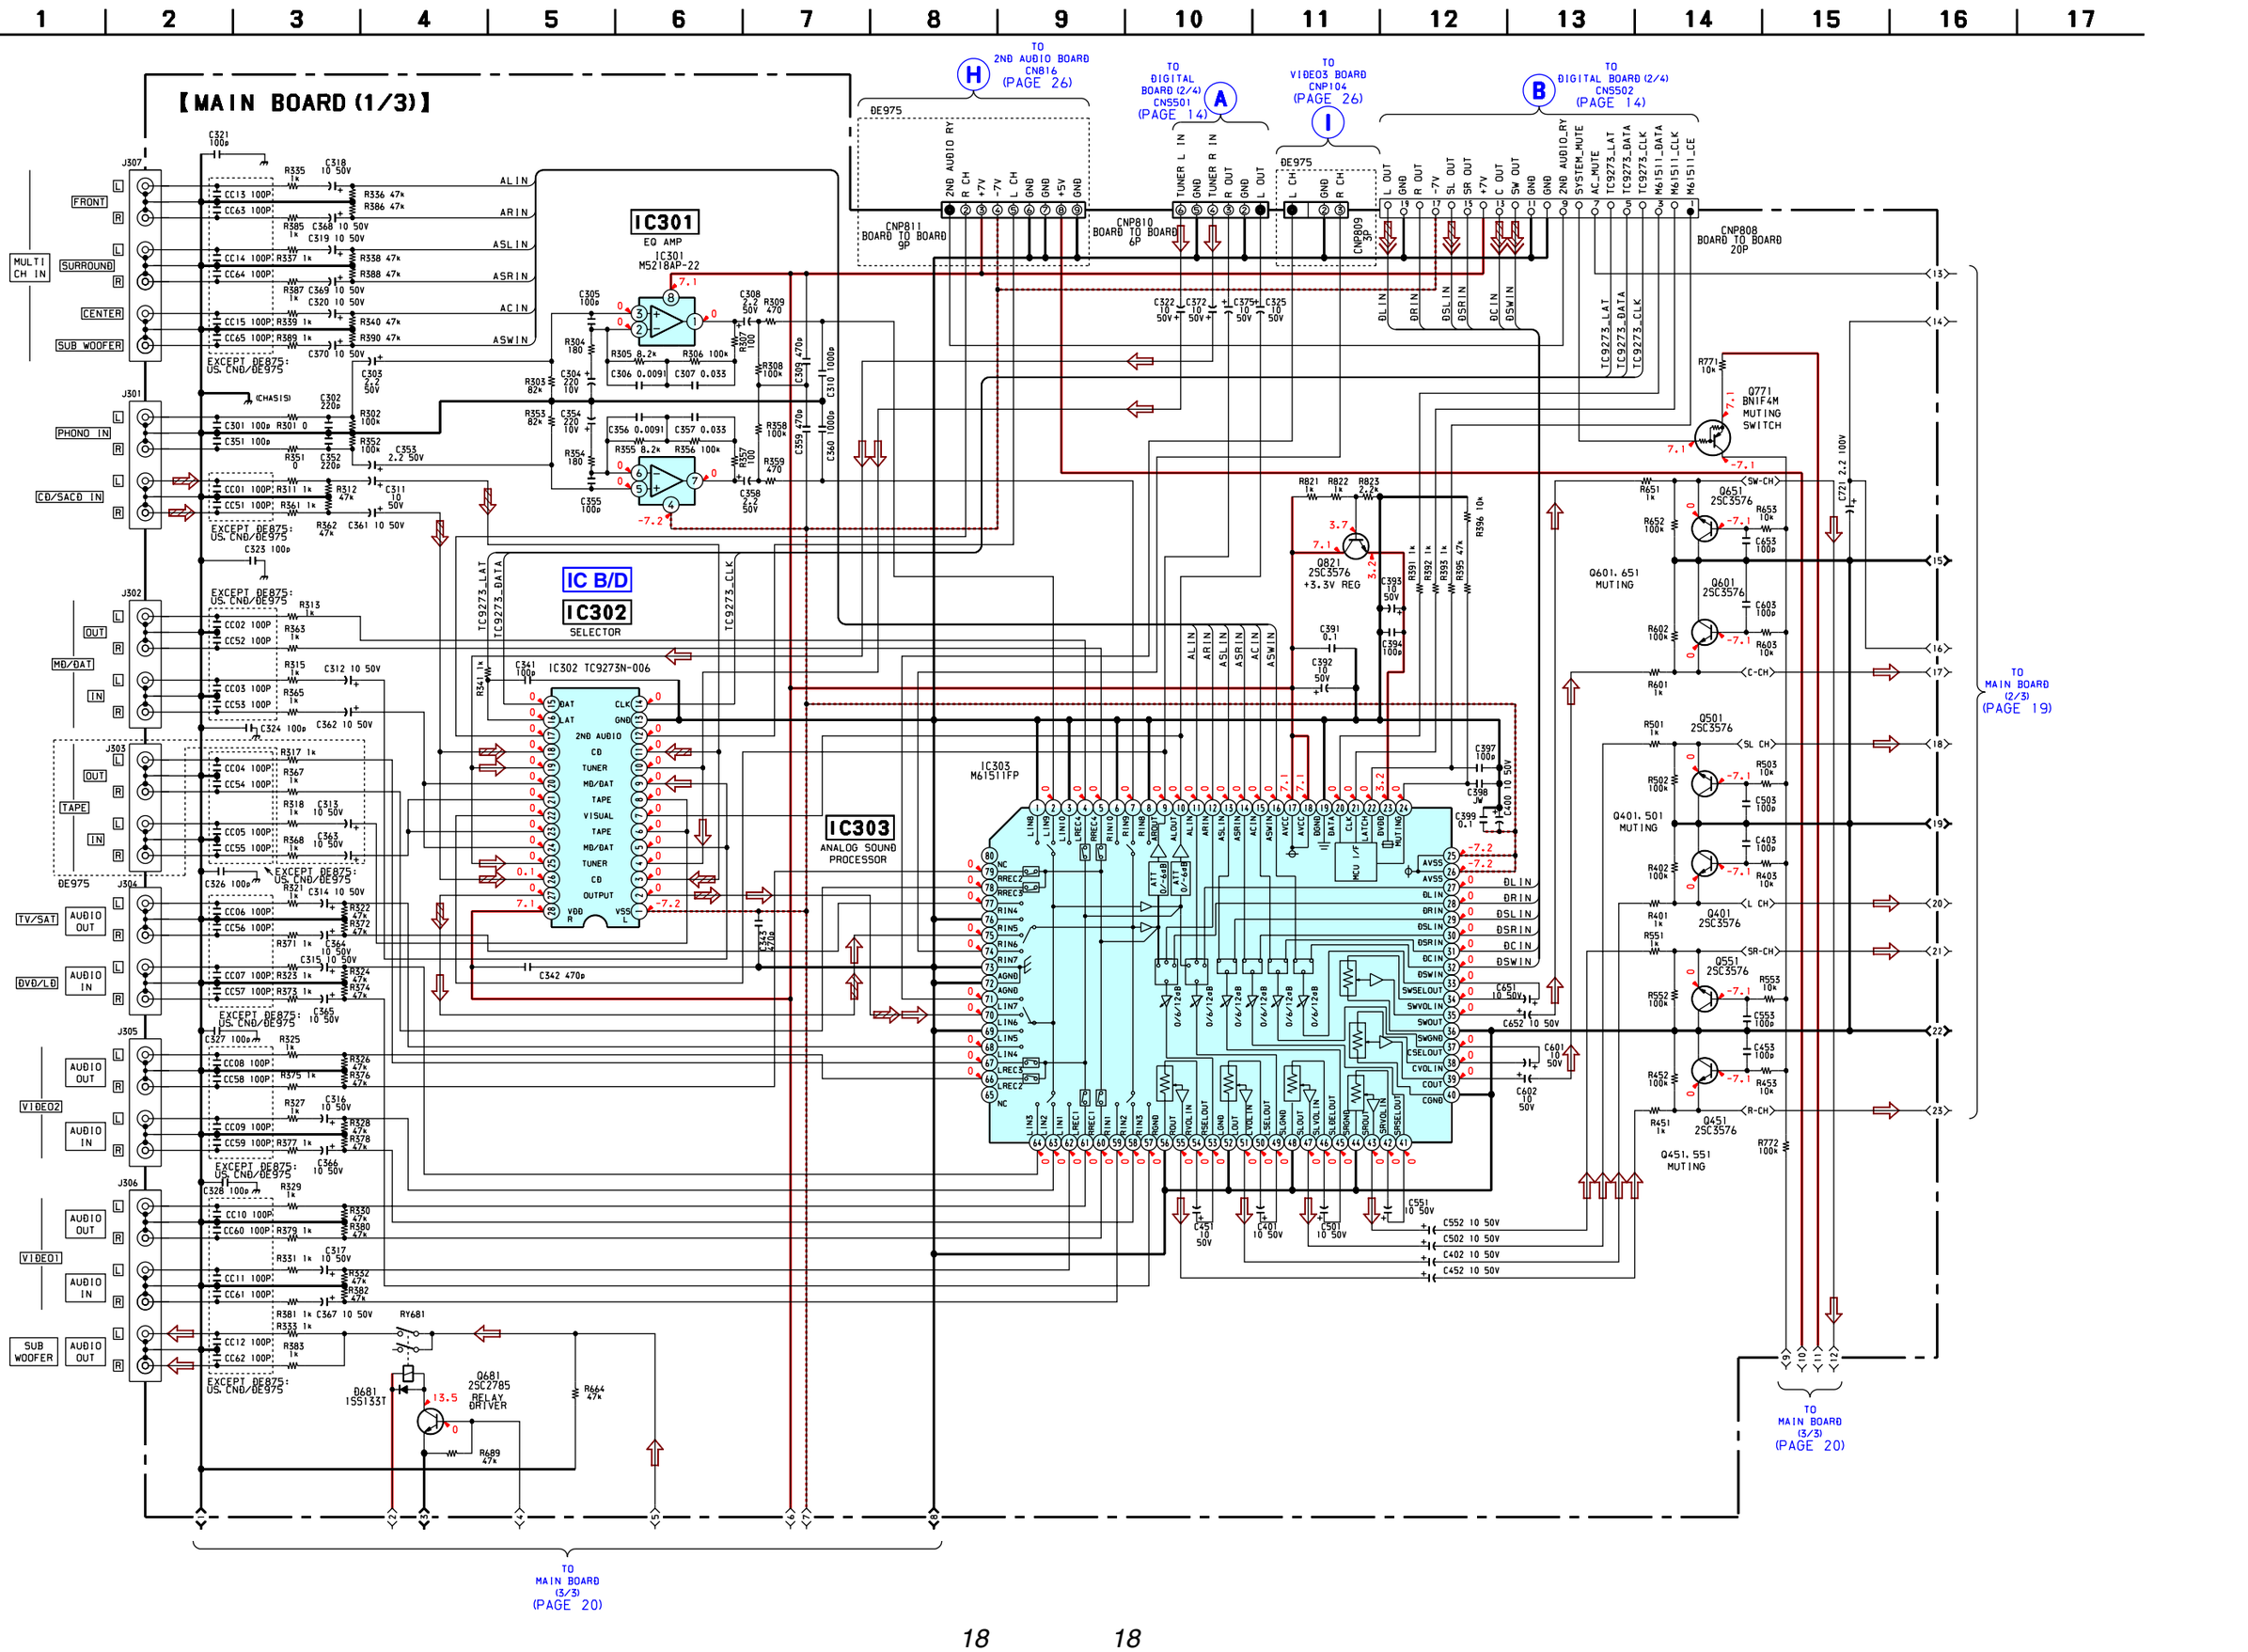

3-10. SCHEMATIC DIAGRAM – MAIN SECTION (2/3) – • See page 31 for IC Block Diagrams.

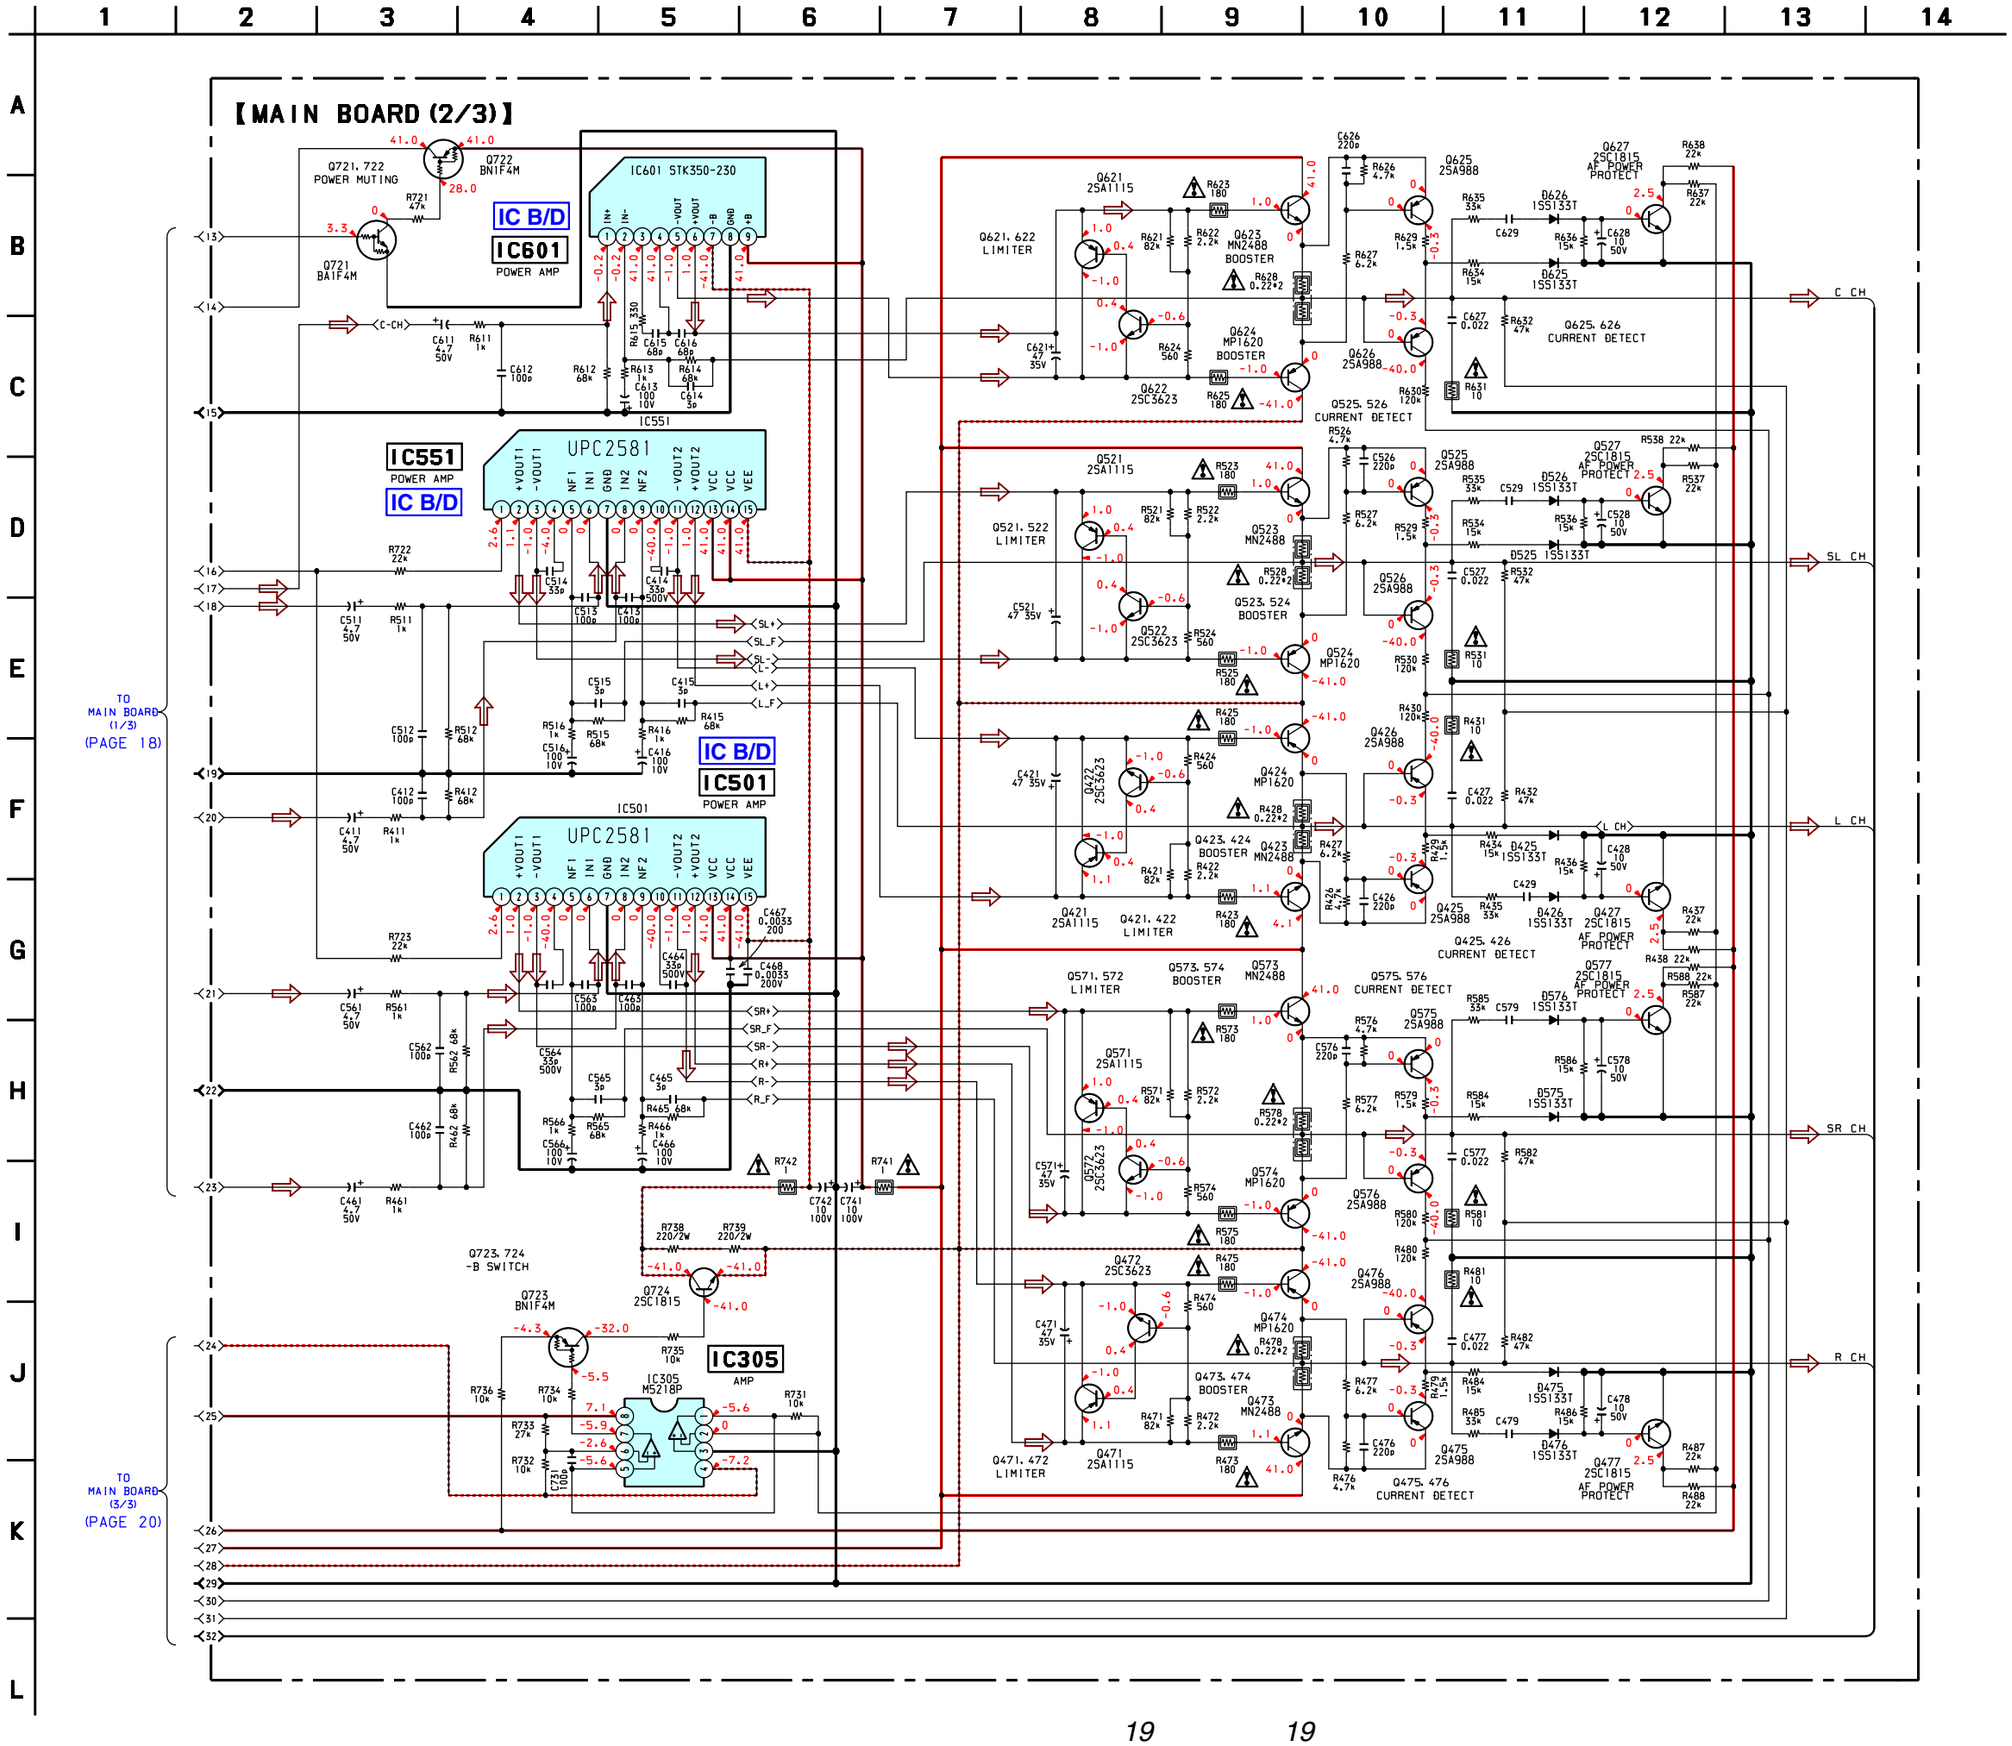

3-11. SCHEMATIC DIAGRAM – MAIN SECTION (3/3) –

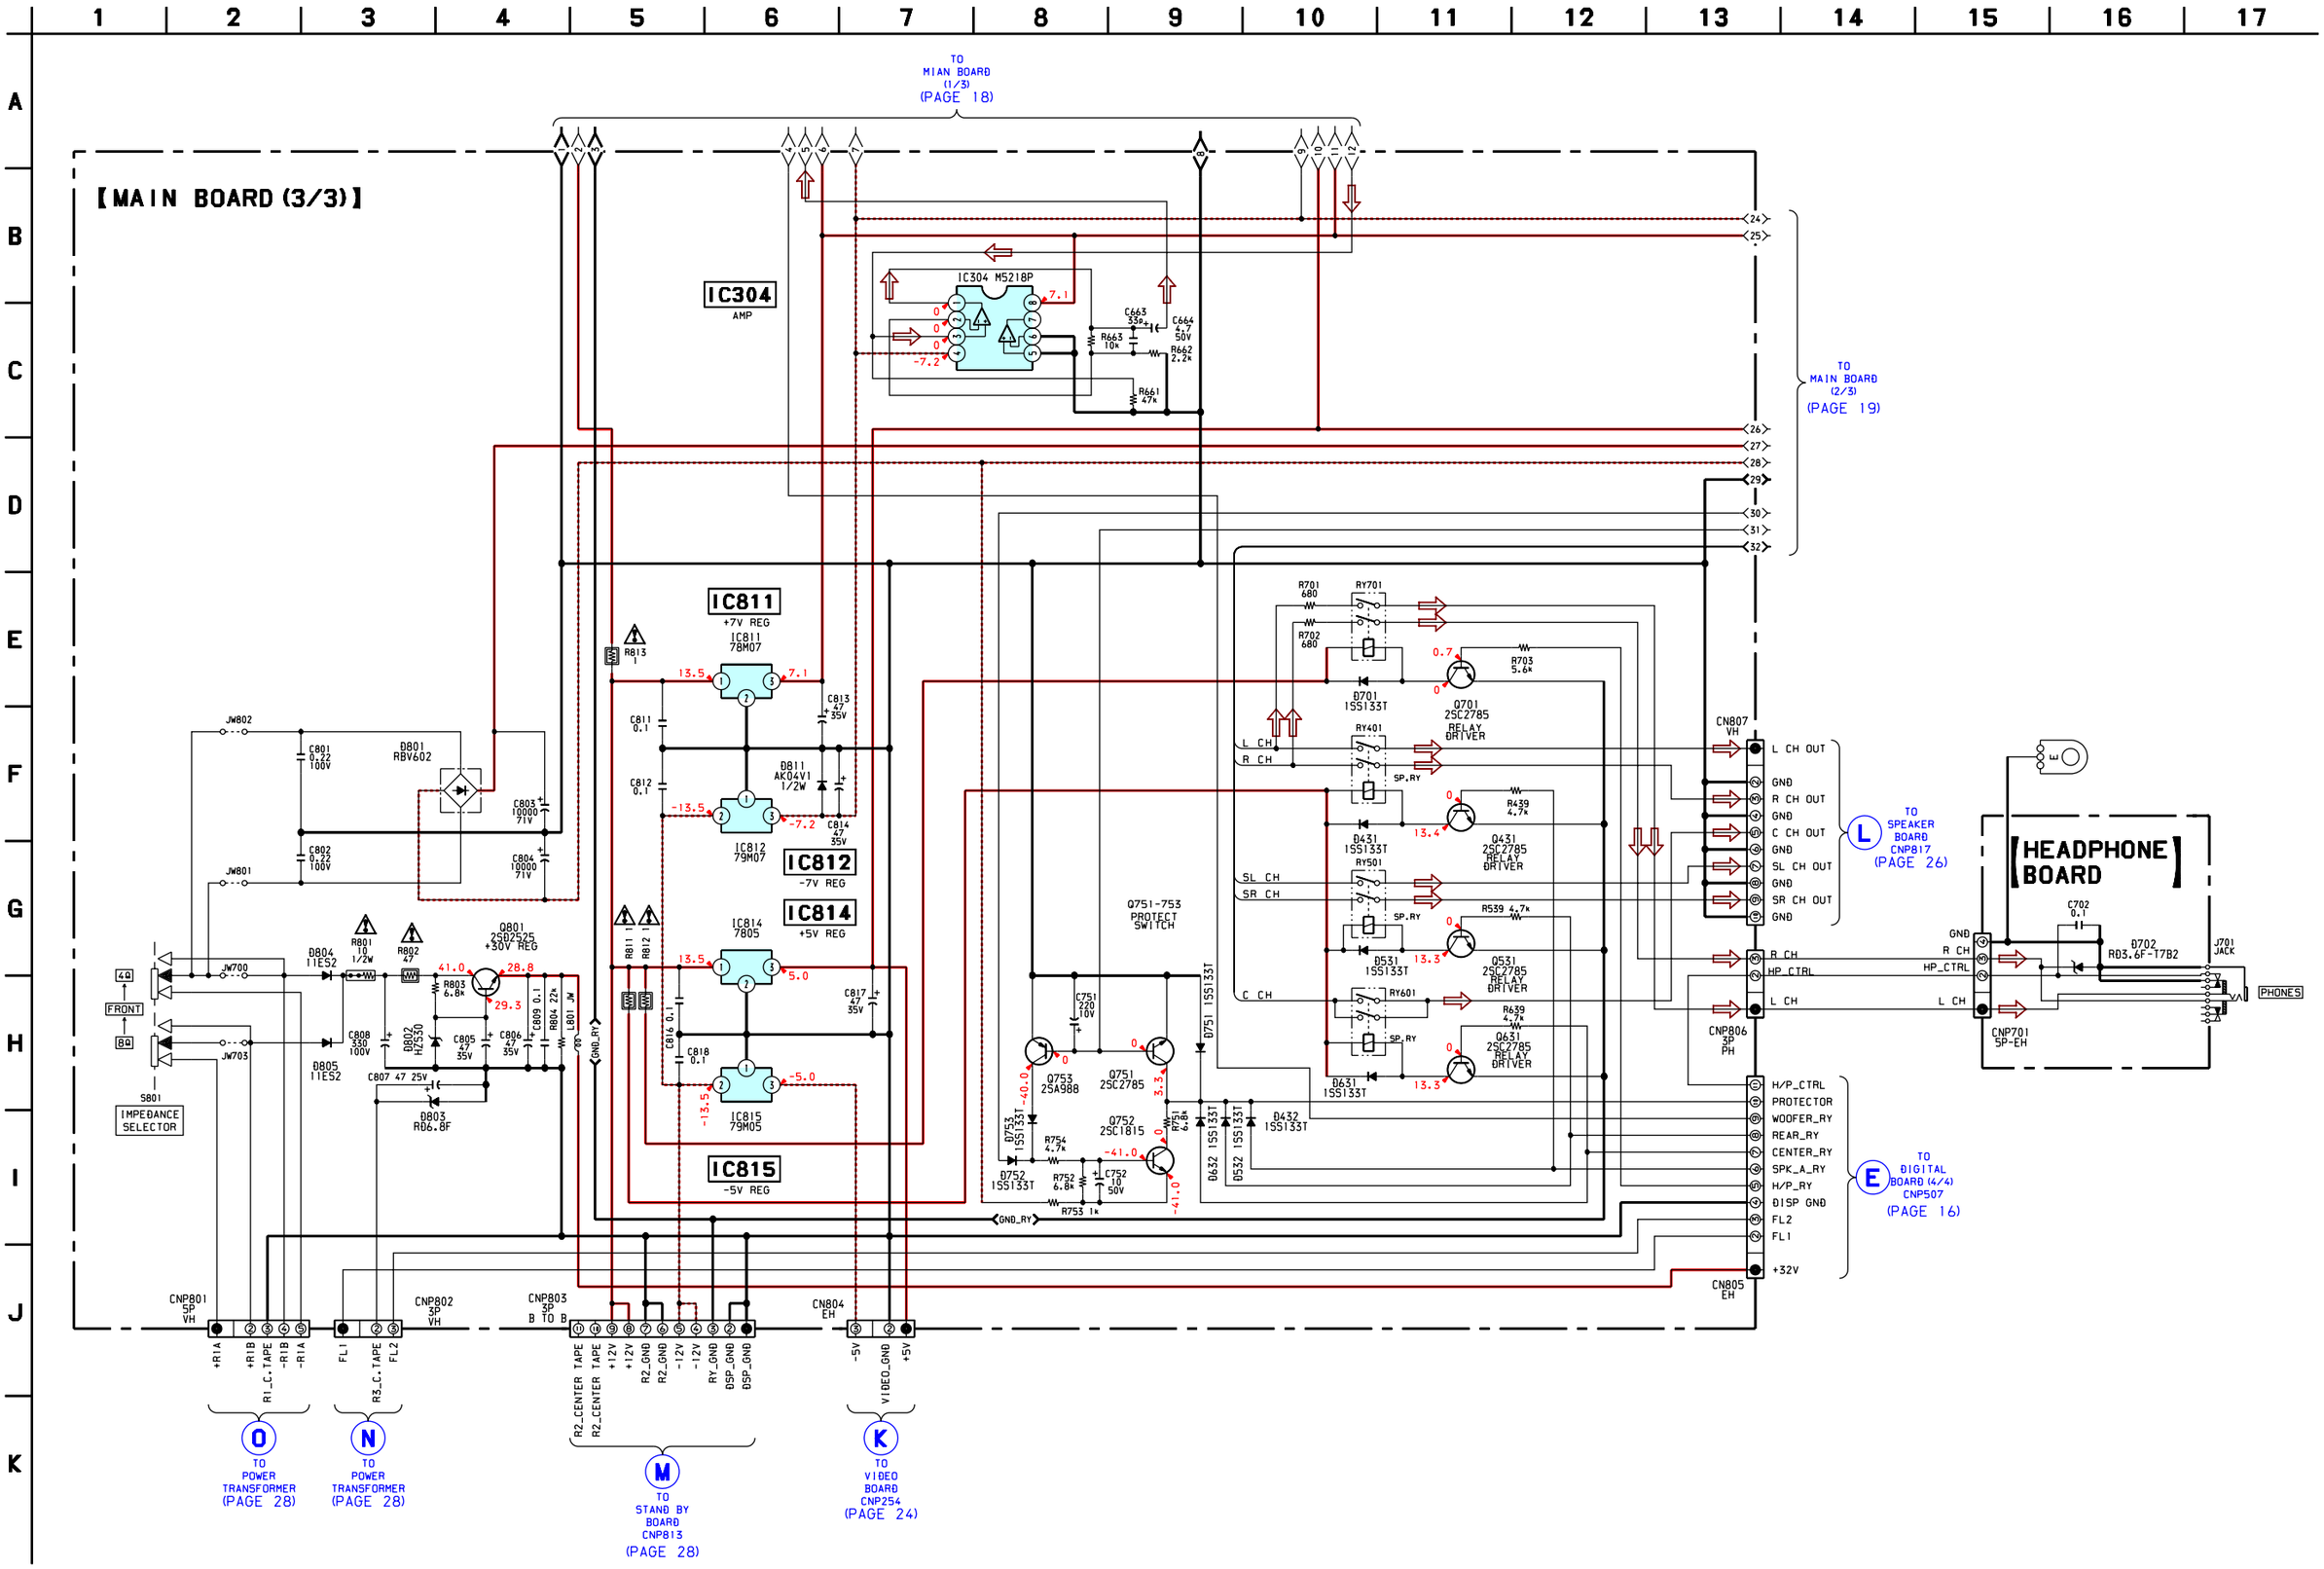

3-12. PRINTED WIRING BOARD – DISPLAY SECTION –

• See page 8 for Circuit Boards Location.

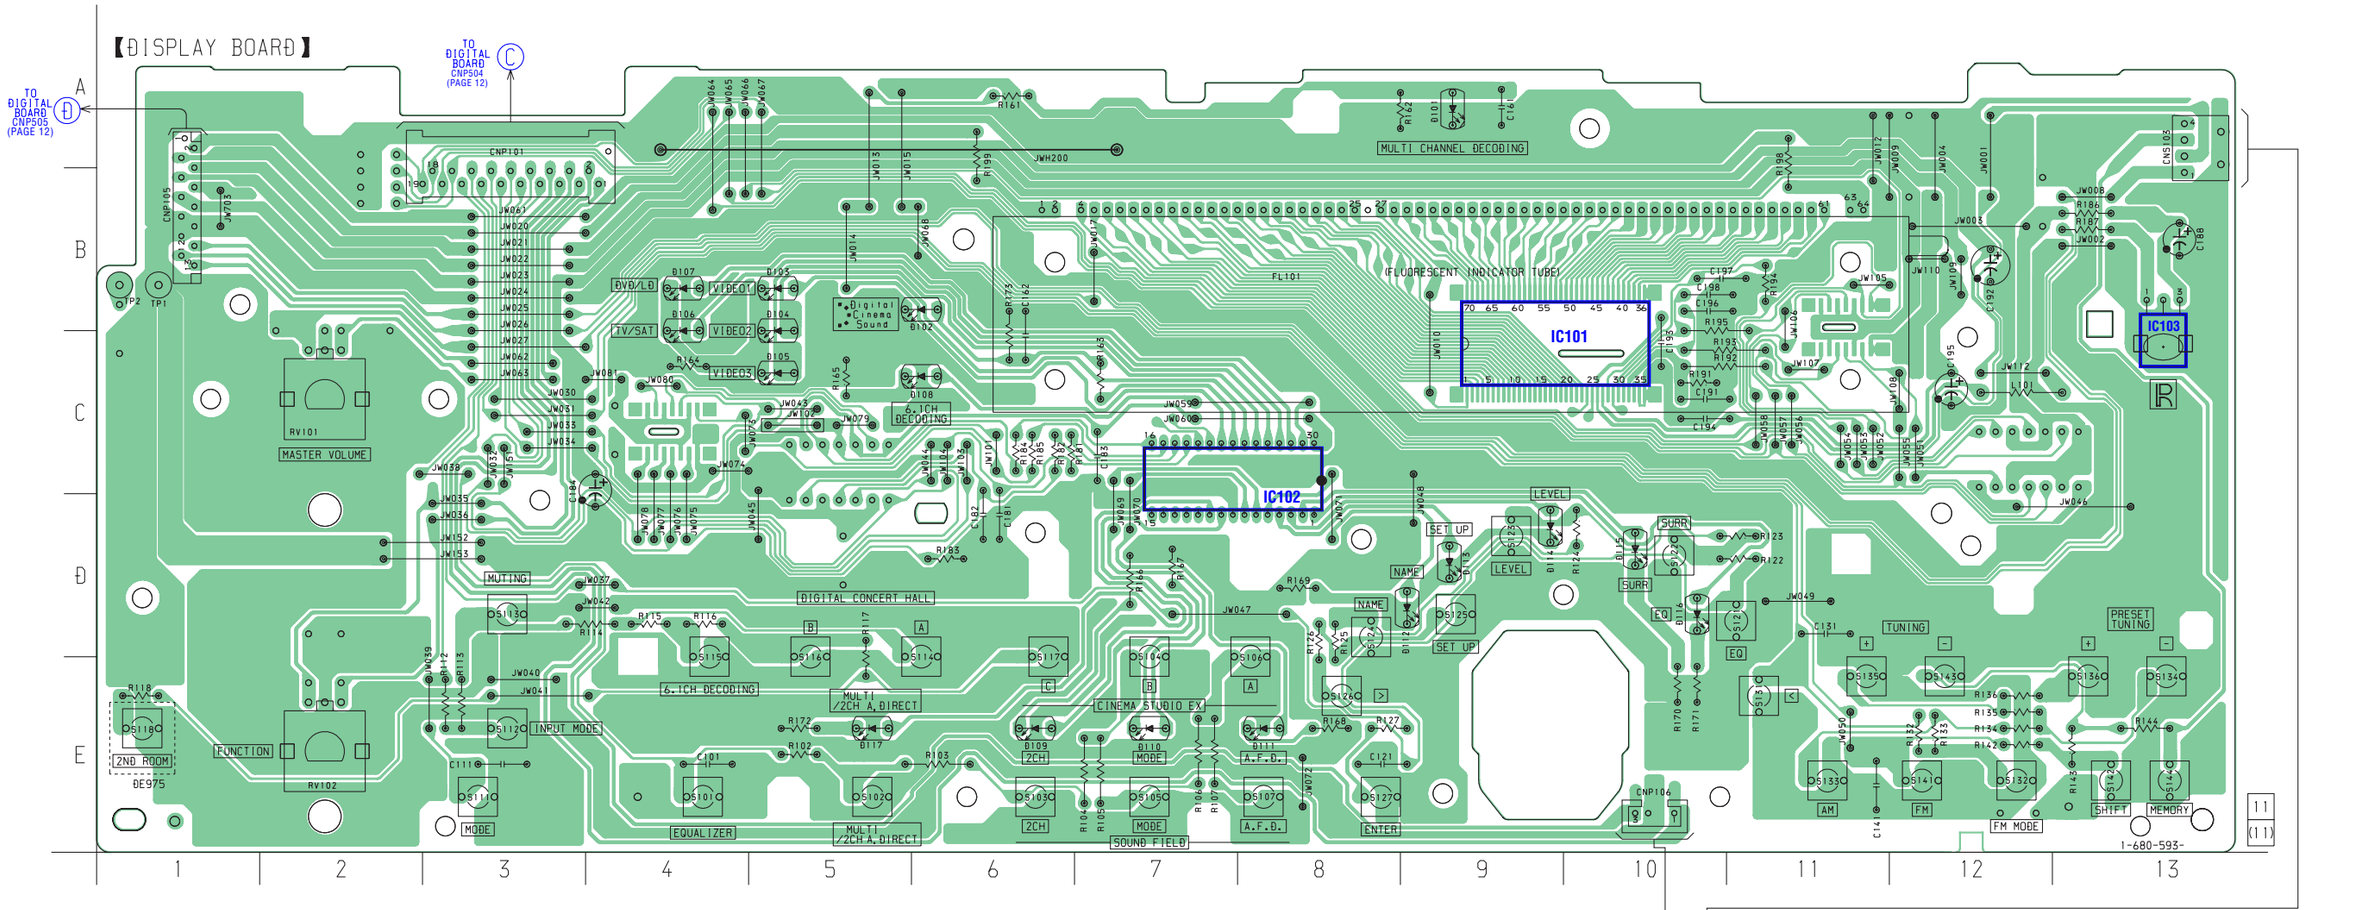

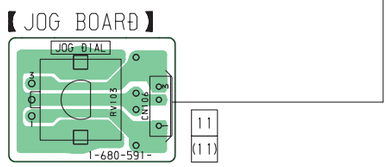

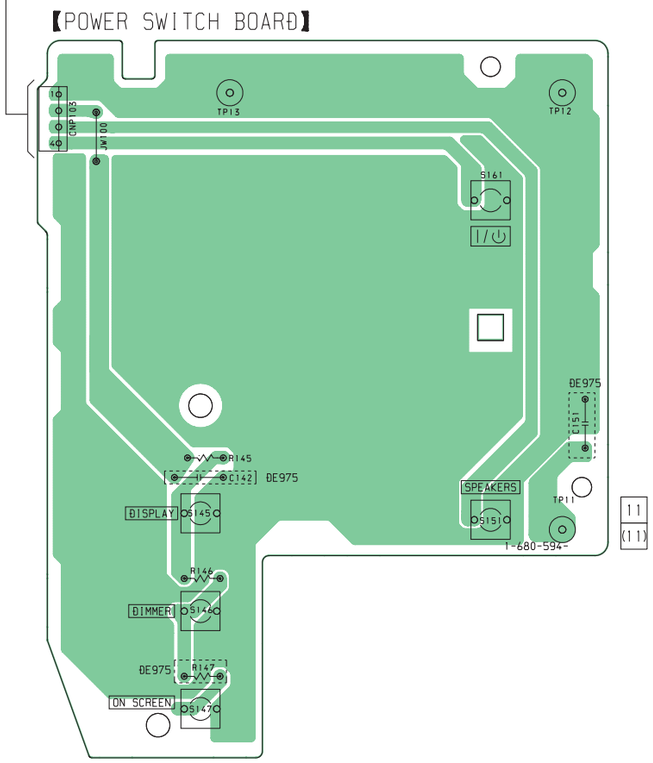

• **Semiconductor Location**

Ref. No.	Location
D101	A-9
D102	B-6
D103	B-5
D104	C-5
D105	C-5
D106	B-4
D107	B-4
D108	C-6
D109	E-6
D110	E-7
D111	E-8
D112	D-9
D113	D-9
D114	D-9
D115	D-10
D116	D-10
D117	E-5
IC101	C-9
IC102	C-7
IC103	C-13

3-13. SCHEMATIC DIAGRAM – DISPLAY SECTION –

• See page 31 for IC Block Diagrams.

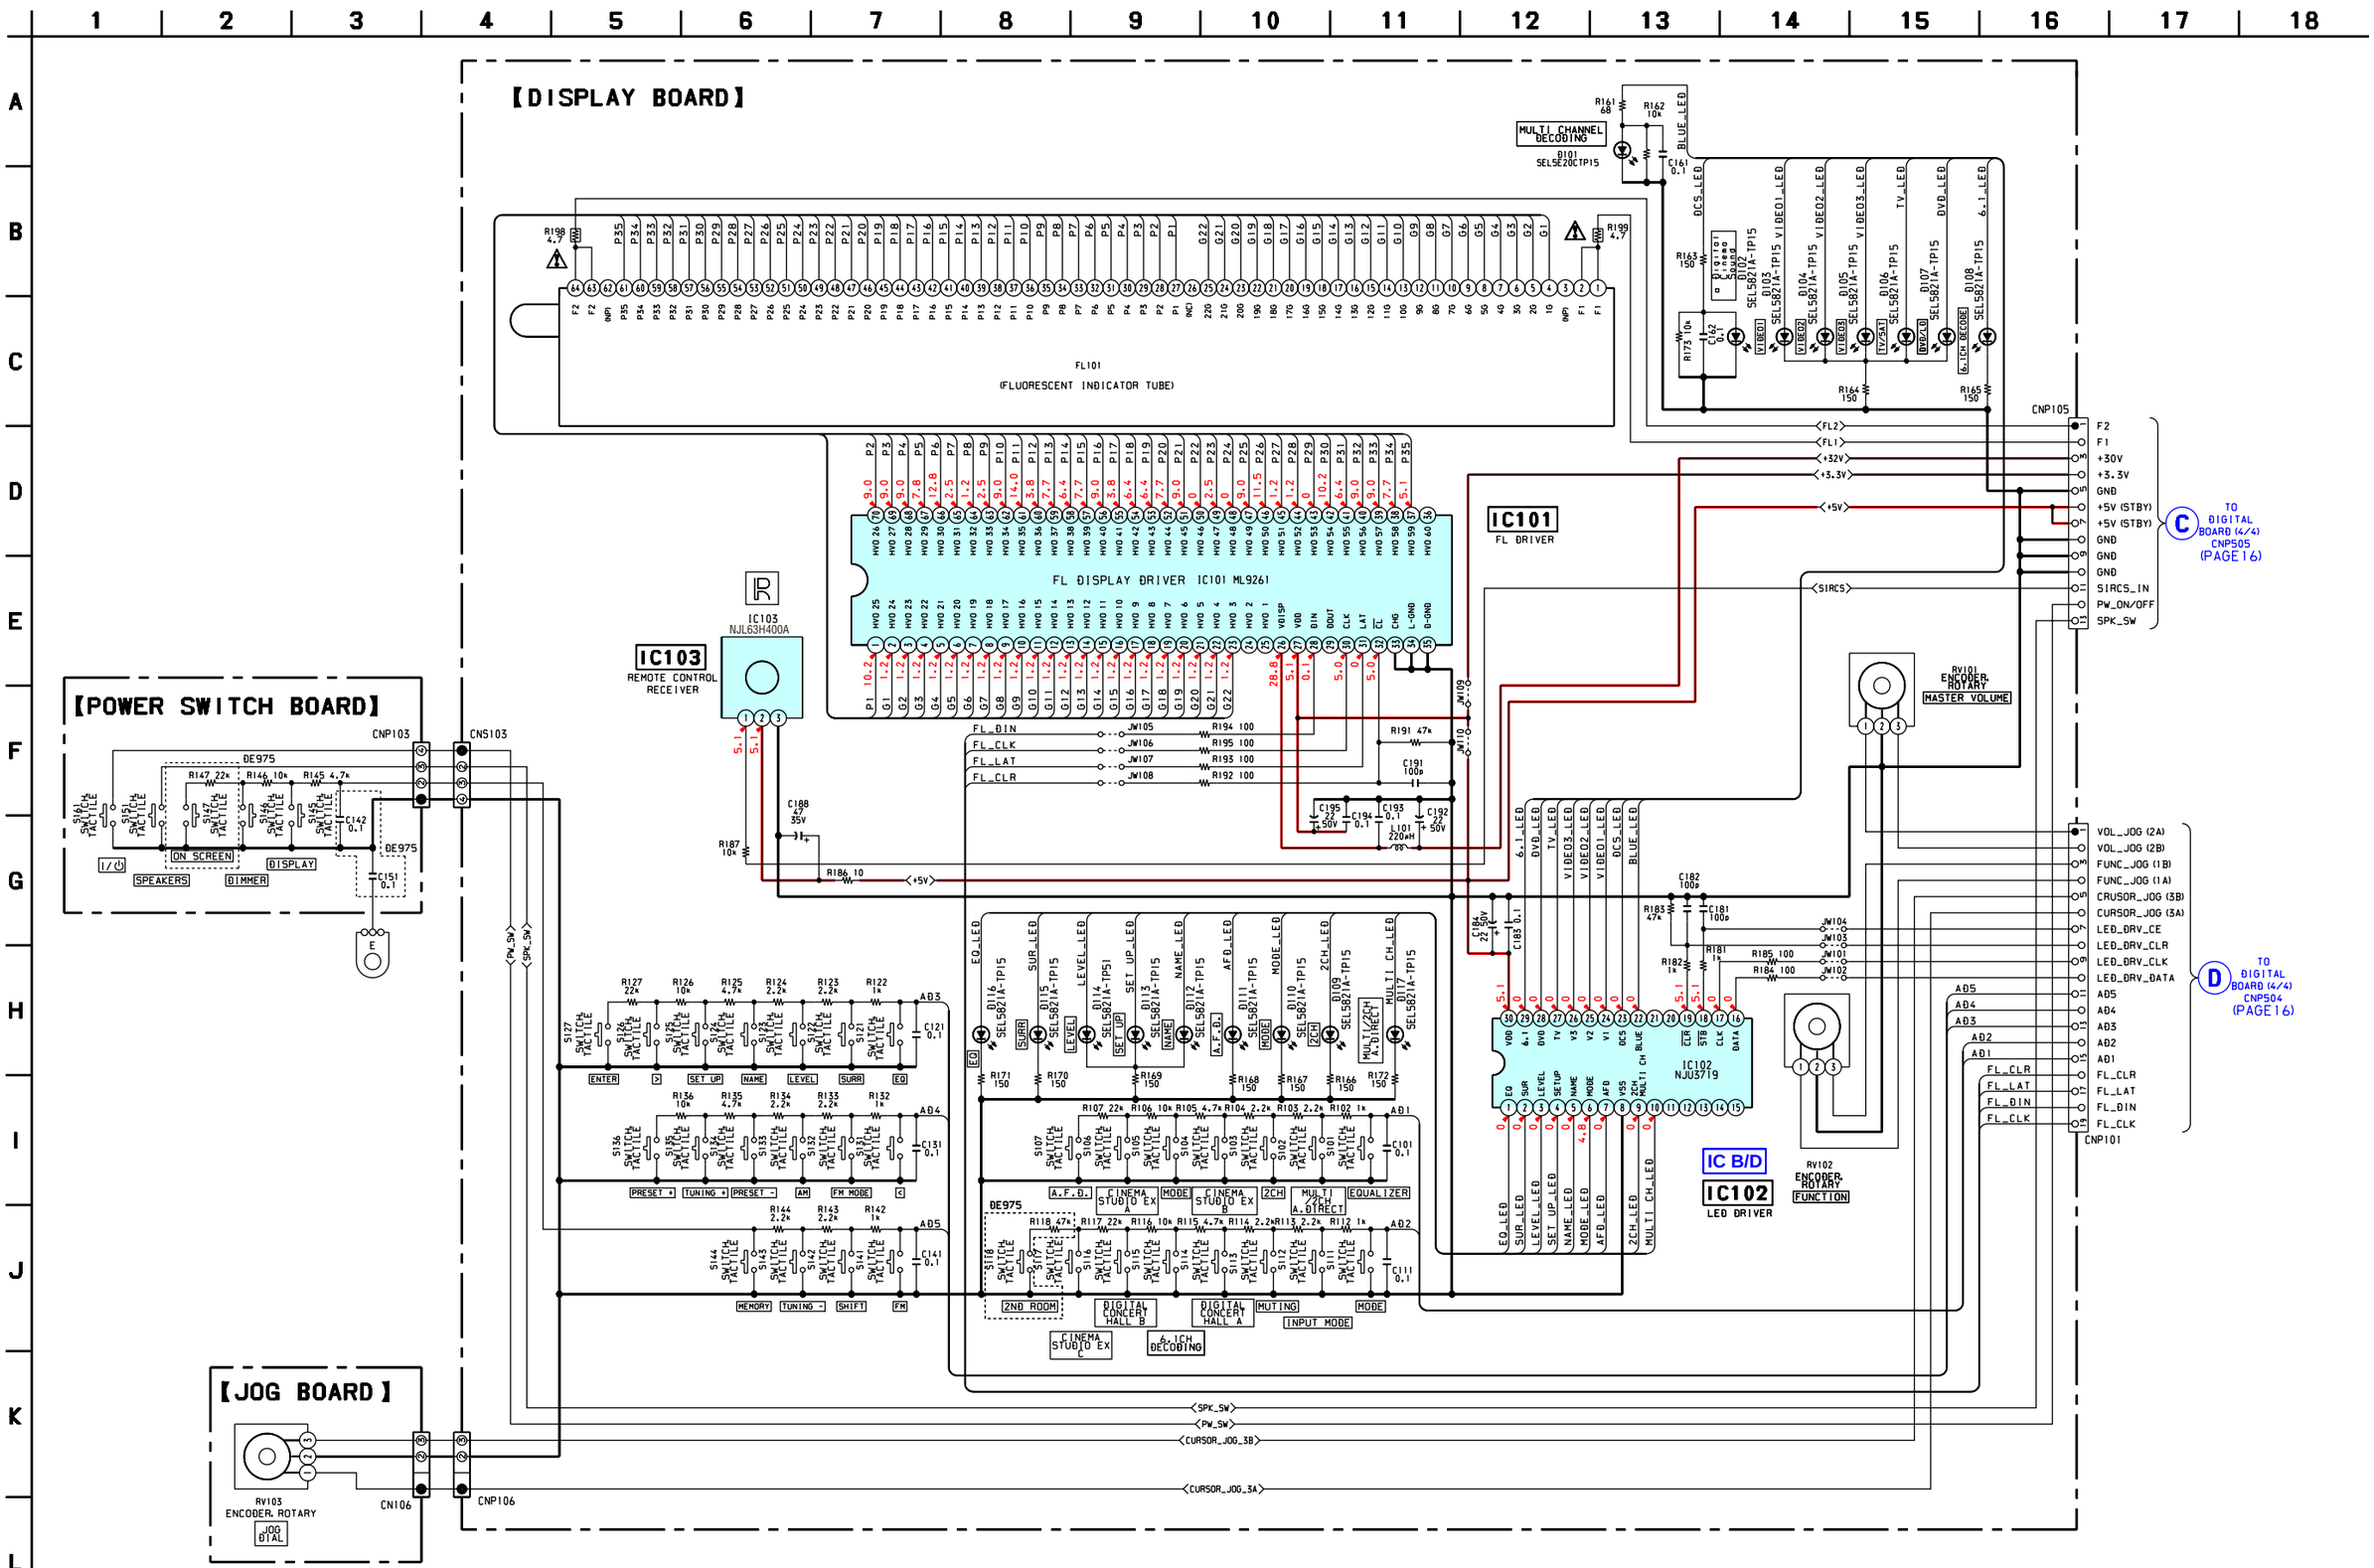

3-14. PRINTED WIRING BOARD – VIDEO SECTION –

• See page 8 for Circuit Boards Location.

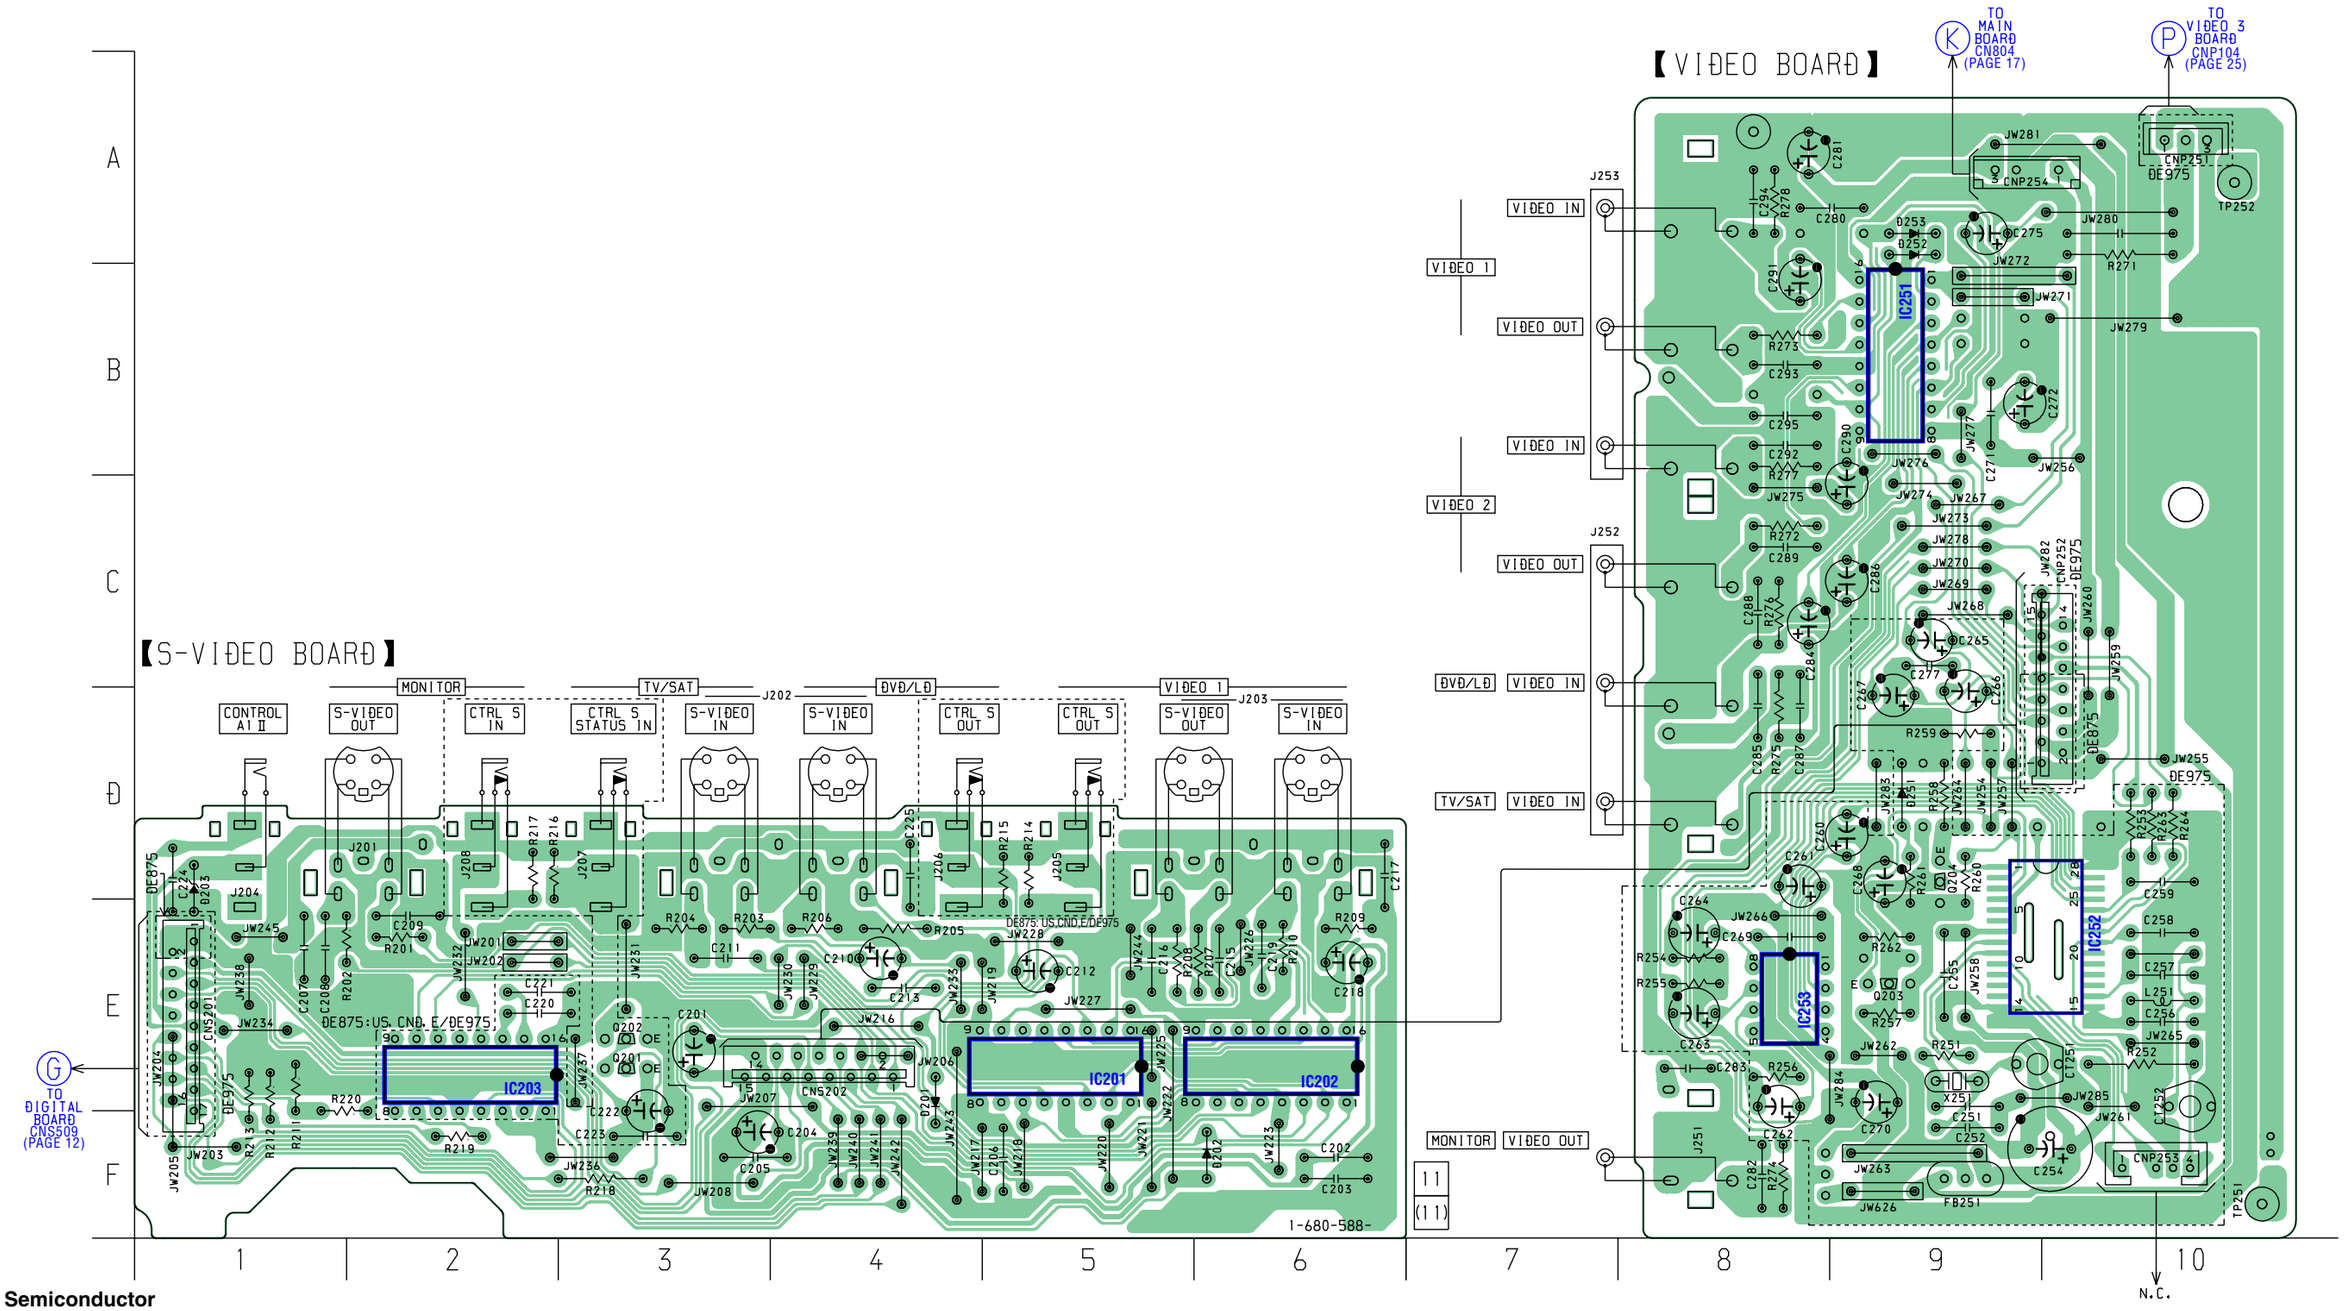

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location
D201	E-4	IC203	E-2
D202	F-6	IC251	B-9
D203	D-1	IC252	E-10
D251	D-9	IC253	E-8
D252	A-9		
D253	A-9	Q201	E-3
		Q202	E-3
IC201	E-5	Q203	E-9
IC202	E-6	Q204	D-9

3-15. SCHEMATIC DIAGRAM – VIDEO SECTION –

• See page 9 for Waveform. • See page 31,32 for IC Block Diagrams.

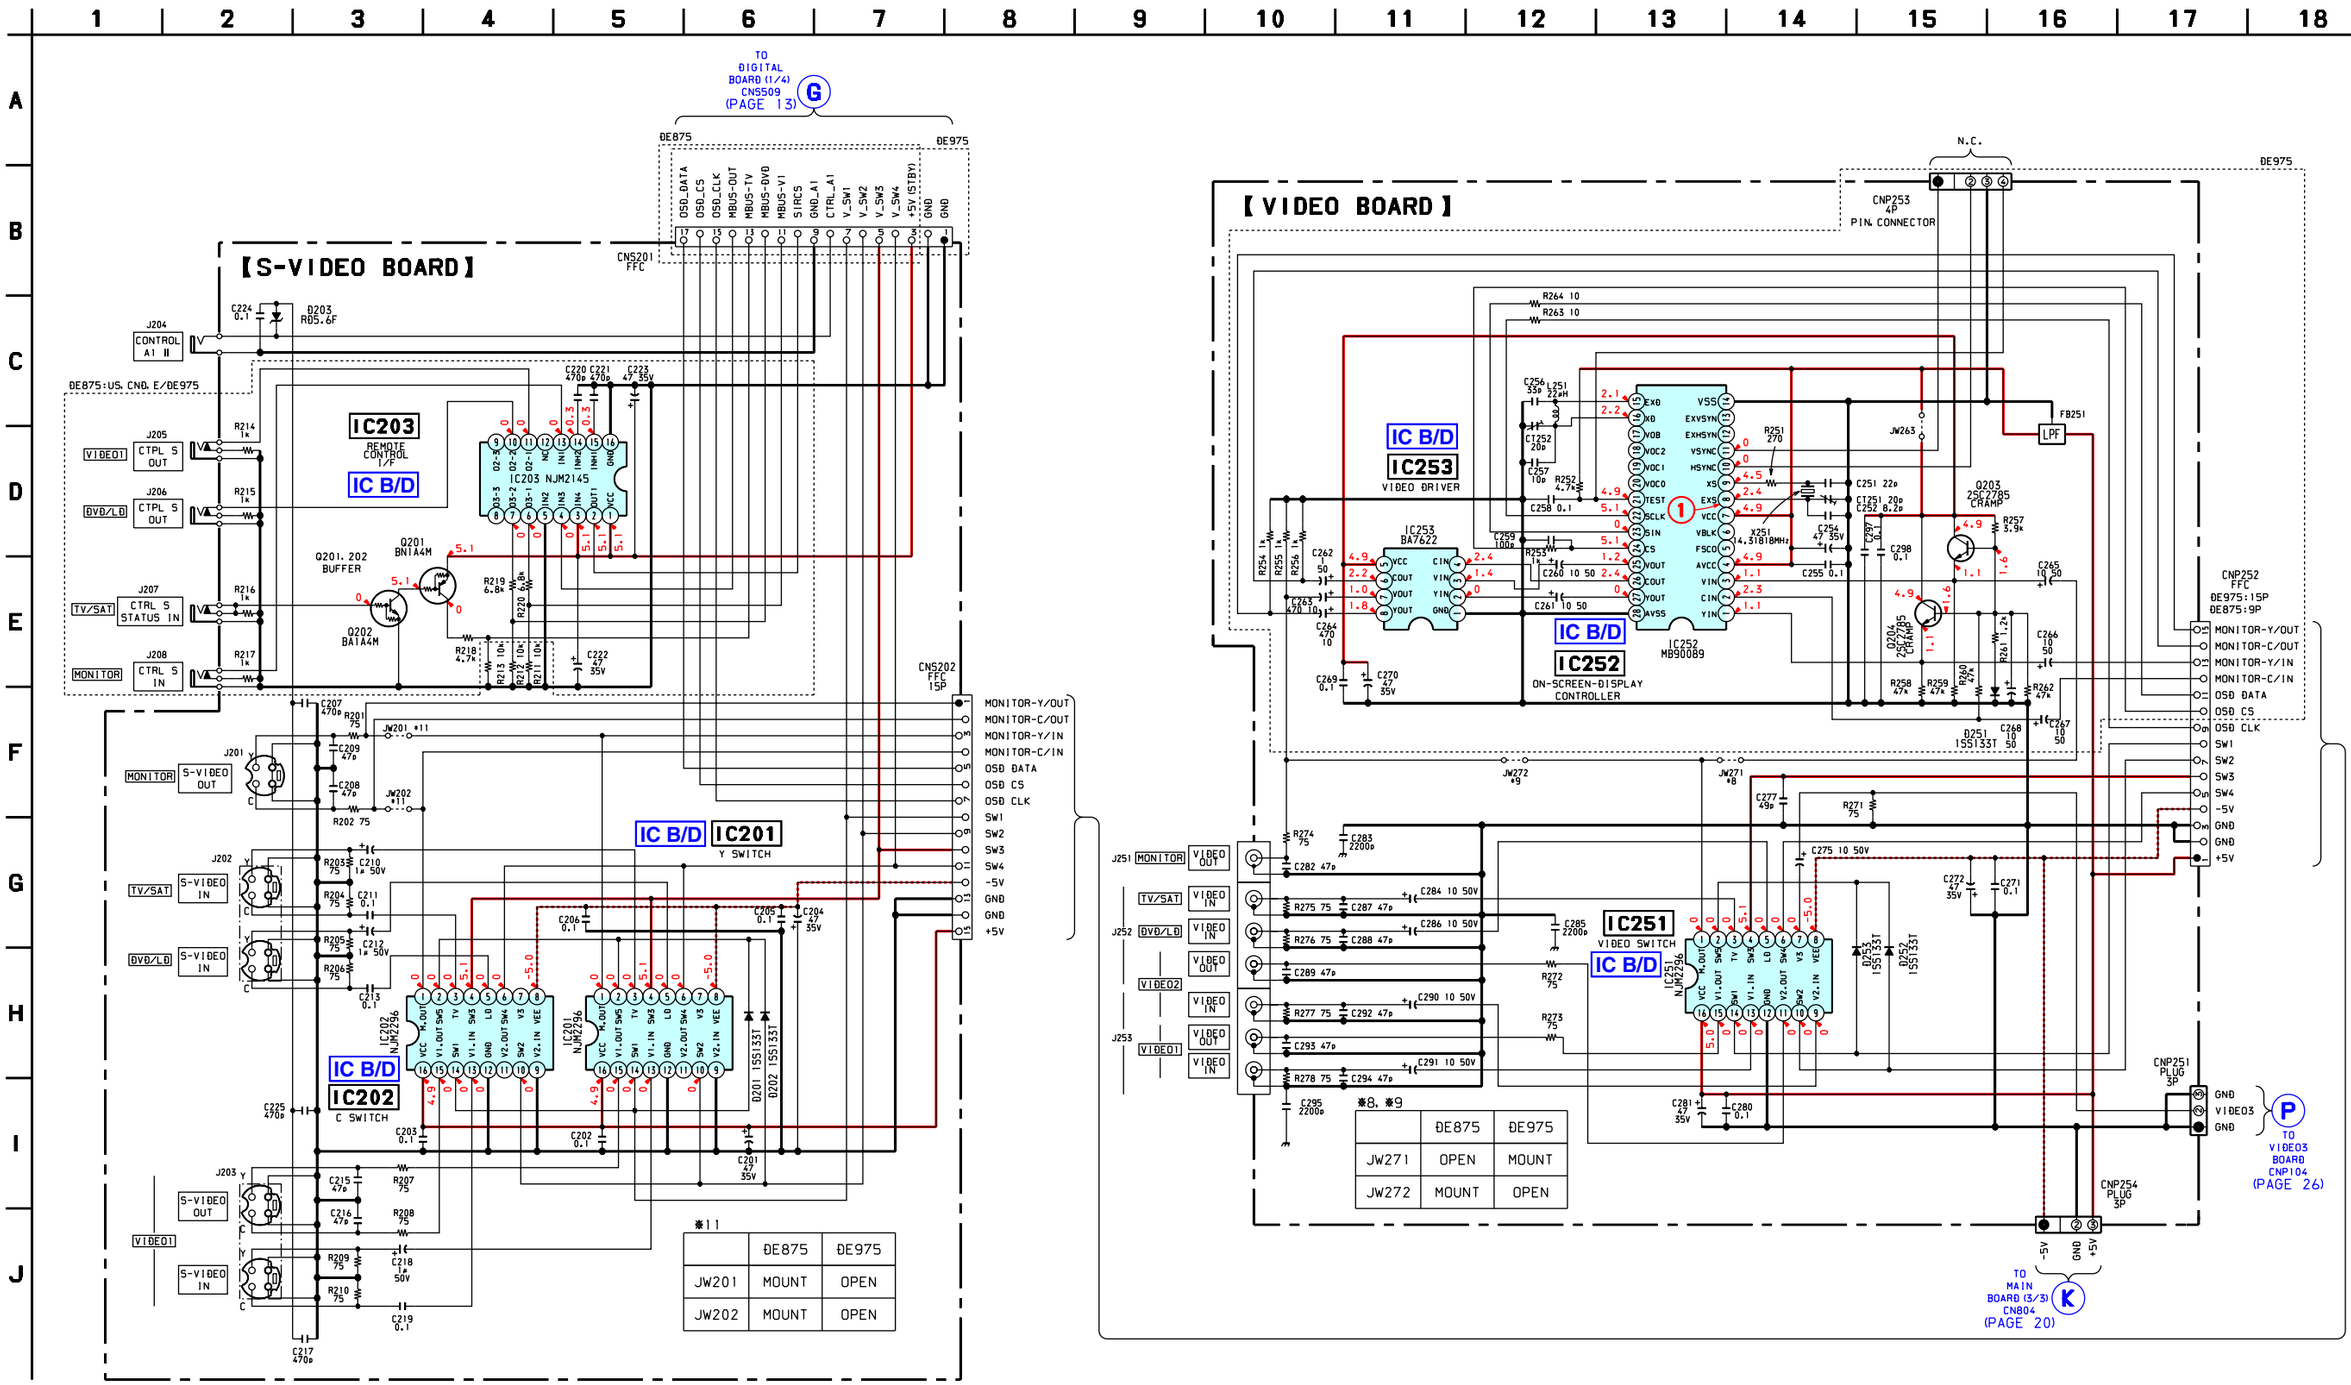

3-16. PRINTED WIRING BOARD – SPEAKER SECTION –

• See page 8 for Circuit Boards Location.

【 SPEAKER BOARD 】

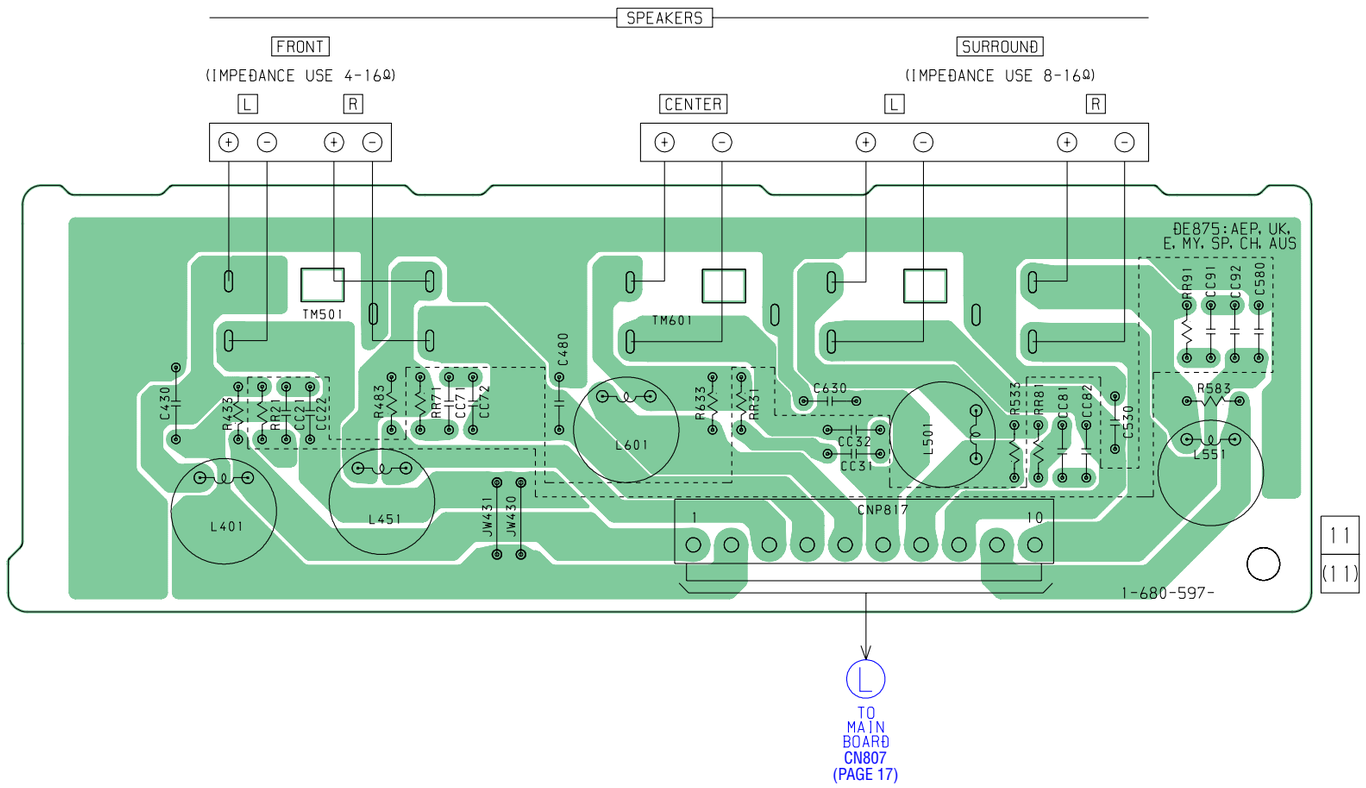

DE975 MODEL ONLY

【 2ND AUDIO BOARD 】

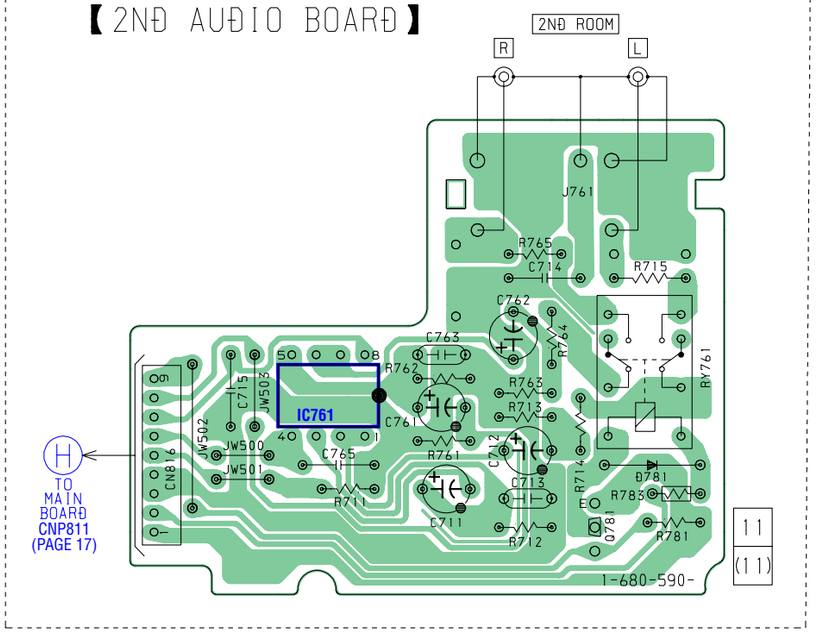

DE975 MODEL ONLY

【 VIDEO3 BOARD 】

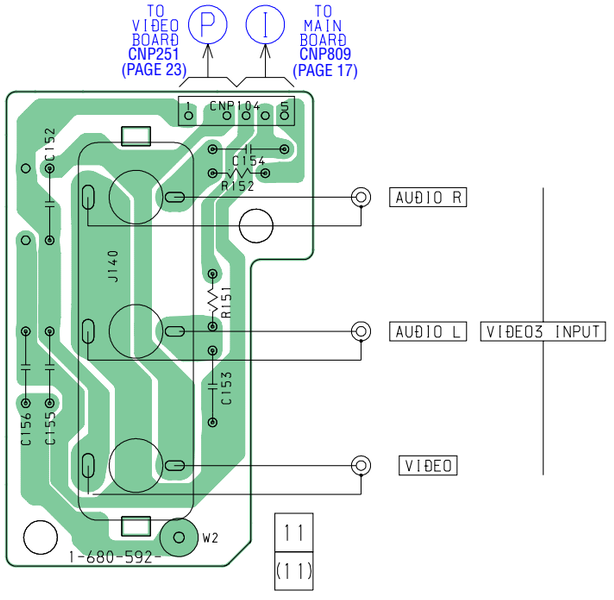

25

3-17. SCHEMATIC DIAGRAM –SPEAKER SECTION –

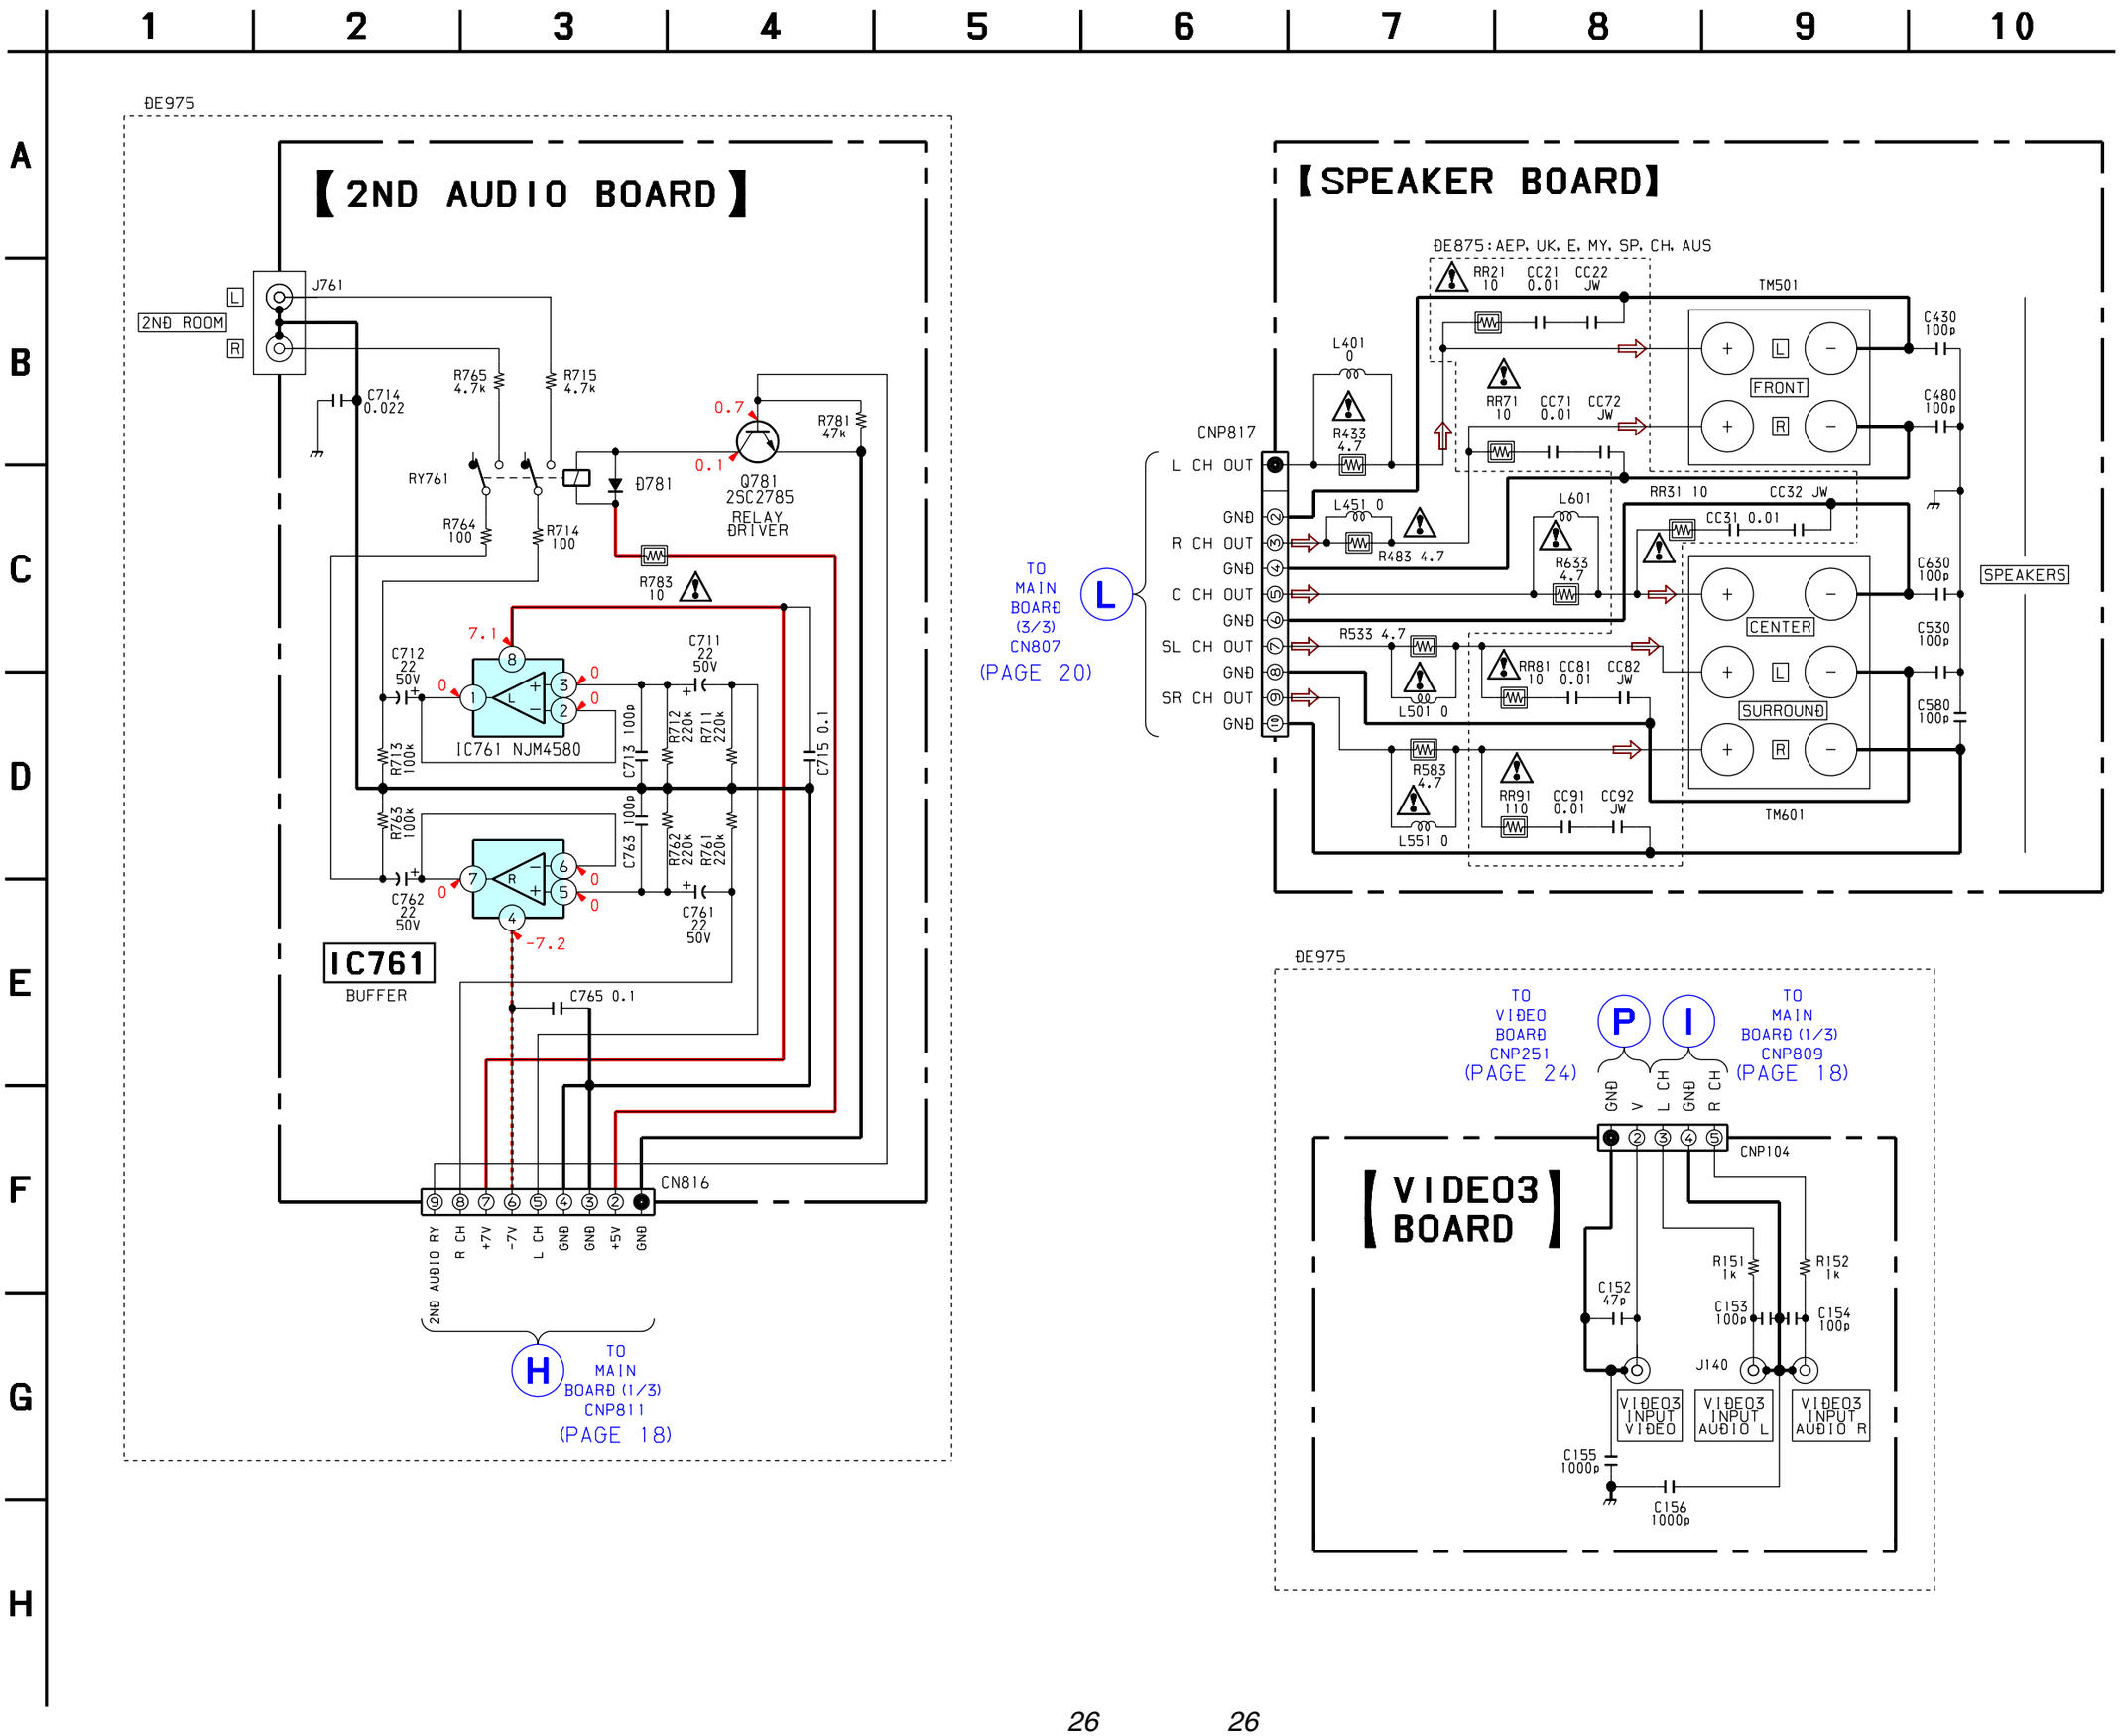

3-18. PRINTED WIRING BOARD – POWER SECTION –

• See page 8 for Circuit Boards Location.

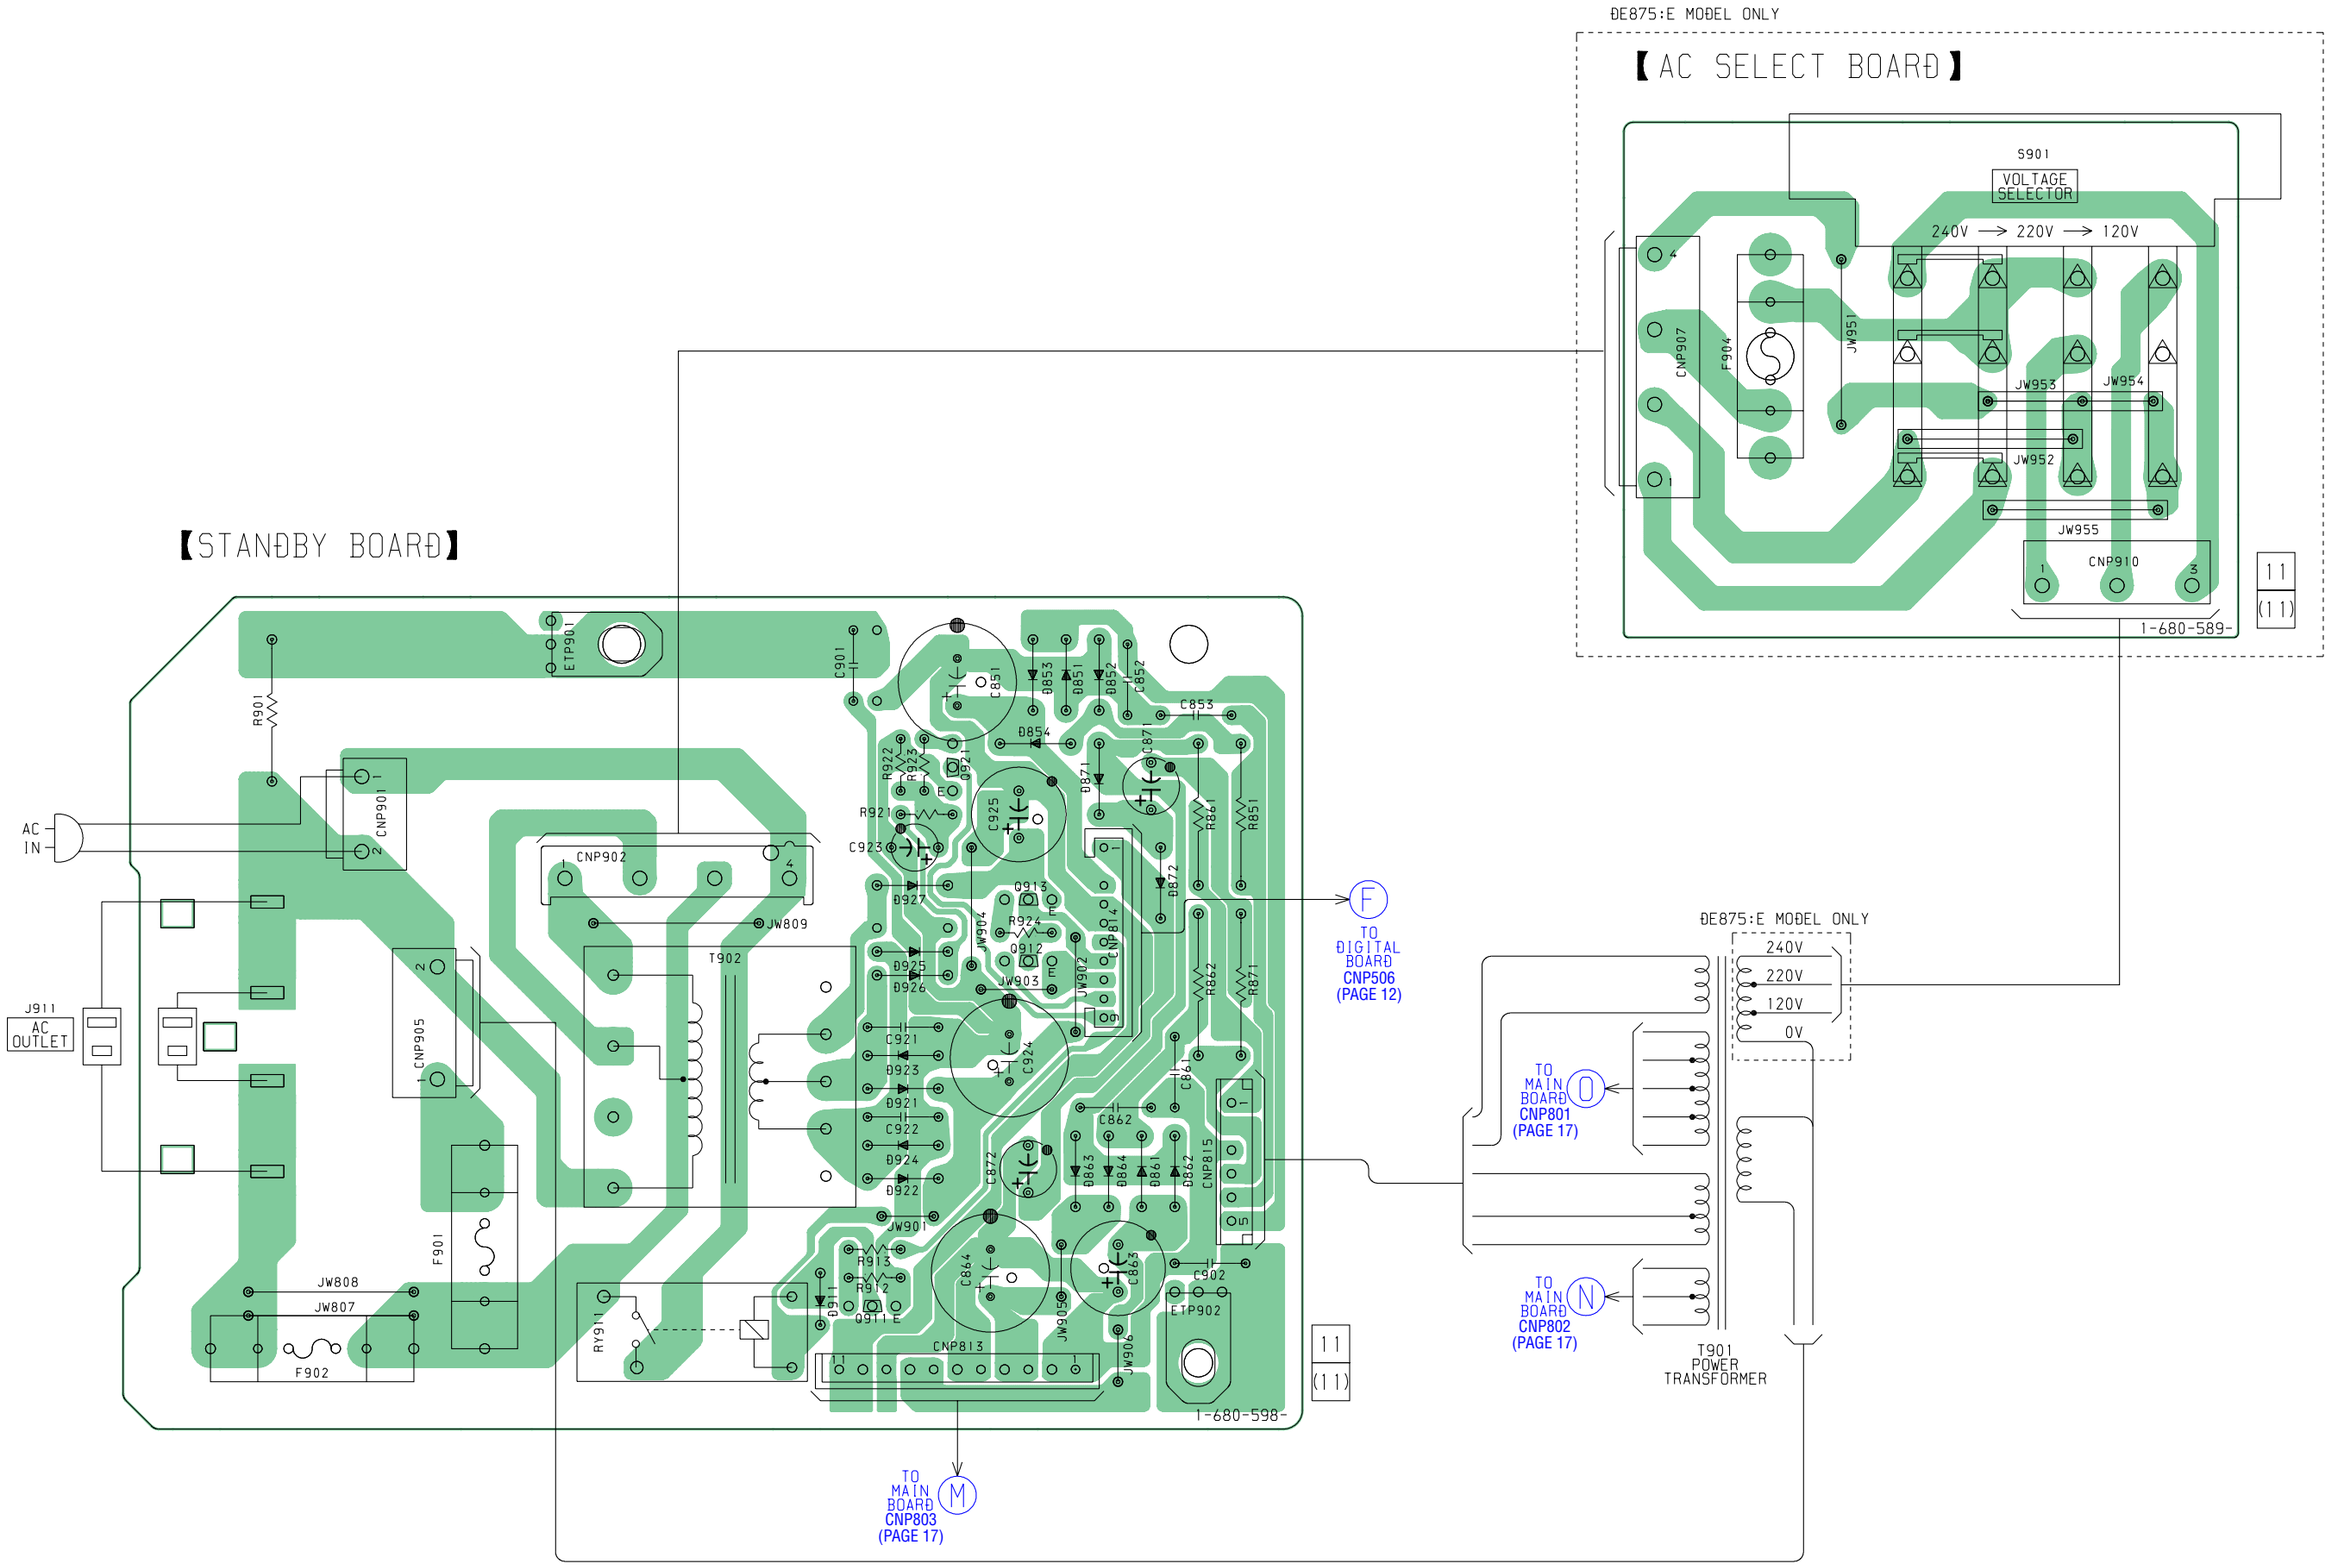

3-19. SCHEMATIC DIAGRAM –POWER SECTION –

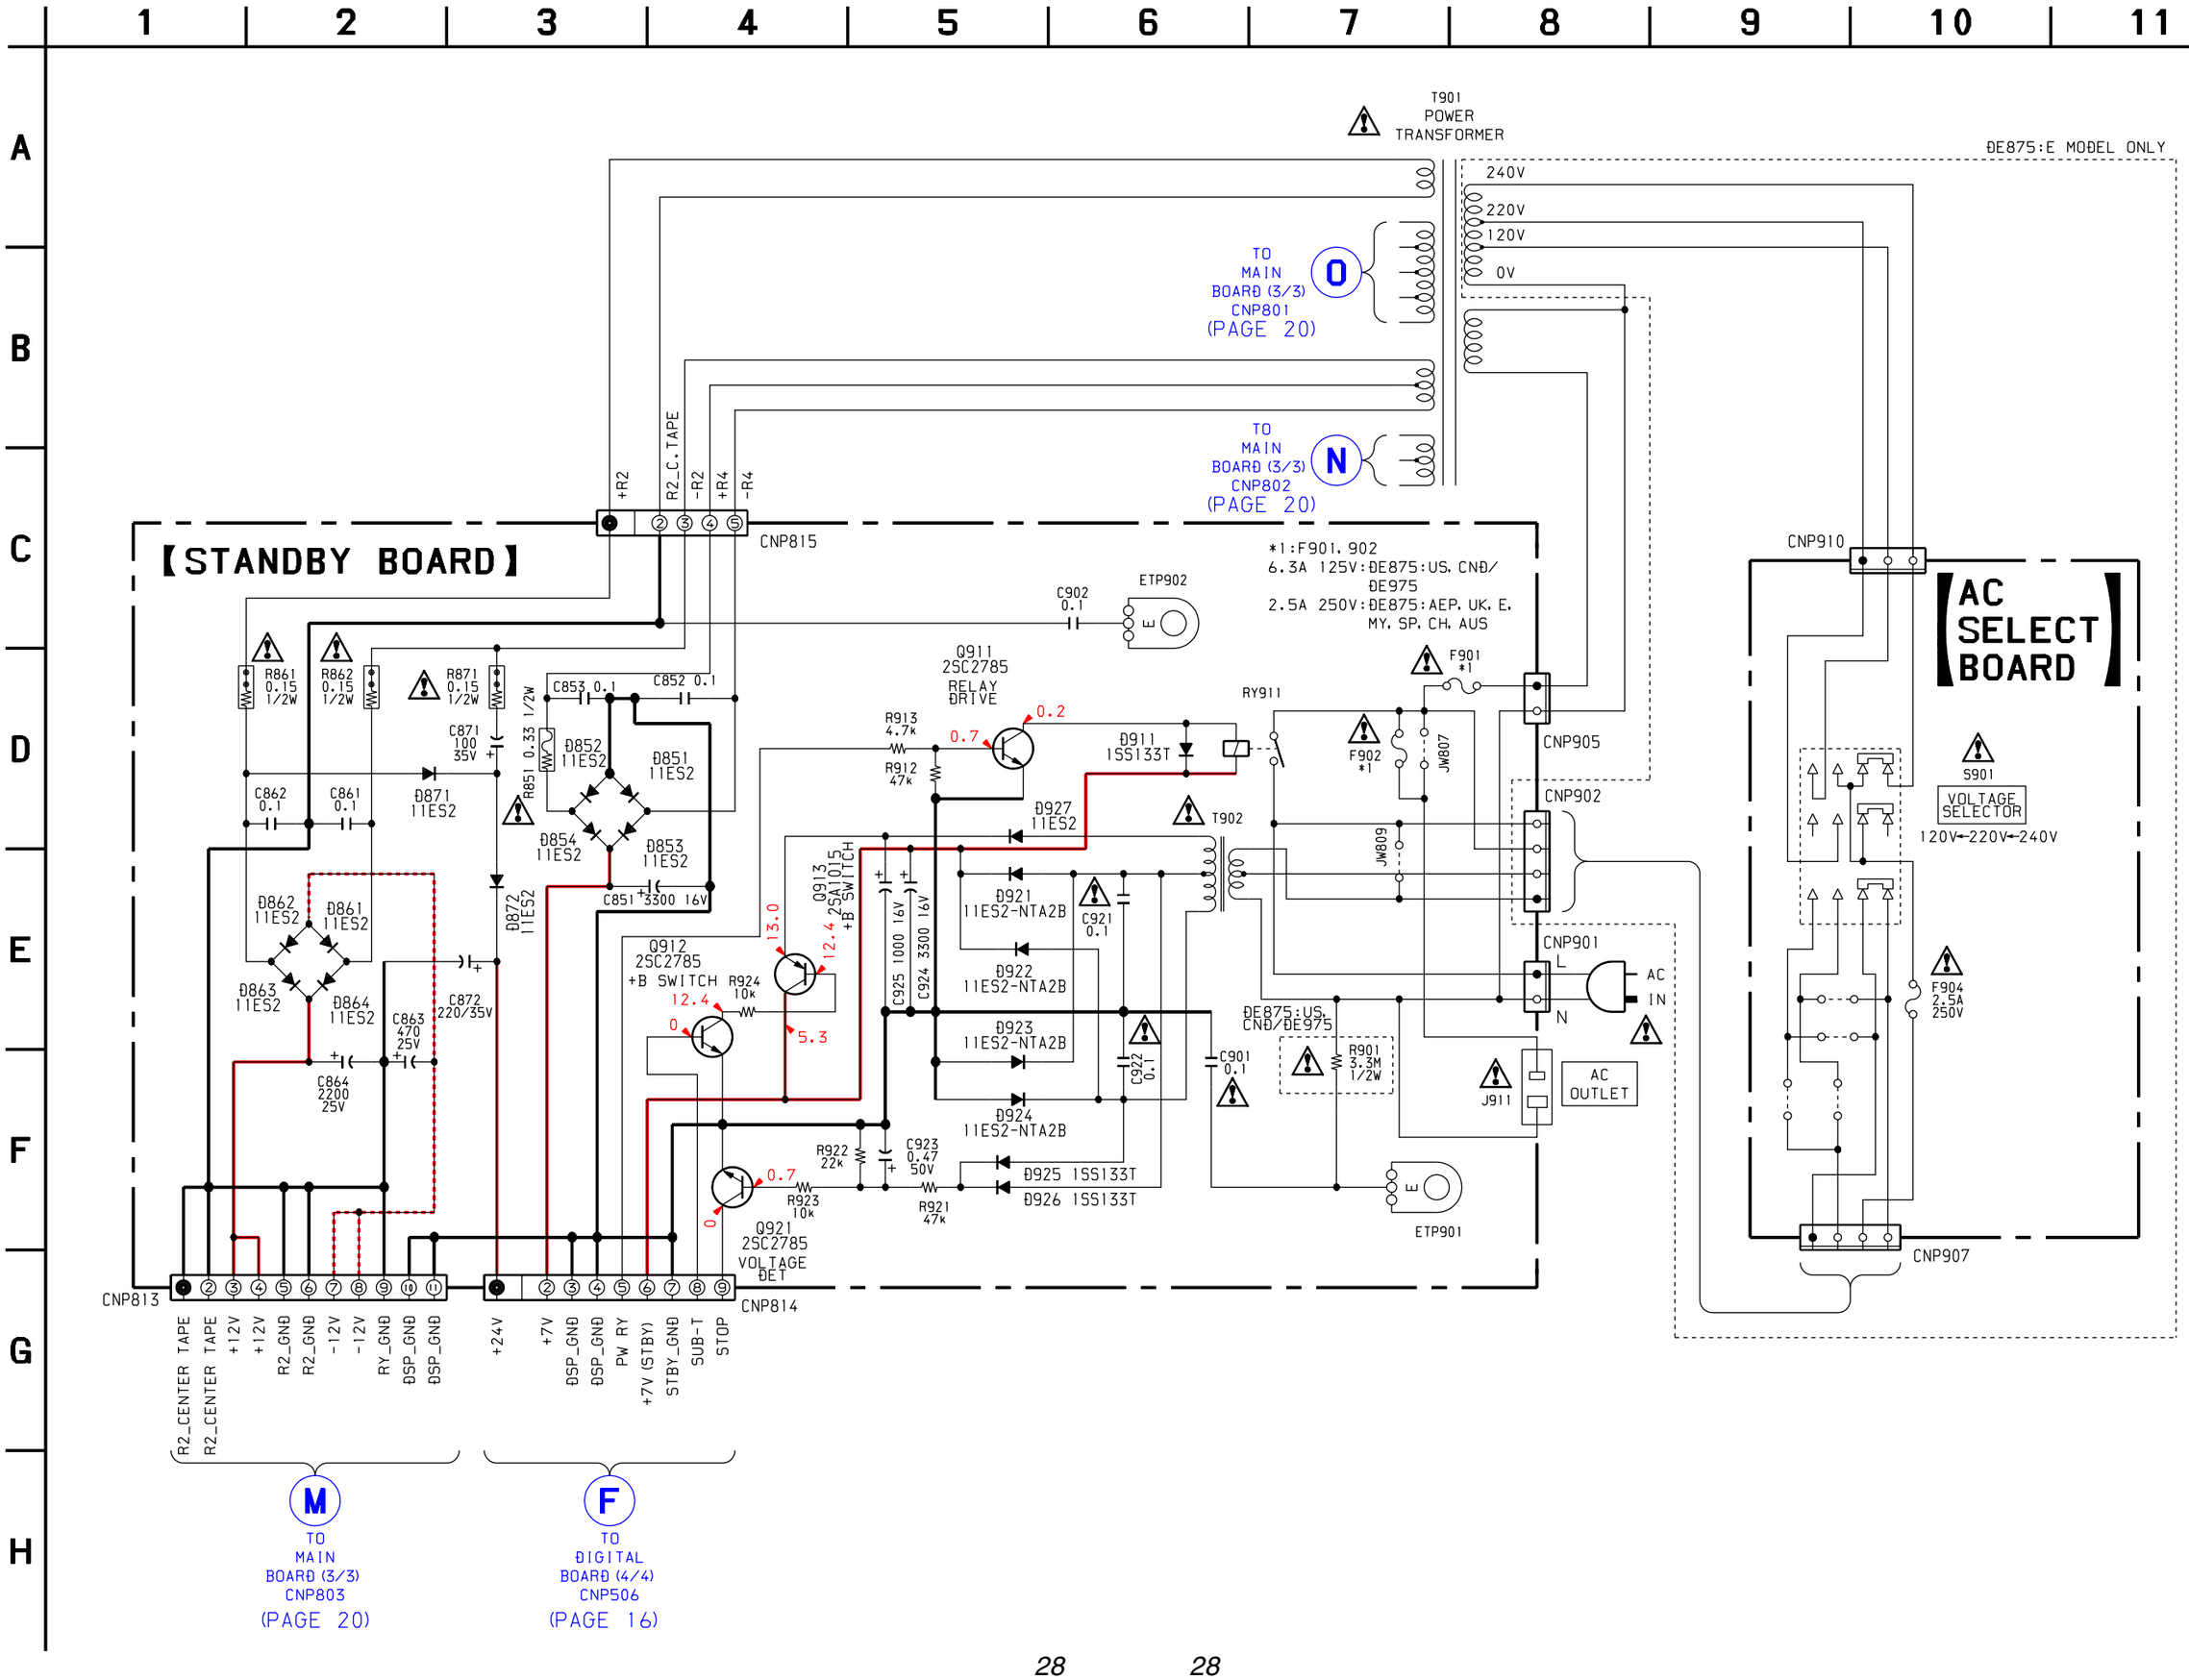
T901
POWER
TRANSFORMER
ÐE875:E MOÐEL ONLY
240V
220V
120V
0V
TO
MAIN
BOARÐ (3/3)
CNP801
(PAGE 20)
TO
MAIN
BOARÐ (3/3)
CNP802
(PAGE 20)
【STANDBY BOARD】
CNP815
+R2
R2_C.TAPE
-R2
+R4
-R4
*1:F901, 902
6.3A 125V:ÐE875:US, CNÐ/
ÐE975
2.5A 250V:ÐE875:AEP, UK, E,
MY, SP, CH, AUS
CNP910
【AC
SELECT
BOARD】
S901
VOLTAGE
SELECTOR
120V←220V←240V
F904
2.5A
250V
CNP907
ETP902
C902
0.1
Q911
2SC2785
RELAY
ÐRIVE
RY911
F901
*1
F902
*1
JW807
JW809
CNP905
CNP902
CNP901
L
N
AC
IN
AC
OUTLET
J911
ÐE875:US,
CNÐ/ÐE975
R901
3.3M
1/2W
C901
0.1
C922
0.1
ETP901
R913
4.7k
R912
47k
0.7
0.2
ÐE875:E MOÐEL ONLY
ÐE875:US, CNÐ/ÐE975
R861
0.15
1/2W
R862
0.15
1/2W
R871
0.15
1/2W
C853 0.1
C852 0.1
C871
100
35V
R851 0.33 1/2W
ÐE875:E MOÐEL ONLY
ÐE875:US, CNÐ/ÐE975
ÐE875:E MOÐEL ONLY
ÐE875:US, CNÐ/ÐE975
ÐE875:E MOÐEL ONLY
ÐE875:US, CNÐ/ÐE975
C862
0.1
C861
0.1
ÐE875:E MOÐEL ONLY
ÐE875:US, CNÐ/ÐE975

3-20. IC BLOCK DIAGRAMS

IC1201 BU1924F (DIGITAL BOARD)

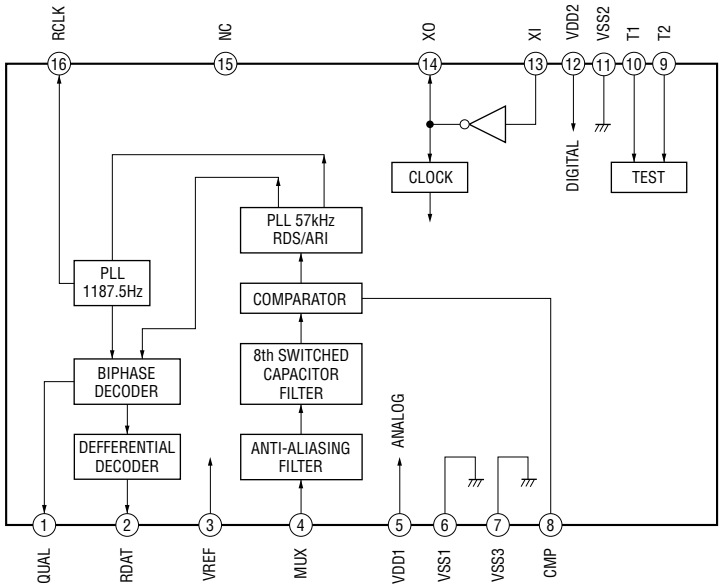

IC1302 TC74ACT153AF (EL) (DIGITAL BOARD)

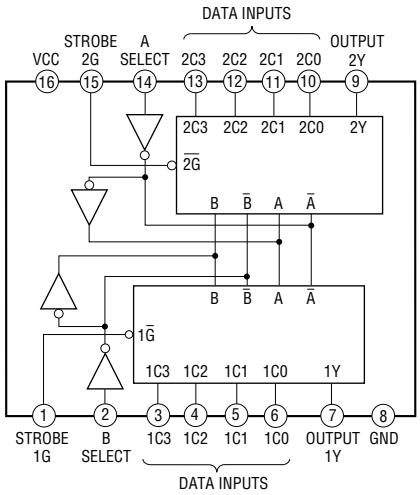

IC1301 LC89056W-E (DIGITAL BOARD)

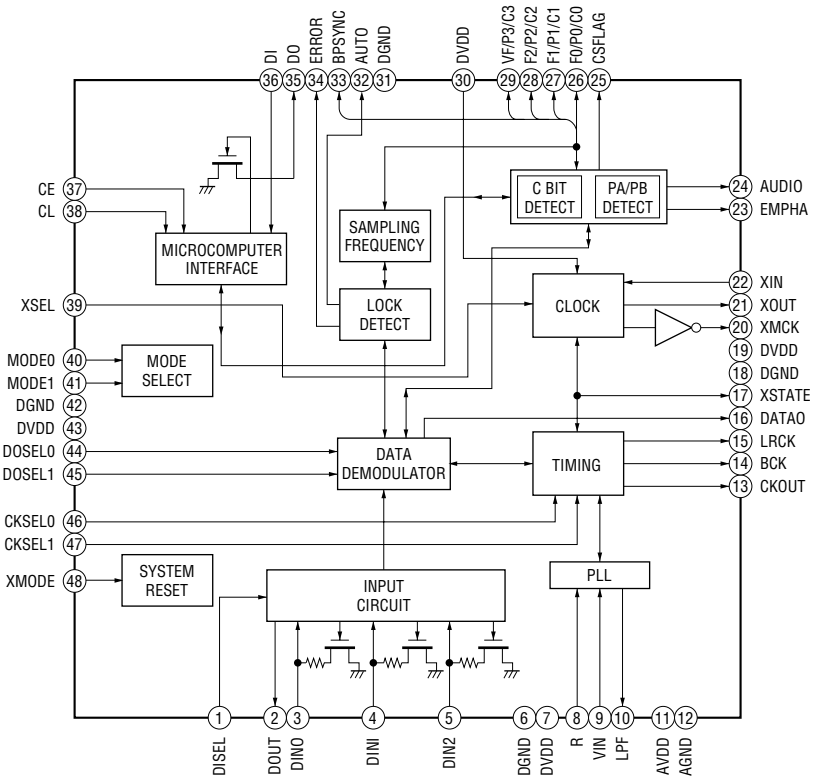

IC1305 TC7WH74FU (TE12R) (DIGITAL BOARD)

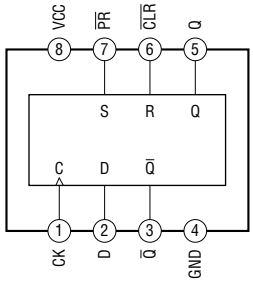

IC1401 PCM1800E/2K (DIGITAL BOARD)

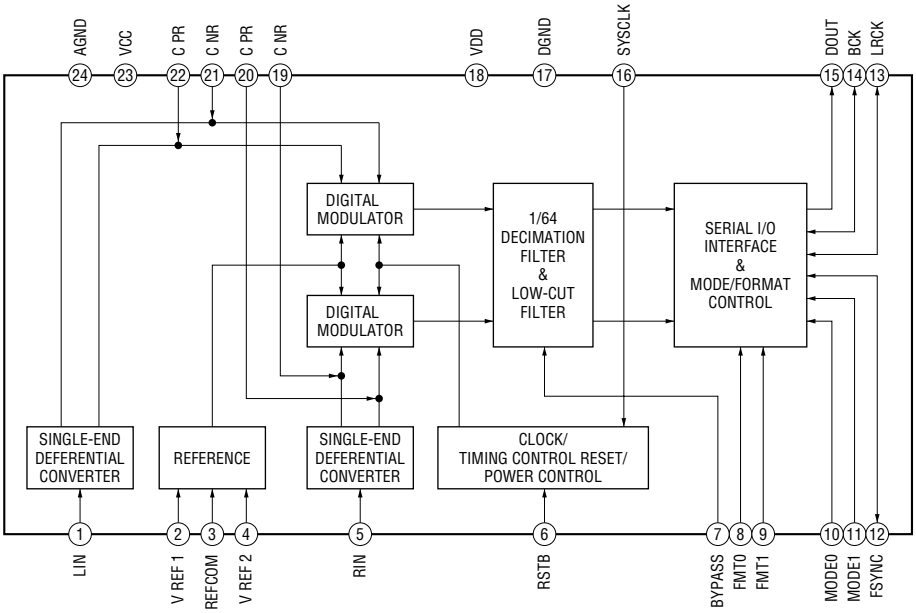

IC1451 PCM1604Y/2K (DIGITAL BOARD)

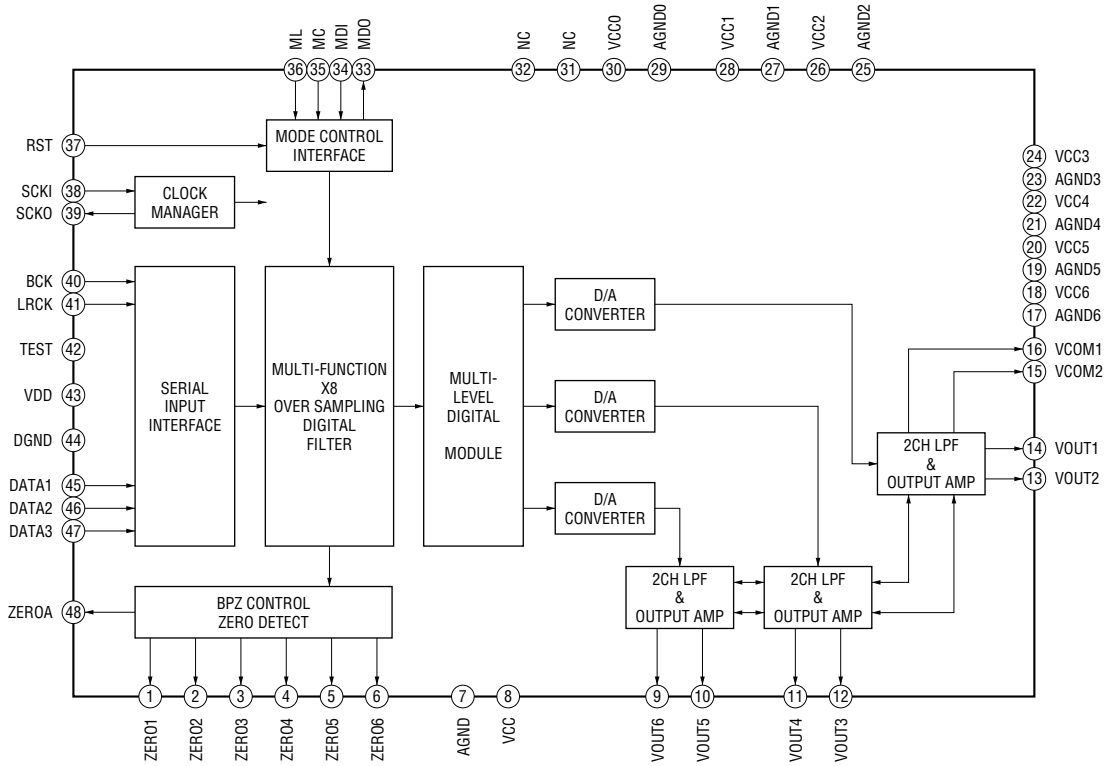

IC102 NJU3719L (DISPLAY BOARD)

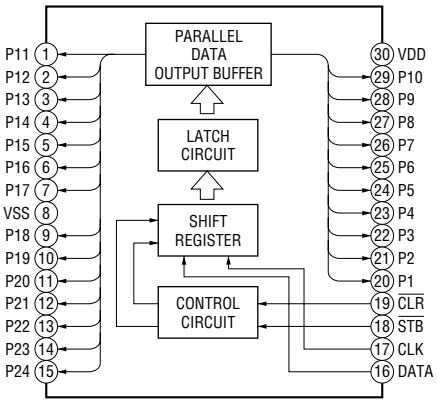

IC302 TC9273N-006 (MAIN BOARD)

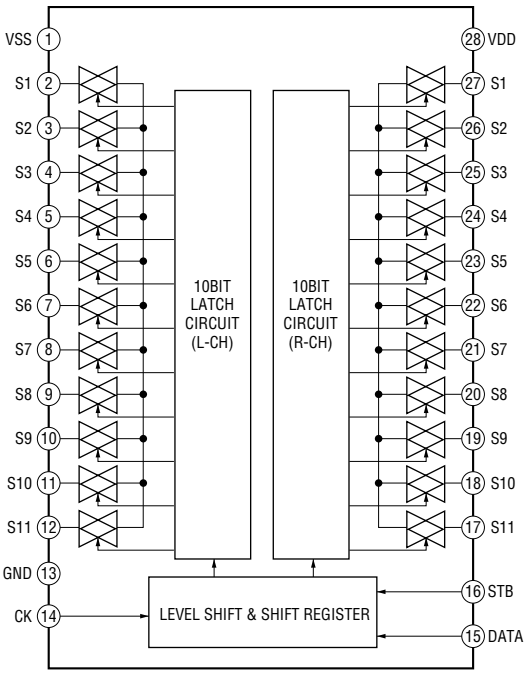

IC501 µPC2581V (MAIN BOARD)
IC551 µPC2581V (MAIN BOARD)

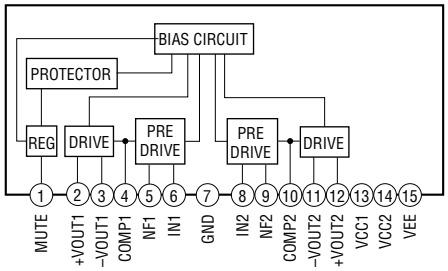

IC601 STK350-230 (MAIN BOARD)

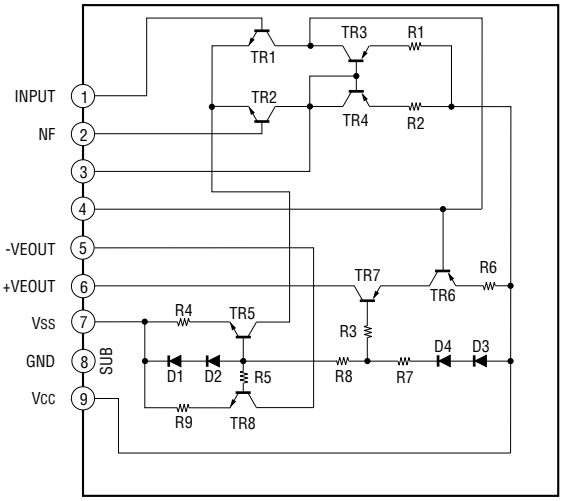

IC201 NJM2296D (S-VIDEO BOARD)
IC202 NJM2296D (S-VIDEO BOARD)
IC251 NJM2296D (VIDEO BOARD)

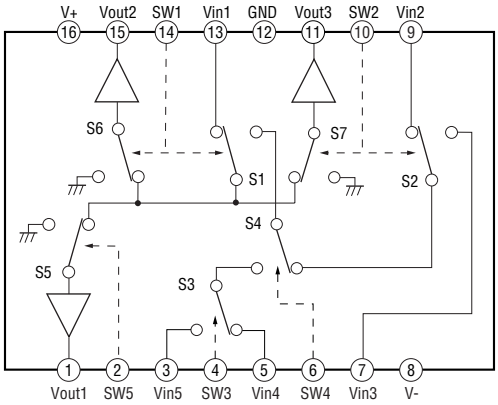

IC203 NJM2145D (S-VIDEO BOARD)

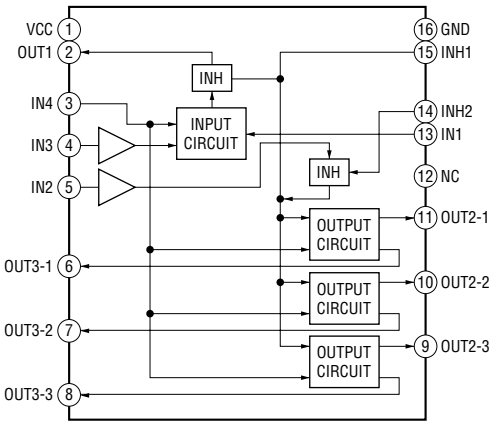

IC253 BA7622 (VIDEO BOARD (STR-DE975))

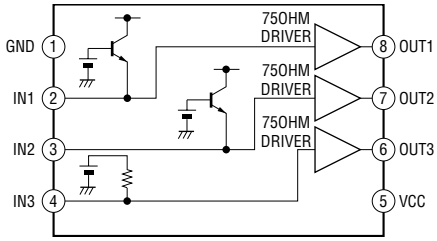

IC252 MB90089PF-G-237-BND (VIDEO BOARD (STR-DE975))

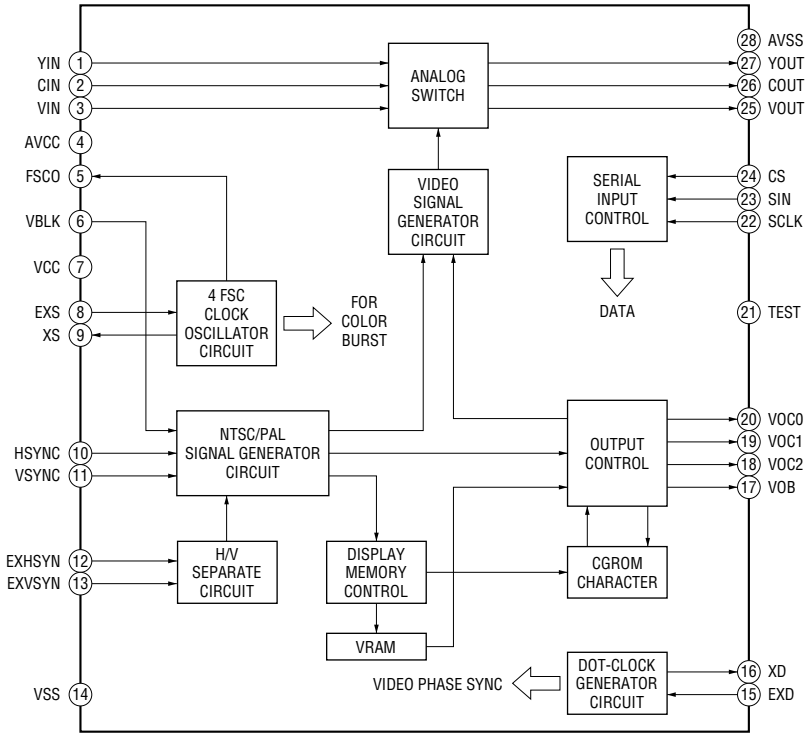

3-21. IC PIN FUNCTION DESCRIPTION

• IC1101 MB91154PMT2-G-101-E1 (SYSTEM CONTROLLER) (MAIN BOARD)

Pin No.	Pin Name	I/O	Description
1	2ND_RY	O	2nd audio relay control signal output
2	2ND_LAT	O	2nd audio switching IC latch signal output
3	2ND_CLK	O	Serial command clock signal output
4	2ND_DATA	O	Serial command data signal output
5	LED_DRV_CL	O	LED driver clear signal output
6	LED_DRV_CE	O	LED driver latch signal output
7	CURSOR_JOG_3A	I	Jog dial signal input from the rotary encoder
8	CURSOR_JOG_3B	I	Jog dial signal input from the rotary encoder
9	VSS	—	Ground
10	FUNCTION_JOG_1A	I	Jog dial signal input from the rotary encoder
11	FUNCTION_JOG_1B	I	Jog dial signal input from the rotary encoder
12	VOL_JOG_2B	I	Volume signal input from the rotary encoder
13	VOL_JOG_2A	I	Volume signal input from the rotary encoder
14	SPK_SEL	I	Speaker ON/OFF switch signal input
15	HP_RY	O	Headphone relay control signal output
16	SP_A_RY	O	Front speaker relay control signal output
17	CENTER_RY	O	Center speaker relay control signal output
18	REAR_RY	O	Rear speaker relay control signal output
19	WOOFER_RY	O	Sub woofer relay control signal output
20	PROTECTOR	I	Protector status detect signal input
21	HP_CTRL	I	Headphone switch detect signal input
22	PW_RY	O	Power relay control signal output
23	TUNER_STEREO	I	Stereo tuning signal input from the tuner
24	TUNER_AUTO_STOP	I	Tuner auto stop signal input from the tuner
25	TUNER_MUTE	O	Muting signal output to the tuner
26	VSS	—	Ground
27	VCC	—	Power supply
28	TUNER_DO	I	Frequency data signal input from the tuner
29	TUNER_SERIAL_CLK	O	Clock signal output to the tuner
30	T.DATA	O	Data signal output to the tuner
31	T.LAT	O	Latch signal output to the tuner
32	RDS_DATA	I	RDS data signal input from the tuner
33	V.SW1	O	Video switch 1 control signal output
34	V.SW2	O	Video switch 2 control signal output
35	V.SW3	O	Video switch 3 control signal output
36	V.SW4	O	Video switch 4 control signal output
37	P61	—	Connected to ground
38	P62	—	Connected to ground
39	P63	—	Connected to ground
40	P64/A20	—	Connected to ground
41	SUB-T	O	Sub-trans control signal output
42	TC74HC153_A	O	Digital select (IC TC74HC153) control signal output
43	DIR XMODE	O	XMODE signal output to DIR
44	VSS	—	Ground
45	DIR CKSEL1	O	CKSEL1 signal output to DIR
46	DIR CLK	O	Clock signal output to DIR
47	DSP1.HDOUT1	I	HDOUT1 signal input from DSP1
48	DSP1.PLL1	I	PLL1 signal input from DSP1
49	DSP2.GP3	I	GP3 signal input from DSP2
50	DSP2.EXLOCK	O	EXLOCK signal output to DSP2

Pin No.	Pin Name	I/O	Description
51	MBUS_STATUS_OUT	O	MBUS status signal output
52	MD2	I	Operation mode setting input
53	MD1	I	Operation mode setting input
54	MD0	I	Operation mode setting input
55	RSTX	I	Reset signal input
56	VCC	—	Power supply
57	X1	—	Connection for a crystal resonator
58	X0	—	Connection for a crystal resonator
59	VSS	—	Ground
60	VOLT_DETEC_STOP	I	AC off detect signal input
61	RDS_CLK	I	RDS clock signal input
62	PW_ON/OFF	I	Power switch key detect signal input
63	MBUS_TV	I	MBUS TV signal input
64	MBUS_DVD	I	MBUS DVD signal input
65	MBUS_VIDEO	I	MBUS VIDEO signal input
66	SIRCS	I	Data signal input from the remote control sensor
67	DIR CE	O	Chip enable signal output to DIR
68	VCC	—	Power supply
69	DI	O	Data signal output to DIR
70	D.DO	I	Data signal input from DIR
71	ERROR	I	PLL error muting signal input from DIR
72	DATAO	I	Audio data signal input from DIR
73	XSTATE	I	XSTATE data signal input from DIR
74	D2.XRST2	O	Reset signal output to DSP2
75	D2.BST2	O	BST signal output to DSP2
76	9616.PM2	O	PM2 signal output to DSP2
77	VCC	—	Power supply
78	9616.HACN2	I	HACN2 signal input from DSP2
79	9616.HCS2	O	HCS2 signal output to DSP2
80	9617.GP9	I	GP9 signal input from DSP1
81	9617.BST1	O	BST1 signal output to DSP1
82	9617.HCS1	O	HCS1 signal output to DSP1
83	9617.HACN1	I	HACN1 signal input from DSP1
84	9617.XRST1	O	Reset signal output to DSP1
85	9617.PM1	O	PM1 signal output to DSP1
86	A1 IN	I	Control A1 signal input
87	A1 OUT	O	Control A1 signal output
88	PCM1800.RST	O	Reset signal output to ADC
89	PCM1604.RST	O	Reset signal output to DAC
90	PCM1604.ML	O	Latch signal output to DAC
91	PCM1604.MC	O	Clock signal output to DAC
92	PCM1604.MDI	O	Data signal output to DAC
93	PCM1604.MDO	I	Data signal input from DAC
94	FLASH_A	I	Connected to ground
95	FLASH_B	I	Connected to ground
96	FLASH_C	I	Pull-up
97	VCC	—	Power supply
98	VSS	—	Ground
99	EEPROM.SDA	I/O	Data I/O terminal
100	EEPROM.SCL	O	Clock signal output to EEPROM

Pin No.	Pin Name	I/O	Description
101	VSS	—	Ground
102	9616.HCLK2	O	HCLK2 signal output to DSP2
103	HDIN2	O	HDIN2 signal output to DSP2
104	HDOUT2	I	HDOUT2 signal input from DSP2
105	OSD CLK	O	Clock signal output to OSD
106	OSD DATA	O	Data signal output to OSD
107	OSD LAT	O	Latch signal output to OSD
108	PLL2	I	PLL2 signal input from DSP2
109	SOT1	O	Terminal for FLASH programming
110	SIN1	I	Terminal for FLASH programming
111	FL CLK	O	Clock signal output to the FL tube driver
112	FL DIN/F1	O	Data signal output to the FL tube driver
113	FL LAT/F2	O	Latch signal output to the FL tube driver
114	FL DRV.CLR	O	Clear signal output to the FL tube driver
115	FREQ SEL	O	Frequency select signal output
116	VOL_IC.DATA	O	Control data signal output to the sound processor
117	VOL_IC.CLK	O	Clock signal output to the sound processor
118	VOL_IC.LAT	O	Latch signal output to the sound processor
119	AC MUTE	O	Muting signal output to the power amplifier
120	SYSTEM_MUTE	O	System muting signal output
121	ANG/DIG	O	Muting control signal output
122	VCC	—	Power supply
123	DA2	—	NC
124	DA1	—	NC
125	DA0	—	NC
126	DAVS	—	Connected to ground
127	DAVC	—	Connected to VCC
128	AVCC	—	Analog power supply
129	AVRH	—	Analog reference voltage input
130	AVRL	—	Analog reference voltage input
131	AVSS	—	Analog ground
132	AD1	I	Function key push signal input
133	AD2	I	Function key push signal input
134	AD3	I	Function key push signal input
135	AD4	I	Function key push signal input
136	AD5	I	Function key push signal input
137	MODEL	I	Version setting input (MODEL)
138	AREA	I	Version setting input (AREA)
139	RDS_SIGNAL	I	RDS signal detect input
140	VCC2	—	Power supply
141	BACKUP	—	Connected to VCC
142	X0A	—	Not used (connected to ground)
143	X1A	—	Not used
144	VSS	—	Ground

SECTION 4
EXPLODED VIEWS

NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Color Indication of Appearance Parts Example:
  KNOB, BALANCE (WHITE) . . . (RED)
  ↑ ↑
  Parts of Color Cabinet's Color
- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories and packing materials are given in the last of this parts list.
- Abbreviation
  CND : Canadian model
  MY : Malaysia model
  SP : Singapore model
  CH : Chinese model
  AUS : Australian model

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.
Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
以阴影和⚠标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

4-1. FRONT PANEL SECTION

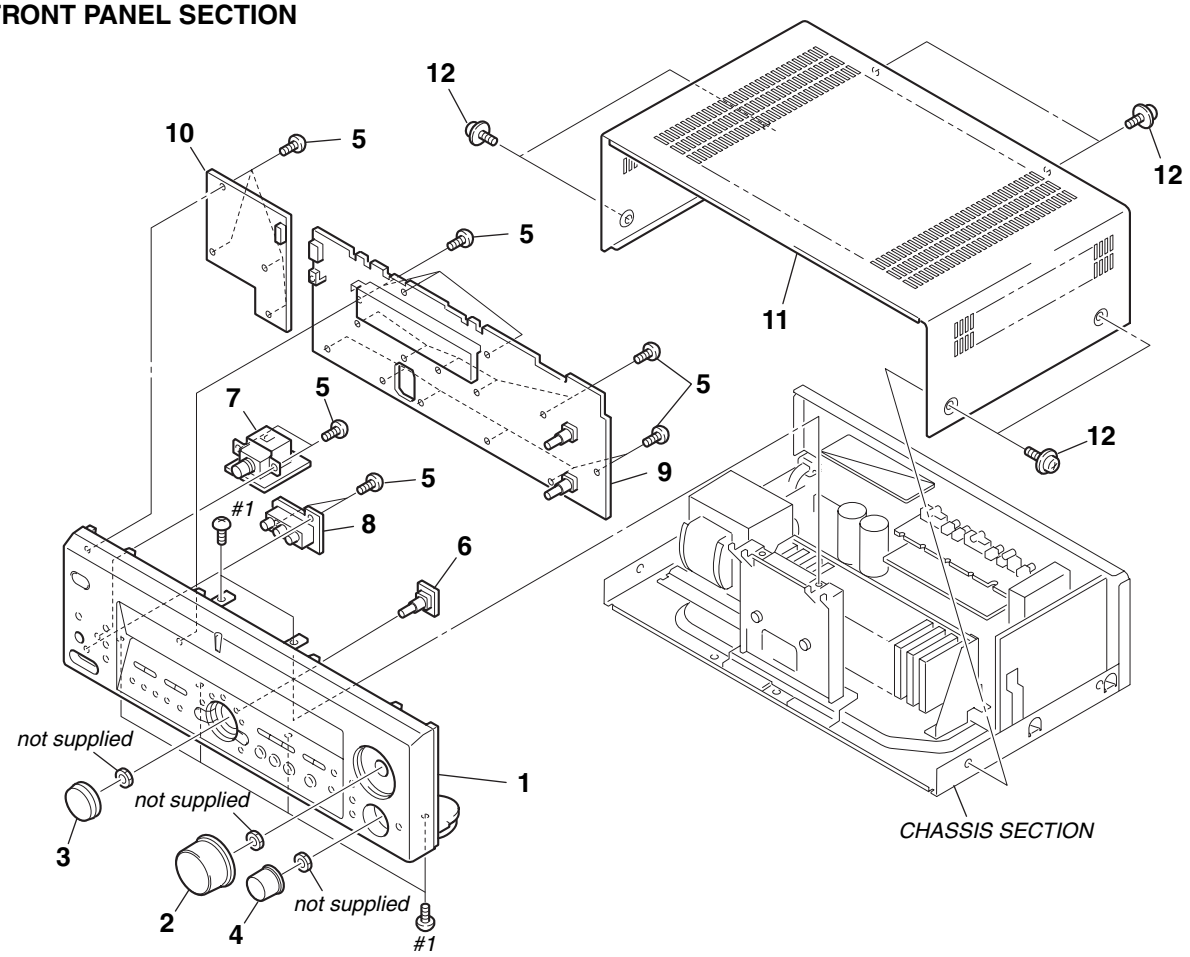

Ref. No.	Part No.	Description	Remarks
1	X-4953-522-1	FRONT PANEL ASSY (BLACK)(DE975:US)	
1	X-4953-592-1	FRONT PANEL ASSY (BLACK)(DE975:CND)	
1	X-4953-593-1	FRONT PANEL ASSY (BLACK)(DE875:US)	
1	X-4953-594-1	FRONT PANEL ASSY (BLACK)(DE875:CND)	
1	X-4953-595-1	FRONT PANEL ASSY (BLACK)(DE875:AUS,E)	
1	X-4953-597-1	FRONT PANEL ASSY (SILVER)(DE875:AEP,UK)	
1	X-4953-598-1	FRONT PANEL ASSY (GOLD)(DE875:MY,SP,CH)	
1	X-4953-599-1	FRONT PANEL ASSY (BLACK)(DE875:AEP,UK)	
2	4-232-113-01	KNOB (VOL)(BLACK) (DE875:US,CND,AEP,UK,E,AUS/DE975)	
2	4-232-113-11	KNOB (VOL)(SILVER)(DE875:AEP,UK)	
2	4-232-113-21	KNOB (VOL) (GOLD)(DE875:MY,SP,CH)	
3	4-232-239-01	KNOB (JOG)(BLACK) (DE875:US,CND,AEP,UK,E,AUS/DE975)	
3	4-232-239-11	KNOB (JOG) (GOLD)(DE875:MY,SP,CH)	
3	4-232-239-21	KNOB (JOG) (SILVER)(DE875:AEP,UK)	
4	4-232-569-01	KNOB (FN DE9) (BLACK)(DE875)	
4	4-232-569-11	KNOB (FN DE9) (GOLD)(DE875:MY,SP,CH)	
4	4-232-569-21	KNOB (FN DE9) (SILVER)(DE875:AEP,UK)	
5	4-951-620-01	SCREW (2.6X8), +BVTP	
6	1-680-591-11	JOG BOARD	
7	1-680-595-11	HEADPHONE BOARD	
8	1-680-592-11	VIDEO 3 BOARD (DE975)	
9	A-4476-066-A	DISPLAY BOARD, COMPLETE (DE975)	
9	A-4476-160-A	DISPLAY BOARD, COMPLETE (DE875)	
10	1-680-594-11	POWER SWITCH BOARD	
11	4-232-576-11	CASE (DE9)(BLACK) (DE875:US,CND,AEP,UK,E,AUS/DE975)	
11	4-232-576-31	CASE (DE9) (GOLD)(DE875:MY,SP,CH)	
11	4-232-576-51	CASE (DE9) (SILVER)(DE875:AEP,UK)	
12	4-210-291-01	SCREW (CASE 3 TP2) (FOR BLACK) (DE875:US,CND,AEP,UK,E,AUS/DE975)	
12	4-210-291-11	SCREW (CASE 3 TP2)(FOR SILVER,GOLD) (DE875:AEP,UK,MY,SP,CH)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

4-2. CHASSIS SECTION

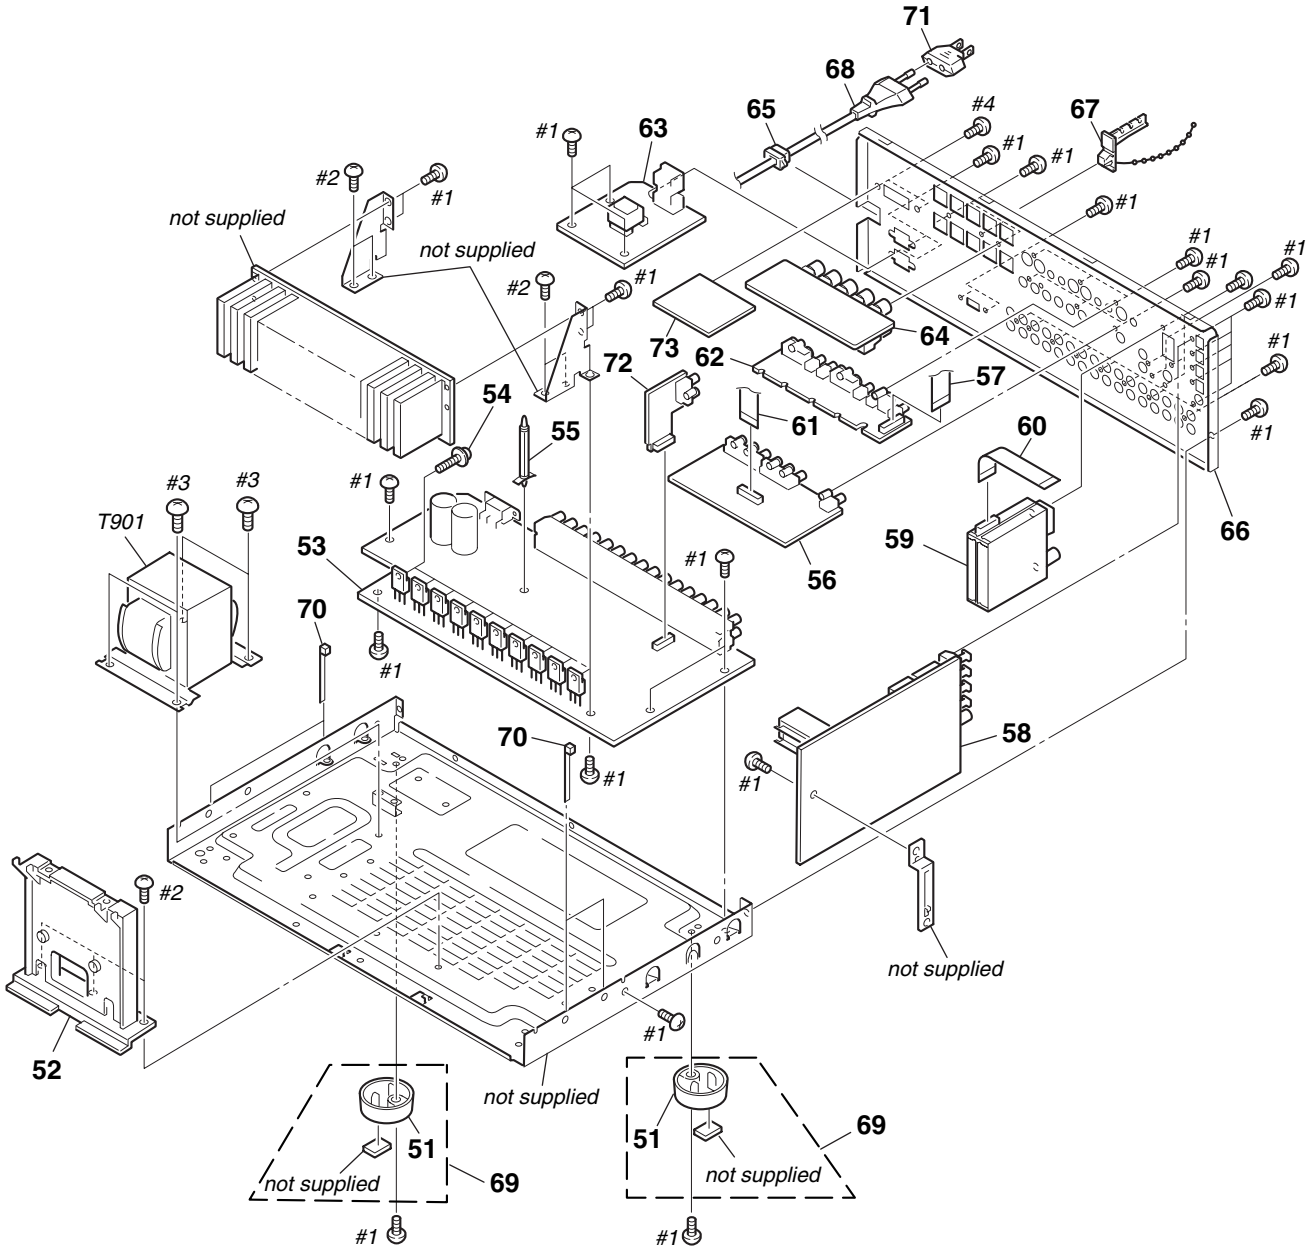

Ref. No.	Part No.	Description	Remarks
51	4-232-237-01	FOOT (DIA. 30)	
52	4-233-263-01	SUB MOLD (DE9)	
53	A-4476-056-A	MAIN BOARD, COMPLETE (DE975:US)	
53	A-4476-158-A	MAIN BOARD, COMPLETE (DE875:US)	
53	A-4476-165-A	MAIN BOARD, COMPLETE (DE875:CND)	
53	A-4476-168-A	MAIN BOARD, COMPLETE (DE875:AEP,UK,E,MY,SP,CH,AUS)	
53	A-4476-186-A	MAIN BOARD, COMPLETE (DE975:CND)	
54	3-905-609-01	SCREW (TRANSISTOR)	
55	4-232-574-01	BOARD HOLDER	
56	A-4476-069-A	VIDEO BOARD, COMPLETE (DE975)	
56	A-4476-162-A	VIDEO BOARD, COMPLETE (DE875)	
57	1-773-007-11	WIRE (FLAT TYPE) (15 CORE) (DE875)	
57	1-773-041-11	WIRE (FLAT TYPE) (17 CORE) (DE975)	
58	A-4476-062-A	DIGITAL BOARD, COMPLETE (DE975:US)	
58	A-4476-163-A	DIGITAL BOARD, COMPLETE (DE875:US)	
58	A-4476-166-A	DIGITAL BOARD, COMPLETE (DE875:CND)	
58	A-4476-171-A	DIGITAL BOARD, COMPLETE (DE875:AUS)	
58	A-4476-175-A	DIGITAL BOARD, COMPLETE (DE875:MY,SP,CH)	
58	A-4476-180-A	DIGITAL BOARD, COMPLETE (DE875:E)	
58	A-4476-187-A	DIGITAL BOARD, COMPLETE (DE975:CND)	
58	A-4476-189-A	DIGITAL BOARD, COMPLETE (DE875:AEP,UK)	
59	1-693-539-21	TUNER UNIT (DE875:US,CND/DE975)	
59	1-693-540-21	TUNER UNIT (DE875:AEP,UK,E,MY,SP,CH,AUS)	
60	1-773-002-11	WIRE (FLAT TYPE) (15 CORE)	
61	1-769-907-11	WIRE (FLAT TYPE) (9 CORE) (DE875)	
61	1-773-004-11	WIRE (FLAT TYPE) (15 CORE) (DE975)	
62	A-4476-058-A	S-VIDEO BOARD, COMPLETE (DE975)	
62	A-4476-159-A	S-VIDEO BOARD, COMPLETE (DE875:US,CND,E)	
62	A-4476-776-A	S-VIDEO BOARD, COMPLETE (DE875:AEP,UK,MY,SP,CH,AUS)	
63	A-4476-072-A	STANDBY BOARD, COMPLETE (DE875:US,CND/DE975)	
63	A-4476-170-A	STANDBY BAORD, COMPLETE (DE875:AUS)	
63	A-4476-174-A	STANDBY BOARD, COMPLETE (DE875:AEP,UK,MY,SP)	
63	A-4476-177-A	STANDBY BOARD, COMPLETE (DE875:CH)	
63	A-4476-179-A	STANDBY BOARD, COMPLETE (DE875:E)	
64	1-680-597-11	SPEAKER BOARD	
* 65	3-703-244-00	BUSHING (2104), CORD	
66	4-232-578-01	BACK PANEL (DE9)(DE975:US)	
66	4-232-578-11	BACK PANEL (DE9)(DE975:CND)	
66	4-233-045-01	BACK PANEL (DE8)(DE875:US)	
66	4-233-045-11	BACK PANEL (DE8)(DE875:CND)	
66	4-233-045-21	BACK PANEL (DE8)(DE875:AUS)	
66	4-233-045-31	BACK PANEL (DE8)(DE875:MY,SP)	
66	4-233-045-41	BACK PANEL (DE8)(DE875:CH)	
66	4-233-045-51	BACK PANEL (DE8)(DE875:E)	
66	4-233-045-61	BACK PANEL (DE8)(DE875:AEP)	
66	4-233-045-71	BACK PANEL (DE8)(DE875:UK)	
67	4-956-370-02	BAND, PLUG FIXED (DE875:AUS,UK)	
⚠68	1-696-847-11	CORD, POWER (DE875:AUS)	
⚠68	1-777-071-21	CORD, POWER (DE875:AEP,UK,E,MY,SP)	
⚠68	1-783-205-11	CORD, POWER (DE875:CH)	
⚠68	1-783-820-11	CORD, POWER (DE875:CND,US/DE975)	
69	X-4953-448-1	FOOT ASSY	
70	3-701-748-00	CLAMP	
⚠71	1-569-008-21	ADAPTOR, CONVERSION 2P (DE875:E)	
72	1-680-590-11	2ND AUDIO BOARD (DE975)	
73	1-680-589-11	AC SELECT BOARD (DE875:E)	
⚠T901	1-435-944-11	POWER TRANSFORMER (DE875:E)	
⚠T901	1-435-942-11	TRANSFORMER, POWER (DE875:AEP,UK,MY,SP,CH)	
⚠T901	1-435-943-11	TRANSFORMER, POWER (DE875:AUS)	
⚠T901	1-435-945-11	TRANSFORMER, POWER(DE875:US/DE975:US)	
⚠T901	1-435-946-11	TRANSFORMER, POWER (DE875:CND/DE975:CND)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
#2	7-685-645-79	SCREW +BVTP 3X6 TYPE2 N-S	
#3	7-685-880-09	SCREW +BVTT 4X6 (S)	
#4	7-685-871-01	SCREW +BVTT 3X6 (S)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性．因此只能以规定号码的零部件来更换．

SECTION 5
ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
  uF: µF
- RESISTORS
  All resistors are in ohms.
  METAL: metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F: nonflammable
- COILS
  uH: µH
- SEMICONDUCTORS
  In each case, u: µ, for example:
  uA...: µA... , uPA... , µPA... , uPB... , µPB... , uPC... , µPC... , uPD..., µPD...
- Abbreviation
  CND : Canadian model
  MY : Malaysia model
  SP : Singapore model
  CH : Chinese model
  AUS : Australian model

When indicating parts by reference number, please include the board name.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和⚠标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description			Remarks
	1-680-590-11	2ND AUDIO BOARD (DE975)			
		**********			
		< CAPACITOR >			
C711	1-126-965-11	ELECT	22uF	20.00%	50V (DE975)
C712	1-126-965-11	ELECT	22uF	20.00%	50V (DE975)
C713	1-127-880-11	CERAMIC	0.022uF	10%	50V (DE975)
C714	1-127-880-11	CERAMIC	0.022uF	10%	50V (DE975)
C715	1-164-159-11	CERAMIC	0.1uF		50V (DE975)
C761	1-126-965-11	ELECT	22uF	20.00%	50V (DE975)
C762	1-126-965-11	ELECT	22uF	20.00%	50V (DE975)
C763	1-127-880-11	CERAMIC	0.022uF	10%	50V (DE975)
C765	1-164-159-11	CERAMIC	0.1uF		50V (DE975)
		< CONNECTOR >			
CN816	1-784-041-11	CONNECTOR, BOARD TO BOARD 9P (DE975)			
		< DIODE >			
D781	8-719-911-19	DIODE 1SS133T-72 (DE975)			
		< IC >			
IC761	8-759-710-59	IC NJM4580D-D (DE975)			
		< JACK >			
J761	1-815-432-11	JACK, PIN 2P (2ND ROOM R/L)(DE975)			
		< TRANSISTOR >			
Q781	8-729-119-79	TRANSISTOR	2SC2785TP-FEK (DE975)		

Ref. No.	Part No.	Description			Remarks
		< RESISTOR >			
R711	1-247-887-00	CARBON	220K	5%	1/4W (DE975)
R712	1-247-887-00	CARBON	220K	5%	1/4W (DE975)
R713	1-249-441-11	CARBON	100K	5%	1/4W (DE975)
R714	1-247-807-31	CARBON	100	5%	1/4W (DE975)
R715	1-249-425-11	CARBON	4.7K	5%	1/4W F (DE975)
R761	1-247-887-00	CARBON	220K	5%	1/4W (DE975)
R762	1-247-887-00	CARBON	220K	5%	1/4W (DE975)
R763	1-249-441-11	CARBON	100K	5%	1/4W (DE975)
R764	1-247-807-31	CARBON	100	5%	1/4W (DE975)
R765	1-249-425-11	CARBON	4.7K	5%	1/4W F (DE975)
R781	1-249-437-11	CARBON	47K	5%	1/4W (DE975)
⚠R783	1-249-393-11	CARBON	10	5%	1/4W F (DE975)
		< RELAY >			
RY761	1-515-622-11	RELAY (DE975)			
**********					
	1-680-589-11	AC SELECT BOARD (DE875:E)			
		**********			
		< CONNECTOR >			
CNP907	1-568-106-11	PIN, CONNECTOR 4P (DE875:E)			
* CNP910	1-564-687-11	PIN, CONNECTOR 3P (DE875:E)			
		< FUSE >			
⚠F904	1-532-464-11	FUSE (TUBE TYPE) (TIME LAG) (2.5A 50V) (DE875:E)			
		< FUSE HOLDER >			
FH904	1-533-399-11	HOLDER, FUSE			

AC SELECT DIGITAL

Ref. No.	Part No.	Description			Remarks
		< SWITCH >			
⚠S901	1-571-437-11	SWITCH, POWER VOLTAGE CHANGE (VOLTAGE SELECTOR)(DE875:E)			
**********					
	A-4476-062-A	DIGITAL BOARD, COMPLETE (DE975:US)			
		**********			
	A-4476-163-A	DIGITAL BOARD, COMPLETE (DE875:US)			
		**********			
	A-4476-166-A	DIGITAL BOARD, COMPLETE (DE875:CND)			
		**********			
	A-4476-171-A	DIGITAL BOARD, COMPLETE (DE875:AUS)			
		**********			
	A-4476-175-A	DIGITAL BOARD, COMPLETE (DE875:MY,SP,CH)			
		**********			
	A-4476-180-A	DIGITAL BOARD, COMPLETE (DE875:E)			
		**********			
	A-4476-187-A	DIGITAL BOARD, COMPLETE (DE975:CND)			
		**********			
	A-4476-189-A	DIGITAL BOARD, COMPLETE (DE875:AEP,UK)			
		**********			
	7-685-871-01	SCREW +BVTT 3X6 (S)			
		< CAPACITOR >			
C1001	1-126-935-11	ELECT	470uF	20.00% 10V	
C1002	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1011	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1012	1-126-935-11	ELECT	470uF	20.00% 10V	
C1021	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1022	1-126-935-11	ELECT	470uF	20.00% 10V	
C1031	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1032	1-126-935-11	ELECT	470uF	20.00% 10V	
C1041	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1042	1-126-935-11	ELECT	470uF	20.00% 10V	
C1051	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1052	1-126-935-11	ELECT	470uF	20.00% 10V	
C1061	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1062	1-126-947-11	ELECT	47uF	20.00% 35V	
C1063	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1064	1-126-947-11	ELECT	47uF	20.00% 35V	
C1101	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1102	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1103	1-126-964-11	ELECT	10uF	20.00% 50V	
C1104	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1105	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1106	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1107	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1108	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1109	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1120	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1121	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1122	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1123	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1124	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1125	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1126	1-164-816-11	CERAMIC CHIP	220PF	2.00% 50V	
C1127	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1128	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1129	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1130	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1131	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1132	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1133	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1134	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1135	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1136	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1137	1-162-968-11	CERAMIC CHIP	0.0047uF	10% 50V	
C1138	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1139	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1140	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1141	1-164-156-11	CERAMIC CHIP	0.1uF	25V	
C1201	1-126-964-11	ELECT	10uF	20.00% 50V (DE875:AEP,UK)	
C1202	1-164-156-11	CERAMIC CHIP	0.1uF	25V (DE875:AEP,UK)	
C1203	1-126-964-11	ELECT	10uF	20.00% 50V (DE875:AEP,UK)	
C1204	1-115-416-11	CERAMIC CHIP	0.001uF	5.00% 25V (DE875:AEP,UK)	
C1205	1-164-156-11	CERAMIC CHIP	0.1uF	25V (DE875:AEP,UK)	
C1206	1-162-923-11	CERAMIC CHIP	47PF	5% 50V (DE875:AEP,UK)	
C1207	1-162-926-11	CERAMIC CHIP	82PF	5% 50V (DE875:AEP,UK)	
C1208	1-164-816-11	CERAMIC CHIP	220PF	2.00% 50V (DE875:AEP,UK)	
C1251	1-164-156-11	CERAMIC CHIP	0.1uF	25V	
C1252	1-164-156-11	CERAMIC CHIP	0.1uF	25V	
C1253	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1254	1-163-259-91	CERAMIC CHIP	220PF	5.00% 50V	
C1255	1-163-259-91	CERAMIC CHIP	220PF	5.00% 50V	
C1256	1-163-259-91	CERAMIC CHIP	220PF	5.00% 50V	
C1301	1-164-156-11	CERAMIC CHIP	0.1uF	25V	
C1302	1-162-974-11	CERAMIC CHIP	0.01uF	50V	
C1303	1-164-156-11	CERAMIC CHIP	0.1uF	25V	
C1304	1-162-974-11	CERAMIC CHIP	0.01uF	50V	
C1305	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1306	1-126-964-11	ELECT	10uF	20.00% 50V	
C1308	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1309	1-162-918-11	CERAMIC CHIP	18PF	5.00% 50V	
C1310	1-162-918-11	CERAMIC CHIP	18PF	5.00% 50V	
C1312	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1313	1-162-927-11	CERAMIC CHIP	100PF	5% 50V	
C1314	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1315	1-115-416-11	CERAMIC CHIP	0.001uF	5.00% 25V	
C1316	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1317	1-126-964-11	ELECT	10uF	20.00% 50V	
C1321	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1322	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1323	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1351	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1352	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1353	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1354	1-163-038-00	CERAMIC CHIP	0.1uF	25V	
C1355	1-126-965-11	ELECT	22uF	20.00% 50V	
C1356	1-162-966-11	CERAMIC CHIP	0.0022uF	10% 50V	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description			Remarks
C1357	1-162-905-11	CERAMIC CHIP	1PF	0.25PF	50V
C1358	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1359	1-126-964-11	ELECT	10uF	20.00%	50V
C1360	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C1401	1-104-663-11	ELECT	33uF	20.00%	25V
C1402	1-162-979-11	CERAMIC CHIP	0.0027uF	10.00%	50V
C1403	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C1405	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C1406	1-126-964-11	ELECT	10uF	20.00%	50V
C1407	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1411	1-104-663-11	ELECT	33uF	20.00%	25V
C1412	1-162-979-11	CERAMIC CHIP	0.0027uF	10.00%	50V
C1413	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C1414	1-126-964-11	ELECT	10uF	20.00%	50V
C1415	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C1421	1-104-663-11	ELECT	33uF	20.00%	25V
C1422	1-162-979-11	CERAMIC CHIP	0.0027uF	10.00%	50V
C1423	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C1424	1-126-964-11	ELECT	10uF	20.00%	50V
C1425	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C1431	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1432	1-126-964-11	ELECT	10uF	20.00%	50V
C1433	1-126-964-11	ELECT	10uF	20.00%	50V
C1434	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1435	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1436	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1437	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1438	1-126-964-11	ELECT	10uF	20.00%	50V
C1441	1-126-964-11	ELECT	10uF	20.00%	50V
C1442	1-126-964-11	ELECT	10uF	20.00%	50V
C1443	1-126-964-11	ELECT	10uF	20.00%	50V
C1444	1-164-315-11	CERAMIC CHIP	470PF	5.00%	50V
C1445	1-164-315-11	CERAMIC CHIP	470PF	5.00%	50V
C1446	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1447	1-126-964-11	ELECT	10uF	20.00%	50V
C1448	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1449	1-126-964-11	ELECT	10uF	20.00%	50V
C1451	1-104-663-11	ELECT	33uF	20.00%	25V
C1452	1-162-979-11	CERAMIC CHIP	0.0027uF	10.00%	50V
C1453	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C1454	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C1455	1-126-964-11	ELECT	10uF	20.00%	50V
C1461	1-104-663-11	ELECT	33uF	20.00%	25V
C1462	1-162-979-11	CERAMIC CHIP	0.0027uF	10.00%	50V
C1463	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C1464	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C1465	1-126-964-11	ELECT	10uF	20.00%	50V
C1471	1-104-663-11	ELECT	33uF	20.00%	25V
C1472	1-162-979-11	CERAMIC CHIP	0.0027uF	10.00%	50V
C1473	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C1474	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C1475	1-126-964-11	ELECT	10uF	20.00%	50V
C1491	1-126-964-11	ELECT	10uF	20.00%	50V
C1501	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1502	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1503	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1504	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1505	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1506	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1507	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1508	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1509	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1510	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1513	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1515	1-126-947-11	ELECT	47uF	20.00%	35V
C1516	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1517	1-126-947-11	ELECT	47uF	20.00%	35V
C1518	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1519	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1520	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1551	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1552	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1553	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1554	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1555	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1556	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1559	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1560	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1561	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1562	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1563	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1564	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1566	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C1567	1-126-947-11	ELECT	47uF	20.00%	35V
C1568	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C1569	1-126-947-11	ELECT	47uF	20.00%	35V
C1570	1-163-038-00	CERAMIC CHIP	0.1uF		25V

< CONNECTOR >

CNP503	1-784-923-11	PIN, CONNECTOR 7P
CNP504	1-794-000-11	CONNECTOR 19P
CNP505	1-793-997-11	CONNECTOR 13P
CNP506	1-779-799-11	PIN, CONNECTOR 9P
CNP507	1-784-925-11	PIN, CONNECTOR 10P
CNS501	1-778-227-11	CONNECTOR, BOARD TO BOARD 6P
CNS502	1-573-834-11	CONNECTOR, BOARD TO BOARD 20P
CNS508	1-569-321-11	SOCKET, CONNECTOR 15P
CNS509	1-568-440-11	SOCKET, CONNECTOR 17P (DE975)
CNS509	1-569-321-11	SOCKET, CONNECTOR 15P (DE875)

< DIODE >

D1001	8-719-053-18	DIODE 1SR154-400TE-25
D1102	8-719-016-74	DIODE 1SS352-TPH3
D1103	8-719-016-74	DIODE 1SS352-TPH3
D1105	8-719-820-04	DIODE 1SS184
D1301	8-719-016-74	DIODE 1SS352-TPH3
D1302	8-719-016-74	DIODE 1SS352-TPH3

DIGITAL

Ref. No.	Part No.	Description		Remarks
		< FERRITE BEAD >		
FB1101	1-414-813-11	FERRITE	0UH	
FB1301	1-414-813-11	FERRITE	0UH	
FB1302	1-414-813-11	FERRITE	0UH	
FB1303	1-469-152-11	FERRITE	0UH	
FB1304	1-469-152-11	FERRITE	0UH	
FB1305	1-469-152-11	FERRITE	0UH	
FB1306	1-414-813-11	FERRITE	0UH	
FB1307	1-414-813-11	FERRITE	0UH	
FB1308	1-414-813-11	FERRITE	0UH	
FB1431	1-414-813-11	FERRITE	0UH	
FB1501	1-414-813-11	FERRITE	0UH	
FB1502	1-414-813-11	FERRITE	0UH	
FB1551	1-469-152-11	FERRITE	0UH	
FB1552	1-469-152-11	FERRITE	0UH	
FB1553	1-414-813-11	FERRITE	0UH	
FB1554	1-414-813-11	FERRITE	0UH	
		< IC >		
IC1001	8-759-039-69	IC	uPC7805AHF	
IC1011	8-759-647-11	IC	uPC2905HF	
IC1021	8-759-647-10	IC	uPC2933HF	
IC1031	8-759-647-11	IC	uPC2905HF	
IC1041	8-759-647-10	IC	uPC2933HF	
IC1051	8-759-835-63	IC	NJM2391DL1-26-TE1	
IC1061	8-759-376-91	IC	uPC78M12AHF	
IC1071	8-759-647-10	IC	uPC2933HF	
IC1101	8-759-834-96	IC	MB91154PMT2-G-101-E1	
IC1111	8-759-714-20	IC	S-80929ANMP-DDS-T2	
IC1131	8-759-641-86	IC	BR24C16F-E2	
IC1141	8-759-491-33	IC	TC74VHCT08AF(EL) (DE975)	
IC1151	8-759-491-47	IC	TC74VHCT08AFT(EL)	
IC1161	8-759-491-47	IC	TC74VHCT08AFT(EL)	
IC1171	8-759-491-47	IC	TC74VHCT08AFT(EL)	
IC1201	8-759-557-36	IC	BU1924F-E2 (DE875:AEP,UK)	
IC1301	8-759-825-15	IC	LC89056W-E	
IC1302	8-759-595-15	IC	TC74ACT153AF(EL)	
IC1303	8-759-242-70	IC	TC7WU04F(TE12R)	
IC1304	8-759-546-74	IC	TC7WH157FU(TE12R)	
IC1305	8-759-447-77	IC	TC7WH74FU(TE12R)	
IC1306	8-759-242-70	IC	TC7WU04F(TE12R)	
IC1351	8-749-017-36	IC	TORX-179 (DIGITAL DVD/LD IN)	
IC1352	8-749-923-05	IC	TORX178B (DIGITAL TV/SAT IN)	
IC1353	8-749-923-05	IC	TORX178B (DIGITAL MD/TAPE IN)	
IC1354	8-749-923-04	IC	TOTX178A (DIGITAL MD/TAPE OUT)	
IC1401	8-759-560-56	IC	PCM1800E/2K	
IC1402	8-759-099-06	IC	M5218AFP-TE1	
IC1403	8-759-099-06	IC	M5218AFP-TE1	
IC1404	8-759-099-06	IC	M5218AFP-TE1	
IC1405	8-759-099-06	IC	M5218AFP-TE1	
IC1451	8-759-825-12	IC	PCM1604Y/2K	
IC1501	8-759-698-76	IC	CXD9617R	
IC1502	8-759-538-16	IC	IDT71V016S15PH-AUTL	
IC1551	8-759-698-77	IC	CXD9616R	
IC1552	8-759-538-16	IC	IDT71V016S15PH-AUTL	

Ref. No.	Part No.	Description				Remarks
		< JACK >				
J1301	1-778-228-11	JACK, PIN 1P (COAXIAL DVD/LD IN)				
		< JUMPER RESISTOR >				
JR1001	1-216-295-00	SHORT	0			
JR1002	1-216-295-00	SHORT	0			
JR1003	1-216-295-00	SHORT	0			
JR1161	1-216-295-00	SHORT	0			
JR1162	1-216-295-00	SHORT	0			
JR1163	1-216-295-00	SHORT	0			
JR1164	1-216-295-00	SHORT	0			
JR1171	1-216-295-00	SHORT	0			
JR1172	1-216-295-00	SHORT	0			
JR1173	1-216-295-00	SHORT	0			
JR1174	1-216-295-00	SHORT	0			
JR1501	1-216-295-00	SHORT	0			
JR1502	1-216-295-00	SHORT	0			
JR1551	1-216-295-00	SHORT	0			
JR1552	1-216-295-00	SHORT	0			
		< COIL >				
L1201	1-500-425-11	FERRITE	0uH (DE875:AEP,UK)			
		< TRANSISTOR >				
Q1101	8-729-230-49	TRANSISTOR	2SC2712-YG-TE85L			
Q1102	8-729-230-49	TRANSISTOR	2SC2712-YG-TE85L			
Q1103	8-729-027-43	TRANSISTOR	RT1N141C-TP-1			
Q1104	8-729-230-49	TRANSISTOR	2SC2712-YG-TE85L			
Q1105	8-729-230-49	TRANSISTOR	2SC2712-YG-TE85L			
Q1106	8-729-230-49	TRANSISTOR	2SC2712-YG-TE85L			
		< RESISTOR >				
R1063	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1064	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1065	1-414-813-11	FERRITE	0uH			
R1066	1-414-813-11	FERRITE	0uH			
R1067	1-414-813-11	FERRITE	0uH			
R1068	1-414-813-11	FERRITE	0uH			
R1071	1-216-073-00	RES-CHIP	10K	5%	1/10W	
R1072	1-216-073-00	RES-CHIP	10K	5%	1/10W	
R1073	1-216-073-00	RES-CHIP	10K	5%	1/10W	
R1081	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1082	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1083	1-216-073-00	RES-CHIP	10K	5%	1/10W	
R1084	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1085	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1086	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1087	1-216-025-11	RES-CHIP	100	5%	1/10W	
R1088	1-216-073-00	RES-CHIP	10K	5%	1/10W	
R1089	1-216-073-00	RES-CHIP	10K	5%	1/10W	
R1091	1-216-073-00	RES-CHIP	10K	5%	1/10W	(DE975)
R1092	1-216-051-00	METAL CHIP	1.2K	5%	1/10W	(DE975)

Ref. No.	Part No.	Description			Remarks
R1092	1-216-295-00	SHORT	0		(DE875)
R1093	1-216-073-00	RES-CHIP	10K	5%	1/10W
		(DE875:US,CND,E,MY,SP,CH,AUS/DE975)			
R1094	1-216-073-00	RES-CHIP	10K	5%	1/10W
		(DE875:US,CND,E,MY,SP,CH,AUS/DE975)			
R1095	1-216-073-00	RES-CHIP	10K	5%	1/10W
		(DE875:US,CND,E,MY,SP,CH,AUS/DE975)			
R1096	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1097	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1098	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1099	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1100	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1101	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1102	1-216-025-11	RES-CHIP	100	5%	1/10W
R1103	1-216-025-11	RES-CHIP	100	5%	1/10W
R1104	1-216-025-11	RES-CHIP	100	5%	1/10W
R1105	1-216-025-11	RES-CHIP	100	5%	1/10W
R1106	1-216-025-11	RES-CHIP	100	5%	1/10W
R1107	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1108	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1109	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1110	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1111	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1112	1-216-025-11	RES-CHIP	100	5%	1/10W
R1113	1-216-025-11	RES-CHIP	100	5%	1/10W
R1114	1-216-025-11	RES-CHIP	100	5%	1/10W
R1115	1-216-025-11	RES-CHIP	100	5%	1/10W
R1116	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1117	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1118	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1119	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1120	1-216-025-11	RES-CHIP	100	5%	1/10W
R1121	1-216-025-11	RES-CHIP	100	5%	1/10W
R1122	1-216-025-11	RES-CHIP	100	5%	1/10W
R1123	1-216-025-11	RES-CHIP	100	5%	1/10W
R1124	1-216-025-11	RES-CHIP	100	5%	1/10W
R1125	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1126	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1127	1-216-025-11	RES-CHIP	100	5%	1/10W
R1128	1-216-025-11	RES-CHIP	100	5%	1/10W
R1129	1-216-025-11	RES-CHIP	100	5%	1/10W
R1130	1-216-025-11	RES-CHIP	100	5%	1/10W
R1131	1-216-025-11	RES-CHIP	100	5%	1/10W
R1132	1-216-025-11	RES-CHIP	100	5%	1/10W
R1133	1-216-025-11	RES-CHIP	100	5%	1/10W
R1134	1-216-025-11	RES-CHIP	100	5%	1/10W
R1135	1-216-025-11	RES-CHIP	100	5%	1/10W
R1136	1-216-025-11	RES-CHIP	100	5%	1/10W
R1137	1-216-025-11	RES-CHIP	100	5%	1/10W
R1138	1-216-025-11	RES-CHIP	100	5%	1/10W
R1139	1-216-025-11	RES-CHIP	100	5%	1/10W
R1140	1-216-025-11	RES-CHIP	100	5%	1/10W
R1141	1-216-025-11	RES-CHIP	100	5%	1/10W
R1142	1-216-025-11	RES-CHIP	100	5%	1/10W
R1143	1-216-025-11	RES-CHIP	100	5%	1/10W
R1144	1-216-025-11	RES-CHIP	100	5%	1/10W
R1145	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1146	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R1147	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1148	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1149	1-216-025-11	RES-CHIP	100	5%	1/10W
R1150	1-216-025-11	RES-CHIP	100	5%	1/10W
R1151	1-216-025-11	RES-CHIP	100	5%	1/10W
R1152	1-216-025-11	RES-CHIP	100	5%	1/10W
R1153	1-216-025-11	RES-CHIP	100	5%	1/10W
R1154	1-216-025-11	RES-CHIP	100	5%	1/10W
R1155	1-216-025-11	RES-CHIP	100	5%	1/10W
R1156	1-216-025-11	RES-CHIP	100	5%	1/10W
R1157	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1158	1-216-061-00	RES-CHIP	3.3K	5%	1/10W
R1159	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1160	1-216-025-11	RES-CHIP	100	5%	1/10W
R1161	1-216-025-11	RES-CHIP	100	5%	1/10W
R1162	1-216-025-11	RES-CHIP	100	5%	1/10W
R1163	1-216-025-11	RES-CHIP	100	5%	1/10W
R1164	1-216-025-11	RES-CHIP	100	5%	1/10W
R1165	1-216-025-11	RES-CHIP	100	5%	1/10W
R1167	1-216-025-11	RES-CHIP	100	5%	1/10W
R1168	1-216-025-11	RES-CHIP	100	5%	1/10W
R1169	1-216-025-11	RES-CHIP	100	5%	1/10W
R1170	1-216-025-11	RES-CHIP	100	5%	1/10W
R1171	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1172	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1173	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1174	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1175	1-216-025-11	RES-CHIP	100	5%	1/10W
R1176	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1177	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1178	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1179	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1180	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1181	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1182	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1183	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1184	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1185	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1187	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1188	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1189	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1190	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1191	1-216-025-11	RES-CHIP	100	5%	1/10W
R1192	1-216-025-11	RES-CHIP	100	5%	1/10W
R1193	1-216-025-11	RES-CHIP	100	5%	1/10W
R1194	1-216-025-11	RES-CHIP	100	5%	1/10W
R1195	1-216-025-11	RES-CHIP	100	5%	1/10W
R1196	1-216-025-11	RES-CHIP	100	5%	1/10W
R1197	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1198	1-216-073-00	RES-CHIP	10K	5%	1/10W
			(DE875:AEP,UK,E,MY,SP,CH,AUS)		
R1199	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
					(DE875:E)
R1199	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
				(DE875:MY,SP,CH,AUS)	
R1199	1-216-073-00	RES-CHIP	10K	5%	1/10W
				(DE875:AEP,UK)	
R1199	1-216-295-00	SHORT	0	(DE875:US,CND/DE975)	
R1200	1-216-073-00	RES-CHIP	10K	5%	1/10W

DIGITAL

Ref. No.	Part No.	Description			Remarks
R1201	1-216-025-11	RES-CHIP	100	5%	1/10W (DE875:AEP,UK)
R1202	1-216-057-00	METAL CHIP	2.2K	5%	1/10W (DE875:AEP,UK)
R1203	1-216-025-11	RES-CHIP	100	5%	1/10W (DE875:AEP,UK)
R1251	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R1252	1-216-689-11	METAL CHIP	39K	0.5%	1/10W
R1260	1-216-295-00	SHORT	0		
R1261	1-216-295-00	SHORT	0		
R1301	1-216-067-00	METAL CHIP	5.6K	5%	1/10W
R1302	1-216-065-00	RES-CHIP	4.7K	5%	1/10W
R1303	1-216-085-00	RES-CHIP	33K	5%	1/10W
R1304	1-216-025-11	RES-CHIP	100	5%	1/10W
R1305	1-216-025-11	RES-CHIP	100	5%	1/10W
R1306	1-216-025-11	RES-CHIP	100	5%	1/10W
R1307	1-216-025-11	RES-CHIP	100	5%	1/10W
R1308	1-216-025-11	RES-CHIP	100	5%	1/10W
R1309	1-216-025-11	RES-CHIP	100	5%	1/10W
R1310	1-216-121-11	RES-CHIP	1M	5%	1/10W
R1311	1-216-025-11	RES-CHIP	100	5%	1/10W
R1312	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1313	1-216-025-11	RES-CHIP	100	5%	1/10W
R1314	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1315	1-216-025-11	RES-CHIP	100	5%	1/10W
R1316	1-216-025-11	RES-CHIP	100	5%	1/10W
R1317	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1318	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1319	1-216-025-11	RES-CHIP	100	5%	1/10W
R1320	1-249-407-11	CARBON	150	5%	1/4W F
R1321	1-215-888-00	METAL OXIDE	220	5%	2W
R1322	1-216-025-11	RES-CHIP	100	5%	1/10W
R1351	1-216-025-11	RES-CHIP	100	5%	1/10W
R1352	1-216-025-11	RES-CHIP	100	5%	1/10W
R1353	1-216-025-11	RES-CHIP	100	5%	1/10W
R1354	1-216-025-11	RES-CHIP	100	5%	1/10W
R1355	1-216-022-00	METAL CHIP	75	5%	1/10W
R1356	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1357	1-216-081-00	METAL CHIP	22K	5%	1/10W
R1358	1-216-115-00	METAL CHIP	560K	5%	1/10W
R1359	1-216-025-11	RES-CHIP	100	5%	1/10W
R1360	1-216-025-11	RES-CHIP	100	5%	1/10W
R1401	1-216-077-00	RES-CHIP	15K	5%	1/10W
R1402	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1403	1-216-077-00	RES-CHIP	15K	5%	1/10W
R1405	1-216-025-11	RES-CHIP	100	5%	1/10W
R1411	1-216-077-00	RES-CHIP	15K	5%	1/10W
R1412	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1413	1-216-077-00	RES-CHIP	15K	5%	1/10W
R1421	1-216-077-00	RES-CHIP	15K	5%	1/10W
R1422	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1423	1-216-077-00	RES-CHIP	15K	5%	1/10W
R1431	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1432	1-216-025-11	RES-CHIP	100	5%	1/10W
R1433	1-216-025-11	RES-CHIP	100	5%	1/10W
R1434	1-216-025-11	RES-CHIP	100	5%	1/10W
R1442	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1443	1-216-085-00	RES-CHIP	33K	5%	1/10W

Ref. No.	Part No.	Description			Remarks
R1444	1-216-085-00	RES-CHIP	33K	5%	1/10W
R1451	1-216-077-00	RES-CHIP	15K	5%	1/10W
R1452	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1453	1-216-077-00	RES-CHIP	15K	5%	1/10W
R1461	1-216-077-00	RES-CHIP	15K	5%	1/10W
R1462	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1463	1-216-077-00	RES-CHIP	15K	5%	1/10W
R1471	1-216-077-00	RES-CHIP	15K	5%	1/10W
R1472	1-216-049-11	RES-CHIP	1K	5%	1/10W
R1473	1-216-077-00	RES-CHIP	15K	5%	1/10W
R1492	1-216-097-11	RES-CHIP	100K	5%	1/10W
R1493	1-216-085-00	RES-CHIP	33K	5%	1/10W
R1494	1-216-085-00	RES-CHIP	33K	5%	1/10W
R1501	1-216-025-11	RES-CHIP	100	5%	1/10W
R1502	1-216-025-11	RES-CHIP	100	5%	1/10W
R1503	1-216-025-11	RES-CHIP	100	5%	1/10W
R1504	1-216-025-11	RES-CHIP	100	5%	1/10W
R1505	1-216-025-11	RES-CHIP	100	5%	1/10W
R1506	1-216-025-11	RES-CHIP	100	5%	1/10W
R1507	1-216-025-11	RES-CHIP	100	5%	1/10W
R1508	1-216-025-11	RES-CHIP	100	5%	1/10W
R1509	1-216-025-11	RES-CHIP	100	5%	1/10W
R1510	1-216-025-11	RES-CHIP	100	5%	1/10W
R1511	1-216-025-11	RES-CHIP	100	5%	1/10W
R1512	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1513	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1514	1-216-025-11	RES-CHIP	100	5%	1/10W
R1515	1-216-121-11	RES-CHIP	1M	5%	1/10W
R1517	1-216-025-11	RES-CHIP	100	5%	1/10W
R1518	1-216-025-11	RES-CHIP	100	5%	1/10W
R1519	1-216-025-11	RES-CHIP	100	5%	1/10W
R1520	1-216-025-11	RES-CHIP	100	5%	1/10W
R1521	1-216-025-11	RES-CHIP	100	5%	1/10W
R1522	1-216-025-11	RES-CHIP	100	5%	1/10W
R1525	1-216-025-11	RES-CHIP	100	5%	1/10W
R1526	1-216-025-11	RES-CHIP	100	5%	1/10W
R1553	1-216-025-11	RES-CHIP	100	5%	1/10W
R1554	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1556	1-216-025-11	RES-CHIP	100	5%	1/10W
R1557	1-216-025-11	RES-CHIP	100	5%	1/10W
R1558	1-216-025-11	RES-CHIP	100	5%	1/10W
R1559	1-216-025-11	RES-CHIP	100	5%	1/10W
R1560	1-216-025-11	RES-CHIP	100	5%	1/10W
R1561	1-216-025-11	RES-CHIP	100	5%	1/10W
R1562	1-216-025-11	RES-CHIP	100	5%	1/10W
R1563	1-216-025-11	RES-CHIP	100	5%	1/10W
R1564	1-216-073-00	RES-CHIP	10K	5%	1/10W
R1565	1-216-025-11	RES-CHIP	100	5%	1/10W
R1566	1-216-121-11	RES-CHIP	1M	5%	1/10W
R1567	1-216-025-11	RES-CHIP	100	5%	1/10W
R1568	1-216-025-11	RES-CHIP	100	5%	1/10W
R1569	1-216-025-11	RES-CHIP	100	5%	1/10W
R1570	1-216-025-11	RES-CHIP	100	5%	1/10W
R1571	1-216-025-11	RES-CHIP	100	5%	1/10W
R1572	1-216-025-11	RES-CHIP	100	5%	1/10W]

Ref. No.	Part No.	Description			Remarks
R1573	1-216-025-11	RES-CHIP	100	5%	1/10W
R1576	1-216-025-11	RES-CHIP	100	5%	1/10W
R1577	1-216-025-11	RES-CHIP	100	5%	1/10W
R1578	1-216-025-11	RES-CHIP	100	5%	1/10W
R1579	1-216-025-11	RES-CHIP	100	5%	1/10W
		< VIBRATOR >			
X1101	1-795-179-21	VIBRATOR, CERAMIC		(16.5MHz)	
X1201	1-781-536-11	VIBRATOR, CRYSTAL		(4.33MHz) (DE875:AEP,UK)	
X1301	1-795-219-21	VIBRATOR, CRYSTAL		(24.576MHz)	
X1501	1-795-297-21	VIBRATOR, CERAMIC		(13.59MHz)	
X1551	1-795-264-21	VIBRATOR, CERAMIC		(13.5MHz)	
**********					
	A-4476-066-A	DISPLAY BOARD, COMPLETE (DE975) **********			
	A-4476-160-A	DISPLAY BOARD, COMPLETE (DE875) **********			
*	4-955-901-01	CUSHION (FL)			
*	4-990-797-01	HOLDER (FL)			
		< CAPACITOR >			
C101	1-164-159-11	CERAMIC	0.1uF		50V
C111	1-164-159-11	CERAMIC	0.1uF		50V
C121	1-164-159-11	CERAMIC	0.1uF		50V
C131	1-164-159-11	CERAMIC	0.1uF		50V
C141	1-164-159-11	CERAMIC	0.1uF		50V
C161	1-164-159-11	CERAMIC	0.1uF		50V
C162	1-164-159-11	CERAMIC	0.1uF		50V
C181	1-128-809-11	CERAMIC	100PF	5%	50V
C182	1-128-809-11	CERAMIC	100PF	5%	50V
C183	1-164-159-11	CERAMIC	0.1uF		50V
C184	1-128-131-11	ELECT	22uF	20.00%	50V
C188	1-126-947-11	ELECT	47uF	20.00%	35V
C191	1-128-809-11	CERAMIC	100PF	5%	50V
C192	1-128-131-11	ELECT	22uF	20.00%	50V
C193	1-164-159-11	CERAMIC	0.1uF		50V
C194	1-164-159-11	CERAMIC	0.1uF		50V
C195	1-128-131-11	ELECT	22uF	20.00%	50V
		< CONNECTOR >			
CNP101	1-794-000-11	CONNECTOR 19P			
CNP105	1-794-002-11	CONNECTOR 13P			
CNP106	1-779-978-11	PIN, CONNECTOR 3P			
* CNS103	1-565-480-11	CONNECTOR, BOARD TO BOARD 4P			
		< DIODE >			
D101	8-719-084-07	DIODE SEL5E20CTP15 (MULTI CHANNEL DECODING)			
D102	8-719-075-59	DIODE SELS5B23C-TP15 (Digital Cinema Sound)			
D103	8-719-046-39	DIODE SEL5821A-TP15 (VIDEO1)			
D104	8-719-046-39	DIODE SEL5821A-TP15 (VIDEO2)			
D105	8-719-046-39	DIODE SEL5821A-TP15 (VIDEO3)			
D106	8-719-046-39	DIODE SEL5821A-TP15 (TV/SAT)			
D107	8-719-046-39	DIODE SEL5821A-TP15 (DVD/LD)			
D108	8-719-046-39	DIODE SEL5821A-TP15 (6.1CH DECODING)			
D109	8-719-046-39	DIODE SEL5821A-TP15 (2CH)			
D110	8-719-046-39	DIODE SEL5821A-TP15 (MODE)			

Ref. No.	Part No.	Description	Remarks
D111	8-719-046-39	DIODE SEL5821A-TP15 (A.F.D.)	
D112	8-719-046-39	DIODE SEL5821A-TP15 (NAME)	
D113	8-719-046-39	DIODE SEL5821A-TP15 (SET UP)	
D114	8-719-046-39	DIODE SEL5821A-TP15 (LEVEL)	
D115	8-719-046-39	DIODE SEL5821A-TP15 (SURR)	
D116	8-719-046-39	DIODE SEL5821A-TP15 (EQ)	
D117	8-719-046-39	DIODE SEL5821A-TP15 (MULTI /2CH A. DIRECT)	
		< FILTER >	
FL101	1-518-737-11	INDICATOR TUBE, FLUORESCENT	
		< IC >	
IC101	8-759-679-75	IC ML9261MB	
IC102	8-759-373-50	IC NJU3719L	
IC103	8-759-459-85	IC NJL63H400A (R)	
		< RESISTOR >	
R102	1-249-417-11	CARBON 1K 5% 1/4W F	
R103	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R104	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R105	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R106	1-249-429-11	CARBON 10K 5% 1/4W	
R107	1-249-433-11	CARBON 22K 5% 1/4W	
R112	1-249-417-11	CARBON 1K 5% 1/4W F	
R113	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R114	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R115	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R116	1-249-429-11	CARBON 10K 5% 1/4W	
R117	1-249-433-11	CARBON 22K 5% 1/4W	
R118	1-249-437-11	CARBON 47K 5% 1/4W (DE975)	
R122	1-249-417-11	CARBON 1K 5% 1/4W F	
R123	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R124	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R125	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R126	1-249-429-11	CARBON 10K 5% 1/4W	
R127	1-249-433-11	CARBON 22K 5% 1/4W	
R132	1-249-417-11	CARBON 1K 5% 1/4W F	
R133	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R134	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R135	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R136	1-249-429-11	CARBON 10K 5% 1/4W	
R142	1-249-417-11	CARBON 1K 5% 1/4W F	
R143	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R144	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R161	1-249-403-11	CARBON 68 5% 1/4W F	
R162	1-249-429-11	CARBON 10K 5% 1/4W	
R163	1-249-407-11	CARBON 150 5% 1/4W F	
R164	1-249-407-11	CARBON 150 5% 1/4W F	
R165	1-249-407-11	CARBON 150 5% 1/4W F	
R166	1-249-407-11	CARBON 150 5% 1/4W F	
R167	1-249-407-11	CARBON 150 5% 1/4W F	
R168	1-249-407-11	CARBON 150 5% 1/4W F	

DISPLAY | HEADPHONE | JOG | MAIN

Ref. No.	Part No.	Description			Remarks
R169	1-249-407-11	CARBON	150	5%	1/4W F
R170	1-249-407-11	CARBON	150	5%	1/4W F
R171	1-249-407-11	CARBON	150	5%	1/4W F
R172	1-249-407-11	CARBON	150	5%	1/4W F
R173	1-249-429-11	CARBON	10K	5%	1/4W
R181	1-249-417-11	CARBON	1K	5%	1/4W F
R182	1-249-417-11	CARBON	1K	5%	1/4W F
R183	1-249-437-11	CARBON	47K	5%	1/4W
R184	1-247-807-31	CARBON	100	5%	1/4W
R185	1-247-807-31	CARBON	100	5%	1/4W
R186	1-249-393-11	CARBON	10	5%	1/4W F
R187	1-249-429-11	CARBON	10K	5%	1/4W
R191	1-249-437-11	CARBON	47K	5%	1/4W
R192	1-247-807-31	CARBON	100	5%	1/4W
R193	1-247-807-31	CARBON	100	5%	1/4W
R194	1-247-807-31	CARBON	100	5%	1/4W
R195	1-247-807-31	CARBON	100	5%	1/4W
⚠R198	1-249-389-11	CARBON	4.7	5%	1/4W F
⚠R199	1-249-389-11	CARBON	4.7	5%	1/4W F
		< VARIABLE RESISTOR >			
RV101	1-418-725-41	ENCODER, ROTARY (12 TYPE) (MASTER VOLUME)			
RV102	1-476-980-11	ENCODER (FUNCTION)			
		< SWITCH >			
S101	1-762-875-21	SWITCH, TACTILE (EQUALIZER)			
S102	1-762-875-21	SWITCH, TACTILE (MULTI /2CH A. DIRECT)			
S103	1-762-875-21	SWITCH, TACTILE (SOUND FIELD 2CH)			
S104	1-762-875-21	SWITCH, TACTILE (CINEMA STUDIO EX B)			
S105	1-762-875-21	SWITCH, TACTILE (SOUND FIELD MODE)			
S106	1-762-875-21	SWITCH, TACTILE (CINEMA STUDIO EX A)			
S107	1-762-875-21	SWITCH, TACTILE (SOUND FIELD A.F.D.)			
S111	1-762-875-21	SWITCH, TACTILE (MODE)			
S112	1-762-875-21	SWITCH, TACTILE (INPUT MODE)			
S113	1-762-875-21	SWITCH, TACTILE (MUTING)			
S114	1-762-875-21	SWITCH, TACTILE (DIGITAL CONCERT HALL A)			
S115	1-762-875-21	SWITCH, TACTILE (6.1CH DECODING)			
S116	1-762-875-21	SWITCH, TACTILE (DIGITAL CONCERT HALL B)			
S117	1-762-875-21	SWITCH, TACTILE (CINEMA STUDIO EX C)			
S118	1-762-875-21	SWITCH, TACTILE (2ND ROOM)(DE975)			
S121	1-762-875-21	SWITCH, TACTILE (EQ)			
S122	1-762-875-21	SWITCH, TACTILE (SURR)			
S123	1-762-875-21	SWITCH, TACTILE (LEVEL)			
S124	1-762-875-21	SWITCH, TACTILE (NAME)			
S125	1-762-875-21	SWITCH, TACTILE (SET UP)			
S126	1-762-875-21	SWITCH, TACTILE (<)			
S127	1-762-875-21	SWITCH, TACTILE (ENTER)			
S131	1-762-875-21	SWITCH, TACTILE (>)			
S132	1-762-875-21	SWITCH, TACTILE (FM MODE)			
S133	1-762-875-21	SWITCH, TACTILE (AM)			
S134	1-762-875-21	SWITCH, TACTILE (PRESET TUNING -)			
S135	1-762-875-21	SWITCH, TACTILE (TUNING +)			
S136	1-762-875-21	SWITCH, TACTILE (PRESET TUNING +)			
S141	1-762-875-21	SWITCH, TACTILE (FM)			
S142	1-762-875-21	SWITCH, TACTILE (SHIFT)			
S143	1-762-875-21	SWITCH, TACTILE (TUNING -)			

Ref. No.	Part No.	Description			Remarks
S144	1-762-875-21	SWITCH, TACTILE (MEMORY)			
**********					
	1-680-595-11	HEADPHONE BOARD			
		**********			
		< CAPACITOR >			
C702	1-164-159-11	CERAMIC	0.1uF		50V
		< DIODE >			
D702	8-719-118-50	DIODE RD3.6F-T7B2			
		< JACK >			
J701	1-815-313-21	JACK (PHONES)(BLACK) (DE875:US,CND,AEP,UK,E,AUS/DE975)(GOLD)(DE875:MY,SP,CH)			
J701	1-815-314-21	JACK (PHONES)(SILVER)(DE875:AEP,UK)			
**********					
	1-680-591-11	JOG BOARD			
		*********			
		< VARIABLE RESISTOR >			
RV103	1-418-817-11	ENCODER, ROTARY (JOG DIAL)			
**********					
	A-4476-056-A	MAIN BOARD, COMPLETE (DE975:US)			
		**********			
	A-4476-158-A	MAIN BOARD, COMPLETE (DE875:US)			
		**********			
	A-4476-165-A	MAIN BOARD, COMPLETE (DE875:CND)			
		**********			
	A-4476-168-A	MAIN BOARD, COMPLETE (DE875:AEP,UK,E,MY,SP,CH,AUS)			
		**********			
	A-4476-186-A	MAIN BOARD, COMPLETE (DE975:CND)			
		**********			
		< CAPACITOR >			
C301	1-128-809-11	CERAMIC	100PF	5%	50V
C302	1-128-813-11	CERAMIC	220PF	5%	50V
C303	1-126-961-11	ELECT	2.2uF	20.00%	50V
C304	1-126-934-11	ELECT	220uF	20.00%	10V
C305	1-128-809-11	CERAMIC	100PF	5%	50V
C306	1-125-896-91	MYLAR	0.0091uF	5.00%	50V
C307	1-136-159-00	FILM	0.033uF	5.00%	50V
C308	1-126-961-11	ELECT	2.2uF	20.00%	50V
C309	1-128-817-11	CERAMIC	470PF	5%	50V
C310	1-128-821-11	CERAMIC	1000PF	5%	50V
C311	1-126-964-11	ELECT	10uF	20.00%	50V
C312	1-126-964-11	ELECT	10uF	20.00%	50V
C313	1-126-964-11	ELECT	10uF	20.00%	50V (DE975)
C314	1-126-964-11	ELECT	10uF	20.00%	50V
C315	1-126-964-11	ELECT	10uF	20.00%	50V
C316	1-126-964-11	ELECT	10uF	20.00%	50V
C317	1-126-964-11	ELECT	10uF	20.00%	50V
C318	1-126-964-11	ELECT	10uF	20.00%	50V
C319	1-126-964-11	ELECT	10uF	20.00%	50V
C320	1-126-964-11	ELECT	10uF	20.00%	50V

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description			Remarks
C321	1-128-809-11	CERAMIC	100PF	5%	50V
C322	1-126-964-11	ELECT	10uF	20.00%	50V
C323	1-128-809-11	CERAMIC	100PF	5%	50V
C324	1-128-809-11	CERAMIC	100PF	5%	50V
C325	1-126-964-11	ELECT	10uF	20.00%	50V
C326	1-128-809-11	CERAMIC	100PF	5%	50V
C327	1-128-809-11	CERAMIC	100PF	5%	50V
C328	1-128-809-11	CERAMIC	100PF	5%	50V
C341	1-128-809-11	CERAMIC	100PF	5%	50V
C342	1-128-817-11	CERAMIC	470PF	5%	50V
C343	1-128-817-11	CERAMIC	470PF	5%	50V
C351	1-128-809-11	CERAMIC	100PF	5%	50V
C352	1-128-813-11	CERAMIC	220PF	5%	50V
C353	1-126-961-11	ELECT	2.2uF	20.00%	50V
C354	1-126-934-11	ELECT	220uF	20.00%	10V
C355	1-128-809-11	CERAMIC	100PF	5%	50V
C356	1-125-896-91	MYLAR	0.0091uF	5.00%	50V
C357	1-136-159-00	FILM	0.033uF	5.00%	50V
C358	1-126-961-11	ELECT	2.2uF	20.00%	50V
C359	1-128-817-11	CERAMIC	470PF	5%	50V
C360	1-128-821-11	CERAMIC	1000PF	5%	50V
C361	1-126-964-11	ELECT	10uF	20.00%	50V
C362	1-126-964-11	ELECT	10uF	20.00%	50V
C363	1-126-964-11	ELECT	10uF	20.00%	50V (DE975)
C364	1-126-964-11	ELECT	10uF	20.00%	50V
C365	1-126-964-11	ELECT	10uF	20.00%	50V
C366	1-126-964-11	ELECT	10uF	20.00%	50V
C367	1-126-964-11	ELECT	10uF	20.00%	50V
C368	1-126-964-11	ELECT	10uF	20.00%	50V
C369	1-126-964-11	ELECT	10uF	20.00%	50V
C370	1-126-964-11	ELECT	10uF	20.00%	50V
C372	1-126-964-11	ELECT	10uF	20.00%	50V
C375	1-126-964-11	ELECT	10uF	20.00%	50V
C391	1-164-159-11	CERAMIC	0.1uF		50V
C392	1-126-964-11	ELECT	10uF	20.00%	50V
C393	1-126-964-11	ELECT	10uF	20.00%	50V
C394	1-128-809-11	CERAMIC	100PF	5%	50V
C397	1-128-809-11	CERAMIC	100PF	5%	50V
C399	1-164-159-11	CERAMIC	0.1uF		50V
C400	1-126-964-11	ELECT	10uF	20.00%	50V
C401	1-126-964-11	ELECT	10uF	20.00%	50V
C402	1-126-964-11	ELECT	10uF	20.00%	50V
C403	1-128-809-11	CERAMIC	100PF	5%	50V
C411	1-126-963-11	ELECT	4.7uF	20.00%	50V
C412	1-128-809-11	CERAMIC	100PF	5%	50V
C413	1-128-809-11	CERAMIC	100PF	5%	50V
C414	1-102-233-00	CERAMIC	33PF	10.00%	500V
C415	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C416	1-104-665-11	ELECT	100uF	20.00%	10V
C421	1-126-947-11	ELECT	47uF	20.00%	35V
C426	1-128-813-11	CERAMIC	220PF	5%	50V
C427	1-136-157-00	FILM	0.022uF	5.00%	50V
C428	1-126-964-11	ELECT	10uF	20.00%	50V
C451	1-126-964-11	ELECT	10uF	20.00%	50V
C452	1-126-964-11	ELECT	10uF	20.00%	50V
C453	1-128-809-11	CERAMIC	100PF	5%	50V
C461	1-126-963-11	ELECT	4.7uF	20.00%	50V
C462	1-128-809-11	CERAMIC	100PF	5%	50V
C463	1-128-809-11	CERAMIC	100PF	5%	50V
C464	1-102-233-00	CERAMIC	33PF	10.00%	500V
C465	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C466	1-104-665-11	ELECT	100uF	20.00%	10V
C467	1-106-355-12	MYLAR	3300PF	5%	200V
C468	1-106-355-12	MYLAR	3300PF	5%	200V
C471	1-126-947-11	ELECT	47uF	20.00%	35V
C476	1-128-813-11	CERAMIC	220PF	5%	50V
C477	1-136-157-00	FILM	0.022uF	5.00%	50V
C478	1-126-964-11	ELECT	10uF	20.00%	50V
C501	1-126-964-11	ELECT	10uF	20.00%	50V
C502	1-126-964-11	ELECT	10uF	20.00%	50V
C503	1-128-809-11	CERAMIC	100PF	5%	50V
C511	1-126-963-11	ELECT	4.7uF	20.00%	50V
C512	1-128-809-11	CERAMIC	100PF	5%	50V
C513	1-128-809-11	CERAMIC	100PF	5%	50V
C514	1-102-233-00	CERAMIC	33PF	10.00%	500V
C515	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C516	1-104-665-11	ELECT	100uF	20.00%	10V
C521	1-126-947-11	ELECT	47uF	20.00%	35V
C526	1-128-813-11	CERAMIC	220PF	5%	50V
C527	1-136-157-00	FILM	0.022uF	5.00%	50V
C528	1-126-964-11	ELECT	10uF	20.00%	50V
C551	1-126-964-11	ELECT	10uF	20.00%	50V
C552	1-126-964-11	ELECT	10uF	20.00%	50V
C553	1-128-809-11	CERAMIC	100PF	5%	50V
C561	1-126-963-11	ELECT	4.7uF	20.00%	50V
C562	1-128-809-11	CERAMIC	100PF	5%	50V
C563	1-128-809-11	CERAMIC	100PF	5%	50V
C564	1-102-233-00	CERAMIC	33PF	10.00%	500V
C565	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C566	1-104-665-11	ELECT	100uF	20.00%	10V
C571	1-126-947-11	ELECT	47uF	20.00%	35V
C576	1-128-813-11	CERAMIC	220PF	5%	50V
C577	1-136-157-00	FILM	0.022uF	5.00%	50V
C578	1-126-964-11	ELECT	10uF	20.00%	50V
C601	1-126-964-11	ELECT	10uF	20.00%	50V
C602	1-126-964-11	ELECT	10uF	20.00%	50V
C603	1-128-809-11	CERAMIC	100PF	5%	50V
C611	1-126-963-11	ELECT	4.7uF	20.00%	50V
C612	1-128-809-11	CERAMIC	100PF	5%	50V
C613	1-104-665-11	ELECT	100uF	20.00%	10V
C614	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C615	1-102-989-00	CERAMIC	68PF	5.00%	500V
C616	1-102-989-00	CERAMIC	68PF	5.00%	500V
C621	1-126-947-11	ELECT	47uF	20.00%	35V
C626	1-128-813-11	CERAMIC	220PF	5%	50V
C627	1-136-157-00	FILM	0.022uF	5.00%	50V
C628	1-126-964-11	ELECT	10uF	20.00%	50V
C651	1-126-964-11	ELECT	10uF	20.00%	50V
C652	1-126-964-11	ELECT	10uF	20.00%	50V
C653	1-128-809-11	CERAMIC	100PF	5%	50V

MAIN

Ref. No.	Part No.	Description			Remarks
C663	1-102-233-00	CERAMIC	33PF	10.00%	500V
C664	1-126-963-11	ELECT	4.7uF	20.00%	50V
C721	1-128-579-11	ELECT	2.2uF	20.00%	100V
C731	1-128-809-11	CERAMIC	100PF	5%	50V
C741	1-128-582-11	ELECT	10uF	20.00%	100V
C742	1-128-582-11	ELECT	10uF	20.00%	100V
C751	1-126-934-11	ELECT	220uF	20.00%	10V
C752	1-126-964-11	ELECT	10uF	20.00%	50V
C801	1-135-851-21	MYLAR	0.22uF		100V
C802	1-135-851-21	MYLAR	0.22uF		100V
C803	1-109-932-11	ELECT(BLOCK)	10000uF	20.00%	71V
C804	1-109-932-11	ELECT(BLOCK)	10000uF	20.00%	71V
C805	1-126-947-11	ELECT	47uF	20.00%	35V
C806	1-126-947-11	ELECT	47uF	20.00%	35V
C807	1-104-664-11	ELECT	47uF	20.00%	25V
C808	1-107-935-11	ELECT	330uF	20.00%	100V
C809	1-164-159-11	CERAMIC	0.1uF		50V
C811	1-164-159-11	CERAMIC	0.1uF		50V
C812	1-164-159-11	CERAMIC	0.1uF		50V
C813	1-126-947-11	ELECT	47uF	20.00%	35V
C814	1-126-947-11	ELECT	47uF	20.00%	35V
C816	1-164-159-11	CERAMIC	0.1uF		50V
C817	1-126-947-11	ELECT	47uF	20.00%	35V
C818	1-164-159-11	CERAMIC	0.1uF		50V
CC01	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC02	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC03	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC04	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC05	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC06	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC07	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC08	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC09	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC10	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC11	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC12	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC13	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC14	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC15	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC51	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC52	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC53	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC54	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC55	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC56	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC57	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC58	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC59	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC60	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC61	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC62	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC63	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC64	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)
CC65	1-128-809-11	CERAMIC	100PF	5%	50V (DE875:AEP,UK,E,MY,SP,CH,AUS)

< CONNECTOR >

CNP801	1-785-103-11	PIN, CONNECTOR 5P
CNP802	1-691-765-11	PLUG (MICRO CONNECTOR) 3P
CNP803	1-766-201-11	SOCKET, CONNECTOR PIN 11P
CNP806	1-779-978-11	PIN, CONNECTOR 3P
CNP808	1-764-863-11	CONNECTOR, BOARD TO BOARD 20P
CNP809	1-779-978-11	PIN, CONNECTOR 3P (DE975)
CNP810	1-778-226-21	CONNECTOR, BOARD TO BOARD 6P
CNP811	1-784-038-11	CONNECTOR, BOARD TO BOARD 9P (DE975)

< DIODE >

D425	8-719-911-19	DIODE 1SS133T-72
D426	8-719-911-19	DIODE 1SS133T-72
D431	8-719-911-19	DIODE 1SS133T-72
D432	8-719-911-19	DIODE 1SS133T-72
D475	8-719-911-19	DIODE 1SS133T-72
D476	8-719-911-19	DIODE 1SS133T-72
D525	8-719-911-19	DIODE 1SS133T-72
D526	8-719-911-19	DIODE 1SS133T-72
D531	8-719-911-19	DIODE 1SS133T-72
D532	8-719-911-19	DIODE 1SS133T-72
D575	8-719-911-19	DIODE 1SS133T-72
D576	8-719-911-19	DIODE 1SS133T-72
D625	8-719-911-19	DIODE 1SS133T-72
D626	8-719-911-19	DIODE 1SS133T-72
D631	8-719-911-19	DIODE 1SS133T-72
D632	8-719-911-19	DIODE 1SS133T-72
D681	8-719-911-19	DIODE 1SS133T-72
D701	8-719-911-19	DIODE 1SS133T-72
D751	8-719-911-19	DIODE 1SS133T-72
D752	8-719-911-19	DIODE 1SS133T-72

Ref. No.	Part No.	Description	Remarks
D753	8-719-911-19	DIODE 1SS133T-72	
D801	8-719-072-05	DIODE RBV-602LF-A	
D802	8-719-934-21	DIODE HZS30-1LTA	
D803	8-719-118-70	DIODE RD6.8F-T7B3	
D804	8-719-024-99	DIODE 11ES2-NTA2B	
D805	8-719-024-99	DIODE 11ES2-NTA2B	
D811	8-719-043-76	DIODE AK04V1	
		< IC >	
IC301	8-759-636-74	IC M5218AP-22	
IC302	8-759-712-73	IC TC9273N-006	
IC303	8-759-827-92	IC M61511FP	
IC304	8-759-636-74	IC M5218AP-22	
IC305	8-759-636-74	IC M5218AP-22	
IC501	8-759-326-52	IC uPC2581V	
IC551	8-759-326-52	IC uPC2581V	
IC601	8-749-011-16	IC STK350-230	
IC811	8-759-605-00	IC M5F78M07L	
IC812	8-759-604-95	IC M5F79M07L	
IC814	8-759-039-69	IC uPC7805AHF	
IC815	8-759-701-65	IC NJM79M05FA	
		< JACK >	
J301	1-770-614-11	JACK, PIN 4P (PHONO/CD/SACD IN)	
J302	1-770-614-11	JACK, PIN 4P (MD/DAT IN/OUT)	
J303	1-770-614-11	JACK, PIN 4P (TAPE IN/OUT)(DE975)	
J304	1-770-614-11	JACK, PIN 4P (AUDIO IN TV/SAT/DVD/LD)	
J305	1-770-614-11	JACK, PIN 4P (VIDEO2 AUDIO IN/OUT)	
J306	1-779-380-11	JACK, PIN 6P (VIDEO1 AUDIO IN/OUT, SUB WOOFER)	
J307	1-779-380-11	JACK, PIN 6P (MULTI CH IN)	
		< TRANSISTOR >	
Q401	8-729-823-22	TRANSISTOR 2SC3576-AC	
Q421	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
Q422	8-729-141-30	TRANSISTOR 2SC3623ATP-LK	
Q423	8-729-051-92	TRANSISTOR 2SD2560 (DE975)	
Q423	8-749-010-25	TRANSISTOR MN2488-OPY-M (DE875)	
Q424	8-729-051-93	TRANSISTOR 2SB1647 (DE975)	
Q424	8-749-010-26	TRANSISTOR MP1620-OPY-M (DE875)	
Q425	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q426	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q427	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q431	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q451	8-729-823-22	TRANSISTOR 2SC3576-AC	
Q471	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
Q472	8-729-141-30	TRANSISTOR 2SC3623ATP-LK	
Q473	8-729-051-92	TRANSISTOR 2SD2560 (DE975)	
Q473	8-749-010-25	TRANSISTOR MN2488-OPY-M (DE875)	
Q474	8-729-051-93	TRANSISTOR 2SB1647 (DE975)	
Q474	8-749-010-26	TRANSISTOR MP1620-OPY-M (DE875)	
Q475	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q476	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q477	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q501	8-729-823-22	TRANSISTOR 2SC3576-AC	
Q521	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
Q522	8-729-141-30	TRANSISTOR 2SC3623ATP-LK	
Q523	8-729-051-92	TRANSISTOR 2SD2560 (DE975)	

Ref. No.	Part No.	Description	Remarks
Q523	8-749-010-25	TRANSISTOR MN2488-OPY-M (DE875)	
Q524	8-729-051-93	TRANSISTOR 2SB1647 (DE975)	
Q524	8-749-010-26	TRANSISTOR MP1620-OPY-M (DE875)	
Q525	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q526	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q527	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q531	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q551	8-729-823-22	TRANSISTOR 2SC3576-AC	
Q571	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
Q572	8-729-141-30	TRANSISTOR 2SC3623ATP-LK	
Q573	8-729-051-92	TRANSISTOR 2SD2560 (DE975)	
Q573	8-749-010-25	TRANSISTOR MN2488-OPY-M (DE875)	
Q574	8-729-051-93	TRANSISTOR 2SB1647 (DE975)	
Q574	8-749-010-26	TRANSISTOR MP1620-OPY-M (DE875)	
Q575	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q576	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q577	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q601	8-729-823-22	TRANSISTOR 2SC3576-AC	
Q621	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
Q622	8-729-141-30	TRANSISTOR 2SC3623ATP-LK	
Q623	8-729-051-92	TRANSISTOR 2SD2560 (DE975)	
Q623	8-749-010-25	TRANSISTOR MN2488-OPY-M (DE875)	
Q624	8-729-051-93	TRANSISTOR 2SB1647 (DE975)	
Q624	8-749-010-26	TRANSISTOR MP1620-OPY-M (DE875)	
Q625	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q626	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q627	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q631	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q651	8-729-823-22	TRANSISTOR 2SC3576-AC	
Q681	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q701	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q721	8-729-900-36	TRANSISTOR BA1F4M-TP	
Q722	8-729-900-63	TRANSISTOR BN1F4M-TP	
Q723	8-729-900-63	TRANSISTOR BN1F4M-TP	
Q724	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q751	8-729-119-79	TRANSISTOR 2SC2785TP-FEK	
Q752	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
Q753	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
Q771	8-729-900-63	TRANSISTOR BN1F4M-TP	
Q801	8-729-026-68	TRANSISTOR 2SD2525(TP)	
Q821	8-729-823-22	TRANSISTOR 2SC3576-AC	
		< RESISTOR >	
R302	1-249-441-11	CARBON 100K 5% 1/4W	
R303	1-249-440-11	CARBON 82K 5% 1/4W	
R304	1-249-408-11	CARBON 180 5% 1/4W	F
R305	1-249-428-11	CARBON 8.2K 5% 1/4W	F
R306	1-249-441-11	CARBON 100K 5% 1/4W	
R307	1-247-807-31	CARBON 100 5% 1/4W	
R308	1-249-441-11	CARBON 100K 5% 1/4W	
R309	1-249-413-11	CARBON 470 5% 1/4W	F
R311	1-249-417-11	CARBON 1K 5% 1/4W	F
R313	1-249-417-11	CARBON 1K 5% 1/4W	F

MAIN

Ref. No.	Part No.	Description			Remarks
R315	1-249-417-11	CARBON	1K	5%	1/4W F
R317	1-249-417-11	CARBON	1K	5%	1/4W F (DE975)
R318	1-249-417-11	CARBON	1K	5%	1/4W F (DE975)
R321	1-249-417-11	CARBON	1K	5%	1/4W F
R322	1-249-437-11	CARBON	47K	5%	1/4W
R323	1-249-417-11	CARBON	1K	5%	1/4W F
R324	1-249-437-11	CARBON	47K	5%	1/4W
R325	1-249-417-11	CARBON	1K	5%	1/4W F
R326	1-249-437-11	CARBON	47K	5%	1/4W
R327	1-249-417-11	CARBON	1K	5%	1/4W F
R328	1-249-437-11	CARBON	47K	5%	1/4W
R329	1-249-417-11	CARBON	1K	5%	1/4W F
R330	1-249-437-11	CARBON	47K	5%	1/4W
R331	1-249-417-11	CARBON	1K	5%	1/4W F
R332	1-249-437-11	CARBON	47K	5%	1/4W
R333	1-249-417-11	CARBON	1K	5%	1/4W F
R335	1-249-417-11	CARBON	1K	5%	1/4W F
R336	1-249-437-11	CARBON	47K	5%	1/4W
R337	1-249-417-11	CARBON	1K	5%	1/4W F
R338	1-249-437-11	CARBON	47K	5%	1/4W
R339	1-249-417-11	CARBON	1K	5%	1/4W F
R340	1-249-437-11	CARBON	47K	5%	1/4W
R341	1-249-417-11	CARBON	1K	5%	1/4W F
R352	1-249-441-11	CARBON	100K	5%	1/4W
R353	1-249-440-11	CARBON	82K	5%	1/4W
R354	1-249-408-11	CARBON	180	5%	1/4W F
R355	1-249-428-11	CARBON	8.2K	5%	1/4W F
R356	1-249-441-11	CARBON	100K	5%	1/4W
R357	1-247-807-31	CARBON	100	5%	1/4W
R358	1-249-441-11	CARBON	100K	5%	1/4W
R359	1-249-413-11	CARBON	470	5%	1/4W F
R361	1-249-417-11	CARBON	1K	5%	1/4W F
R363	1-249-417-11	CARBON	1K	5%	1/4W F
R365	1-249-417-11	CARBON	1K	5%	1/4W F
R367	1-249-417-11	CARBON	1K	5%	1/4W F (DE975)
R368	1-249-417-11	CARBON	1K	5%	1/4W F (DE975)
R371	1-249-417-11	CARBON	1K	5%	1/4W F
R372	1-249-437-11	CARBON	47K	5%	1/4W
R373	1-249-417-11	CARBON	1K	5%	1/4W F
R374	1-249-437-11	CARBON	47K	5%	1/4W
R375	1-249-417-11	CARBON	1K	5%	1/4W F
R376	1-249-437-11	CARBON	47K	5%	1/4W
R377	1-249-417-11	CARBON	1K	5%	1/4W F
R378	1-249-437-11	CARBON	47K	5%	1/4W
R379	1-249-417-11	CARBON	1K	5%	1/4W F
R380	1-249-437-11	CARBON	47K	5%	1/4W
R381	1-249-417-11	CARBON	1K	5%	1/4W F
R382	1-249-437-11	CARBON	47K	5%	1/4W
R383	1-249-417-11	CARBON	1K	5%	1/4W F
R385	1-249-417-11	CARBON	1K	5%	1/4W F
R386	1-249-437-11	CARBON	47K	5%	1/4W
R387	1-249-417-11	CARBON	1K	5%	1/4W F
R388	1-249-437-11	CARBON	47K	5%	1/4W
R389	1-249-417-11	CARBON	1K	5%	1/4W F
R390	1-249-437-11	CARBON	47K	5%	1/4W
R391	1-249-417-11	CARBON	1K	5%	1/4W F
R392	1-249-417-11	CARBON	1K	5%	1/4W F
R393	1-249-417-11	CARBON	1K	5%	1/4W F
R395	1-249-437-11	CARBON	47K	5%	1/4W
R396	1-249-429-11	CARBON	10K	5%	1/4W
R401	1-249-417-11	CARBON	1K	5%	1/4W F
R402	1-249-441-11	CARBON	100K	5%	1/4W
R403	1-249-429-11	CARBON	10K	5%	1/4W
R411	1-249-417-11	CARBON	1K	5%	1/4W F
R412	1-249-439-11	CARBON	68K	5%	1/4W
R415	1-249-439-11	CARBON	68K	5%	1/4W
R416	1-249-417-11	CARBON	1K	5%	1/4W F
R421	1-249-440-11	CARBON	82K	5%	1/4W
R422	1-249-421-11	CARBON	2.2K	5%	1/4W F
⚠R423	1-249-408-11	CARBON	180	5%	1/4W F
R424	1-249-414-11	CARBON	560	5%	1/4W F
⚠R425	1-249-408-11	CARBON	180	5%	1/4W F
R426	1-249-425-11	CARBON	4.7K	5%	1/4W F
R427	1-247-850-11	CARBON	6.2K	5%	1/4W
⚠R428	1-234-182-11	ENCAPSULATED COMPONENT			
R429	1-249-419-11	CARBON	1.5K	5%	1/4W F
R430	1-247-881-00	CARBON	120K	5%	1/4W
⚠R431	1-249-393-11	CARBON	10	5%	1/4W F
R432	1-249-437-11	CARBON	47K	5%	1/4W
R434	1-249-431-11	CARBON	15K	5%	1/4W
R435	1-249-435-11	CARBON	33K	5%	1/4W
R436	1-249-431-11	CARBON	15K	5%	1/4W
R437	1-249-433-11	CARBON	22K	5%	1/4W
R438	1-249-433-11	CARBON	22K	5%	1/4W
R439	1-249-425-11	CARBON	4.7K	5%	1/4W F
R451	1-249-417-11	CARBON	1K	5%	1/4W F
R452	1-249-441-11	CARBON	100K	5%	1/4W
R453	1-249-429-11	CARBON	10K	5%	1/4W
R461	1-249-417-11	CARBON	1K	5%	1/4W F
R462	1-249-439-11	CARBON	68K	5%	1/4W
R465	1-249-439-11	CARBON	68K	5%	1/4W
R466	1-249-417-11	CARBON	1K	5%	1/4W F
R471	1-249-440-11	CARBON	82K	5%	1/4W
R472	1-249-421-11	CARBON	2.2K	5%	1/4W F
⚠R473	1-249-408-11	CARBON	180	5%	1/4W F
R474	1-249-414-11	CARBON	560	5%	1/4W F
⚠R475	1-249-408-11	CARBON	180	5%	1/4W F
R476	1-249-425-11	CARBON	4.7K	5%	1/4W F
R477	1-247-850-11	CARBON	6.2K	5%	1/4W
⚠R478	1-234-182-11	ENCAPSULATED COMPONENT			
R479	1-249-419-11	CARBON	1.5K	5%	1/4W F
R480	1-247-881-00	CARBON	120K	5%	1/4W
⚠R481	1-249-393-11	CARBON	10	5%	1/4W F
R482	1-249-437-11	CARBON	47K	5%	1/4W
R484	1-249-431-11	CARBON	15K	5%	1/4W
R485	1-249-435-11	CARBON	33K	5%	1/4W
R486	1-249-431-11	CARBON	15K	5%	1/4W
R487	1-249-433-11	CARBON	22K	5%	1/4W
R488	1-249-433-11	CARBON	22K	5%	1/4W
R501	1-249-417-11	CARBON	1K	5%	1/4W F

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description			Remarks
R502	1-249-441-11	CARBON	100K	5%	1/4W
R503	1-249-429-11	CARBON	10K	5%	1/4W
R511	1-249-417-11	CARBON	1K	5%	1/4W F
R512	1-249-439-11	CARBON	68K	5%	1/4W
R515	1-249-439-11	CARBON	68K	5%	1/4W
R516	1-249-417-11	CARBON	1K	5%	1/4W F
R521	1-249-440-11	CARBON	82K	5%	1/4W
R522	1-249-421-11	CARBON	2.2K	5%	1/4W F
⚠R523	1-249-408-11	CARBON	180	5%	1/4W F
R524	1-249-414-11	CARBON	560	5%	1/4W F
⚠R525	1-249-408-11	CARBON	180	5%	1/4W F
R526	1-249-425-11	CARBON	4.7K	5%	1/4W F
R527	1-247-850-11	CARBON	6.2K	5%	1/4W
⚠R528	1-234-182-11	ENCAPSULATED COMPONENT			
R529	1-249-419-11	CARBON	1.5K	5%	1/4W F
R530	1-247-881-00	CARBON	120K	5%	1/4W
⚠R531	1-249-393-11	CARBON	10	5%	1/4W F
R532	1-249-437-11	CARBON	47K	5%	1/4W
R534	1-249-431-11	CARBON	15K	5%	1/4W
R535	1-249-435-11	CARBON	33K	5%	1/4W
R536	1-249-431-11	CARBON	15K	5%	1/4W
R537	1-249-433-11	CARBON	22K	5%	1/4W
R538	1-249-433-11	CARBON	22K	5%	1/4W
R539	1-249-425-11	CARBON	4.7K	5%	1/4W F
R551	1-249-417-11	CARBON	1K	5%	1/4W F
R552	1-249-441-11	CARBON	100K	5%	1/4W
R553	1-249-429-11	CARBON	10K	5%	1/4W
R561	1-249-417-11	CARBON	1K	5%	1/4W F
R562	1-249-439-11	CARBON	68K	5%	1/4W
R565	1-249-439-11	CARBON	68K	5%	1/4W
R566	1-249-417-11	CARBON	1K	5%	1/4W F
R571	1-249-440-11	CARBON	82K	5%	1/4W
R572	1-249-421-11	CARBON	2.2K	5%	1/4W F
⚠R573	1-249-408-11	CARBON	180	5%	1/4W F
R574	1-249-414-11	CARBON	560	5%	1/4W F
⚠R575	1-249-408-11	CARBON	180	5%	1/4W F
R576	1-249-425-11	CARBON	4.7K	5%	1/4W F
R577	1-247-850-11	CARBON	6.2K	5%	1/4W
⚠R578	1-234-182-11	ENCAPSULATED COMPONENT			
R579	1-249-419-11	CARBON	1.5K	5%	1/4W F
R580	1-247-881-00	CARBON	120K	5%	1/4W
⚠R581	1-249-393-11	CARBON	10	5%	1/4W F
R582	1-249-437-11	CARBON	47K	5%	1/4W
R584	1-249-431-11	CARBON	15K	5%	1/4W
R585	1-249-435-11	CARBON	33K	5%	1/4W
R586	1-249-431-11	CARBON	15K	5%	1/4W
R587	1-249-433-11	CARBON	22K	5%	1/4W
R588	1-249-433-11	CARBON	22K	5%	1/4W
R601	1-249-417-11	CARBON	1K	5%	1/4W F
R602	1-249-441-11	CARBON	100K	5%	1/4W
R603	1-249-429-11	CARBON	10K	5%	1/4W
R611	1-249-417-11	CARBON	1K	5%	1/4W F
R612	1-249-439-11	CARBON	68K	5%	1/4W
R613	1-249-417-11	CARBON	1K	5%	1/4W F
R614	1-249-439-11	CARBON	68K	5%	1/4W

Ref. No.	Part No.	Description			Remarks
R615	1-249-411-11	CARBON	330	5%	1/4W
R621	1-249-440-11	CARBON	82K	5%	1/4W
R622	1-249-421-11	CARBON	2.2K	5%	1/4W F
⚠R623	1-249-408-11	CARBON	180	5%	1/4W F
R624	1-249-414-11	CARBON	560	5%	1/4W F
⚠R625	1-249-408-11	CARBON	180	5%	1/4W F
R626	1-249-425-11	CARBON	4.7K	5%	1/4W F
R627	1-247-850-11	CARBON	6.2K	5%	1/4W
⚠R628	1-234-182-11	ENCAPSULATED COMPONENT			
R629	1-249-419-11	CARBON	1.5K	5%	1/4W F
R630	1-247-881-00	CARBON	120K	5%	1/4W
⚠R631	1-249-393-11	CARBON	10	5%	1/4W F
R632	1-249-437-11	CARBON	47K	5%	1/4W
R634	1-249-431-11	CARBON	15K	5%	1/4W
R635	1-249-435-11	CARBON	33K	5%	1/4W
R636	1-249-431-11	CARBON	15K	5%	1/4W
R637	1-249-433-11	CARBON	22K	5%	1/4W
R638	1-249-433-11	CARBON	22K	5%	1/4W
R639	1-249-425-11	CARBON	4.7K	5%	1/4W F
R651	1-249-417-11	CARBON	1K	5%	1/4W F
R652	1-249-441-11	CARBON	100K	5%	1/4W
R653	1-249-429-11	CARBON	10K	5%	1/4W
R661	1-249-437-11	CARBON	47K	5%	1/4W
R662	1-249-421-11	CARBON	2.2K	5%	1/4W F
R663	1-249-429-11	CARBON	10K	5%	1/4W
R664	1-249-437-11	CARBON	47K	5%	1/4W
R689	1-249-437-11	CARBON	47K	5%	1/4W
R701	1-215-868-00	METAL OXIDE	680	5%	1W
R702	1-215-868-00	METAL OXIDE	680	5%	1W
R703	1-249-426-11	CARBON	5.6K	5%	1/4W
R721	1-249-437-11	CARBON	47K	5%	1/4W
R722	1-249-433-11	CARBON	22K	5%	1/4W
R723	1-249-433-11	CARBON	22K	5%	1/4W
R731	1-249-429-11	CARBON	10K	5%	1/4W
R732	1-249-429-11	CARBON	10K	5%	1/4W
R733	1-249-434-11	CARBON	27K	5%	1/4W
R734	1-249-429-11	CARBON	10K	5%	1/4W
R735	1-249-429-11	CARBON	10K	5%	1/4W
R736	1-249-429-11	CARBON	10K	5%	1/4W
R738	1-215-888-00	METAL OXIDE	220	5%	2W
R739	1-215-888-00	METAL OXIDE	220	5%	2W
⚠R741	1-249-381-11	CARBON	1	5%	1/4W F
⚠R742	1-249-381-11	CARBON	1	5%	1/4W F
R751	1-249-427-11	CARBON	6.8K	5%	1/4W F
R752	1-249-427-11	CARBON	6.8K	5%	1/4W F
R753	1-249-417-11	CARBON	1K	5%	1/4W F
R754	1-249-425-11	CARBON	4.7K	5%	1/4W F
R771	1-249-429-11	CARBON	10K	5%	1/4W
R772	1-249-441-11	CARBON	100K	5%	1/4W
⚠R801	1-219-153-11	FUSIBLE	10	5%	1/4W
⚠R802	1-249-401-11	CARBON	47	5%	1/4W F
R803	1-249-427-11	CARBON	6.8K	5%	1/4W F
R804	1-249-433-11	CARBON	22K	5%	1/4W
⚠R811	1-249-381-11	CARBON	1	5%	1/4W F
⚠R812	1-249-381-11	CARBON	1	5%	1/4W F

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

MAIN | POWER SWITCH | SPEAKER | STANDBY

Ref. No.	Part No.	Description			Remarks
⚠R813	1-249-381-11	CARBON	1	5% 1/4W	F
R821	1-249-417-11	CARBON	1K	5% 1/4W	F
R822	1-249-417-11	CARBON	1K	5% 1/4W	F
R823	1-249-421-11	CARBON	2.2K	5% 1/4W	F
		< RELAY >			
RY401	1-755-170-11	RELAY (12V)			
RY501	1-755-170-11	RELAY (12V)			
RY601	1-755-170-11	RELAY (12V)			
RY681	1-755-267-11	RELAY			
RY701	1-515-614-11	RELAY			
		< SWITCH >			
S801	1-786-107-21	SWITCH (SLIDE) (IMPEDANCE SELECTOR)			
**********					
	1-680-594-11	POWER SWITCH BOARD			
		**********			
		< CAPACITOR >			
C142	1-164-159-11	CERAMIC	0.1uF	50V	(DE975)
C151	1-164-159-11	CERAMIC	0.1uF	50V	(DE975)
		< CONNECTOR >			
* CNP103	1-565-295-11	PLUG, CONNECTOR 4P			
		< RESISTOR >			
R145	1-249-425-11	CARBON	4.7K	5% 1/4W	F
R146	1-249-429-11	CARBON	10K	5% 1/4W	
R147	1-249-433-11	CARBON	22K	5% 1/4W	(DE975)
		< SWITCH >			
S145	1-762-875-21	SWITCH, TACTILE (DISPLAY)			
S146	1-762-875-21	SWITCH, TACTILE (DIMMER)			
S147	1-762-875-21	SWITCH, TACTILE (ON SCREEN)			
S151	1-762-875-21	SWITCH, TACTILE (SPEAKERS)			
S161	1-762-875-21	SWITCH, TACTILE (I/⏻)			
**********					
	1-680-597-11	SPEAKER BOARD			
		**********			
		< CAPACITOR >			
C430	1-128-809-11	CERAMIC	100PF	5% 50V	
C480	1-128-809-11	CERAMIC	100PF	5% 50V	
C530	1-128-809-11	CERAMIC	100PF	5% 50V	
C580	1-128-809-11	CERAMIC	100PF	5% 50V	
C630	1-128-809-11	CERAMIC	100PF	5% 50V	
CC21	1-127-876-11	CERAMIC	0.01uF	10% 50V	(DE875:AEP,UK,E,MY,SP,CH,AUS)
CC31	1-127-876-11	CERAMIC	0.01uF	10% 50V	(DE875:AEP,UK,E,MY,SP,CH,AUS)
CC71	1-127-876-11	CERAMIC	0.01uF	10% 50V	(DE875:AEP,UK,E,MY,SP,CH,AUS)
CC81	1-127-876-11	CERAMIC	0.01uF	10% 50V	(DE875:AEP,UK,E,MY,SP,CH,AUS)
CC91	1-127-876-11	CERAMIC	0.01uF	10% 50V	(DE875:AEP,UK,E,MY,SP,CH,AUS)

Ref. No.	Part No.	Description			Remarks
		< CONNECTOR >			
* CNP817	1-506-599-11	PIN, CONNECTOR (B10P-VH) 10P			
		< COIL >			
L401	1-420-872-00	COIL, AIR-CORE	0		
L451	1-420-872-00	COIL, AIR-CORE	0		
L501	1-420-872-00	COIL, AIR-CORE	0		
L551	1-420-872-00	COIL, AIR-CORE	0		
L601	1-420-872-00	COIL, AIR-CORE	0		
		< RESISTOR >			
⚠R433	1-249-389-11	CARBON	4.7	5% 1/4W	F
⚠R483	1-249-389-11	CARBON	4.7	5% 1/4W	F
⚠R533	1-249-389-11	CARBON	4.7	5% 1/4W	F
⚠R583	1-249-389-11	CARBON	4.7	5% 1/4W	F
⚠R633	1-249-389-11	CARBON	4.7	5% 1/4W	F
⚠RR21	1-249-393-11	CARBON	10	5% 1/4W	F (DE875:AEP,UK,E,MY,SP,CH,AUS)
⚠RR31	1-249-393-11	CARBON	10	5% 1/4W	F (DE875:AEP,UK,E,MY,SP,CH,AUS)
⚠RR71	1-249-393-11	CARBON	10	5% 1/4W	F (DE875:AEP,UK,E,MY,SP,CH,AUS)
⚠RR81	1-249-393-11	CARBON	10	5% 1/4W	F (DE875:AEP,UK,E,MY,SP,CH,AUS)
⚠RR91	1-249-393-11	CARBON	10	5% 1/4W	F (DE875:AEP,UK,E,MY,SP,CH,AUS)
		< TERMINAL >			
TM501	1-694-792-11	TERMINAL BOARD (SP) (SPEAKERS FRONT)			
TM601	1-694-432-21	TERMINAL BOARD (SP) (SPEAKERS CENTER,SURROUND)			
**********					
	A-4476-072-A	STANDBY BOARD, COMPLETE (DE875:US,CND/DE975)			
		**********			
	A-4476-170-A	STANDBY BOARD, COMPLETE (DE875:AUS)			
		**********			
	A-4476-174-A	STANDBY BOARD, COMPLETE (DE875:AEP,UK,MY,SP)			
		**********			
	A-4476-177-A	STANDBY BOARD, COMPLETE (DE875:CH)			
		**********			
	A-4476-179-A	STANDBY BOARD, COMPLETE (DE875:E)			
		**********			
		< CAPACITOR >			
C851	1-126-936-11	ELECT	3300uF	20.00% 16V	
C852	1-164-159-11	CERAMIC	0.1uF	50V	
C853	1-164-159-11	CERAMIC	0.1uF	50V	
C861	1-164-159-11	CERAMIC	0.1uF	50V	
C862	1-164-159-11	CERAMIC	0.1uF	50V	
C863	1-126-941-11	ELECT	470uF	20.00% 25V	
C864	1-126-943-11	ELECT	2200uF	20.00% 25V	
C871	1-126-948-11	ELECT	100uF	20.00% 35V	
C872	1-126-949-11	ELECT	220uF	20.00% 35V	
⚠C901	1-164-159-11	CERAMIC	0.1uF	50V	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description			Remarks
C902	1-164-159-11	CERAMIC	0.1uF		50V
⚠C921	1-164-159-11	CERAMIC	0.1uF		50V
⚠C922	1-164-159-11	CERAMIC	0.1uF		50V
C923	1-126-959-11	ELECT	0.47uF	20.00%	50V
C924	1-126-936-11	ELECT	3300uF	20.00%	16V
C925	1-126-767-11	ELECT	1000uF	20.00%	16V
		< CONNECTOR >			
CNP813	1-766-204-11	PLUG, CONNECTOR PIN 11P			
CNP814	1-779-799-11	PIN, CONNECTOR 9P			
CNP815	1-691-767-11	PLUG (MICRO CONNECTOR) 5P			
CNP901	1-564-321-00	PIN, CONNECTOR 2P			
CNP902	1-568-106-11	PIN, CONNECTOR 4P (DE875:E)			
CNP905	1-565-792-11	PIN, CONNECTOR 2P			
		< DIODE >			
D851	8-719-024-99	DIODE 11ES2-NTA2B			
D852	8-719-024-99	DIODE 11ES2-NTA2B			
D853	8-719-024-99	DIODE 11ES2-NTA2B			
D854	8-719-024-99	DIODE 11ES2-NTA2B			
D861	8-719-024-99	DIODE 11ES2-NTA2B			
D862	8-719-024-99	DIODE 11ES2-NTA2B			
D863	8-719-024-99	DIODE 11ES2-NTA2B			
D864	8-719-024-99	DIODE 11ES2-NTA2B			
D871	8-719-024-99	DIODE 11ES2-NTA2B			
D872	8-719-024-99	DIODE 11ES2-NTA2B			
D911	8-719-911-19	DIODE 1SS133T-72			
D921	8-719-024-99	DIODE 11ES2-NTA2B			
D922	8-719-024-99	DIODE 11ES2-NTA2B			
D923	8-719-024-99	DIODE 11ES2-NTA2B			
D924	8-719-024-99	DIODE 11ES2-NTA2B			
D925	8-719-911-19	DIODE 1SS133T-72			
D926	8-719-911-19	DIODE 1SS133T-72			
D927	8-719-024-99	DIODE 11ES2-NTA2B			
		< EARTH >			
* ETP901	1-537-738-21	TERMINAL, EARTH			
* ETP902	1-537-738-21	TERMINAL, EARTH			
		< FUSE >			
⚠F901	1-576-193-11	FUSE (6.3A/125V)(DE875:US,CND/DE975)			
⚠F901	1-532-464-31	FUSE,TIME-LUG (T2.5AL/250V) (DE875:AEP,UK,E,MY,SP,CH,AUS)			
⚠F902	1-576-193-11	FUSE (6.3A/125V)(DE875:US,CND/DE975)			
⚠F902	1-532-464-31	FUSE,TIME-LUG (T2.5AL/250V) (DE875:AEP,UK,E,MY,SP,CH,AUS)			
		< FUSE HOLDER >			
FH901	1-533-293-11	FUSE HOLDER			
FH902	1-533-293-11	FUSE HOLDER			
FH951	1-533-293-11	FUSE HOLDER			
FH952	1-533-293-11	FUSE HOLDER			

Ref. No.	Part No.	Description			Remarks
		< JACK >			
⚠J911	1-251-417-11	OUTLET, A.C. (AC OUTLET)(DE875:AUS)			
⚠J911	1-251-718-11	OUTLET (2 GANG), AC (AC OUTLET) (DE875:US,CND,E/DE975)			
⚠J911	1-785-285-11	OUTLET, AC (1P) (AC OUTLET) (DE875:AEP,UK,MY,SP)			
⚠J911	1-815-076-11	OUTLET, AC 2P (AC OUTLET)(DE875:CH)			
		< TRANSISTOR >			
Q911	8-729-119-79	TRANSISTOR	2SC2785TP-FEK		
Q912	8-729-119-79	TRANSISTOR	2SC2785TP-FEK		
Q913	8-729-201-53	TRANSISTOR	2SA1015TP-YGR		
Q921	8-729-119-79	TRANSISTOR	2SC2785TP-FEK		
		< RESISTOR >			
⚠R851	1-243-635-11	FUSIBLE	0.33	5%	1/2W
⚠R861	1-240-877-11	FUSIBLE	0.15	5%	1/2W
⚠R862	1-240-877-11	FUSIBLE	0.15	5%	1/2W
⚠R871	1-240-877-11	FUSIBLE	0.15	5%	1/2W
⚠R901	1-202-725-00	SOLID	3.3M	10%	1/2W (DE875:US,CND/DE975)
R912	1-249-437-11	CARBON	47K	5%	1/4W
R913	1-249-425-11	CARBON	4.7K	5%	1/4W F
R921	1-249-437-11	CARBON	47K	5%	1/4W
R922	1-249-433-11	CARBON	22K	5%	1/4W
R923	1-249-429-11	CARBON	10K	5%	1/4W
R924	1-249-429-11	CARBON	10K	5%	1/4W
		< RELAY >			
RY911	1-755-439-11	RELAY			
		< TRANSFORMER >			
⚠T902	1-437-314-11	TRANSFORMER, POWER (DE875:E)			
⚠T902	1-437-313-11	TRANSFORMER, POWER (DE875:AEP,UK,MY,SP,CH,AUS)			
⚠T902	1-437-312-11	TRANSFORMER, POWER (DE875:US,CND/DE975)			
**********					
	A-4476-058-A	S-VIDEO BOARD, COMPLETE (DE975)			
		**********			
	A-4476-159-A	S-VIDEO BOARD, COMPLETE (DE875:US,CND,E)			
		**********			
	A-4476-776-A	S-VIDEO BOARD, COMPLETE (DE875:AEP,UK,MY,SP,CH,AUS)			
		**********			
		< CAPACITOR >			
C201	1-126-947-11	ELECT	47uF	20.00%	35V
C202	1-164-159-11	CERAMIC	0.1uF		50V
C203	1-164-159-11	CERAMIC	0.1uF		50V
C204	1-126-947-11	ELECT	47uF	20.00%	35V
C205	1-164-159-11	CERAMIC	0.1uF		50V
C206	1-164-159-11	CERAMIC	0.1uF		50V
C207	1-128-817-11	CERAMIC	470PF	5%	50V
C208	1-128-805-11	CERAMIC	47PF	5%	50V
C209	1-128-805-11	CERAMIC	47PF	5%	50V
C210	1-126-960-11	ELECT	1uF	20.00%	50V

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

S-VIDEO VIDEO

Ref. No.	Part No.	Description			Remarks
C211	1-164-159-11	CERAMIC	0.1uF		50V
C212	1-126-960-11	ELECT	1uF	20.00%	50V
C213	1-164-159-11	CERAMIC	0.1uF		50V
C215	1-128-805-11	CERAMIC	47PF	5%	50V
C216	1-128-805-11	CERAMIC	47PF	5%	50V
C217	1-128-817-11	CERAMIC	470PF	5%	50V
C218	1-126-960-11	ELECT	1uF	20.00%	50V
C219	1-164-159-11	CERAMIC	0.1uF		50V
C220	1-128-817-11	CERAMIC	470PF	5%	50V (DE875:US,CND,E/DE975)
C221	1-128-817-11	CERAMIC	470PF	5%	50V (DE875:US,CND,E/DE975)
C222	1-126-947-11	ELECT	47uF	20.00%	35V (DE875:US,CND,E/DE975)
C223	1-126-947-11	ELECT	47uF	20.00%	35V (DE875:US,CND,E/DE975)
C224	1-164-159-11	CERAMIC	0.1uF		50V
C225	1-128-817-11	CERAMIC	470PF	5%	50V
CNS201	1-568-440-11	SOCKET, CONNECTOR 17P (DE975)			
CNS201	1-569-442-11	JACK, PIN 2P (DE875)			
CNS202	1-569-321-11	SOCKET, CONNECTOR 15P			
		< DIODE >			
D201	8-719-911-19	DIODE 1SS133T-72			
D202	8-719-911-19	DIODE 1SS133T-72			
D203	8-719-118-63	DIODE RD5.6F-T7B2			
		< IC >			
IC201	8-759-529-20	IC NJM2296D			
IC202	8-759-529-20	IC NJM2296D			
IC203	8-759-666-33	IC NJM2145D (DE875:US,CND,E/DE975)			
		< JACK >			
J201	1-537-943-11	TERMINAL, S (MONITOR S-VIDEO OUT)			
J202	1-764-676-11	CONNECTOR (ROUND TYPE) (TV/SAT/DVD/LD S-VIDEO IN)			
J203	1-764-676-11	CONNECTOR (ROUND TYPE) (VIDEO1 S-VIDEO IN/OUT)			
J204	1-563-330-11	JACK (CONTROL A1 II)			
J205	1-563-330-11	JACK (VIDEO1 CTRL S OUT) (DE875:US,CND,E/DE975)			
J206	1-563-330-11	JACK (DVD/LD CTRL S OUT) (DE875:US,CND,E/DE975)			
J207	1-563-330-11	JACK (TV/SAT CTRL S STATUS IN) (DE875:US,CND,E/DE975)			
J208	1-563-330-11	JACK (MONITOR CTRL S IN) (DE875:US,CND,E/DE975)			
		< TRANSISTOR >			
Q201	8-729-422-57	TRANSISTOR	BN1A4M-TP		(DE875:US,CND,E/DE975)
Q202	8-729-900-80	TRANSISTOR	BA1A4M-TP		(DE875:US,CND,E/DE975)

Ref. No.	Part No.	Description			Remarks
		< RESISTOR >			
R201	1-247-804-11	CARBON	75	5%	1/4W
R202	1-247-804-11	CARBON	75	5%	1/4W
R203	1-247-804-11	CARBON	75	5%	1/4W
R204	1-247-804-11	CARBON	75	5%	1/4W
R205	1-247-804-11	CARBON	75	5%	1/4W
R206	1-247-804-11	CARBON	75	5%	1/4W
R207	1-247-804-11	CARBON	75	5%	1/4W
R208	1-247-804-11	CARBON	75	5%	1/4W
R209	1-247-804-11	CARBON	75	5%	1/4W
R210	1-247-804-11	CARBON	75	5%	1/4W
R211	1-249-429-11	CARBON	10K	5%	1/4W
R212	1-249-429-11	CARBON	10K	5%	1/4W
R213	1-249-429-11	CARBON	10K	5%	1/4W
R214	1-249-417-11	CARBON	1K	5%	1/4W F (DE875:US,CND,E/DE975)
R215	1-249-417-11	CARBON	1K	5%	1/4W F (DE875:US,CND,E/DE975)
R216	1-249-417-11	CARBON	1K	5%	1/4W F (DE875:US,CND,E/DE975)
R217	1-249-417-11	CARBON	1K	5%	1/4W F (DE875:US,CND,E/DE975)
R218	1-249-425-11	CARBON	4.7K	5%	1/4W F
R219	1-249-427-11	CARBON	6.8K	5%	1/4W F
R220	1-249-427-11	CARBON	6.8K	5%	1/4W F

****

	A-4476-069-A	VIDEO BOARD, COMPLETE (DE975)			
		**********			
	A-4476-162-A	VIDEO BOARD, COMPLETE (DE875)			
		**********			
		< CAPACITOR >			
C251	1-128-801-11	CERAMIC	22PF	5%	50V (DE975)
C252	1-162-198-31	CERAMIC	8.2PF	10.00%	50V (DE975)
C254	1-126-947-11	ELECT	47uF	20.00%	35V (DE975)
C255	1-164-159-11	CERAMIC	0.1uF		50V (DE975)
C256	1-128-803-11	CERAMIC	33PF	5%	50V (DE975)
C257	1-162-199-31	CERAMIC	10PF	5%	50V (DE975)
C258	1-164-159-11	CERAMIC	0.1uF		50V (DE975)
C259	1-128-809-11	CERAMIC	100PF	5%	50V (DE975)
C260	1-126-964-11	ELECT	10uF	20.00%	50V (DE975)
C261	1-126-964-11	ELECT	10uF	20.00%	50V (DE975)

Ref. No.	Part No.	Description			Remarks
C262	1-126-960-11	ELECT	1uF	20.00%	50V (DE975)
C263	1-126-935-11	ELECT	470uF	20.00%	10V (DE975)
C264	1-126-935-11	ELECT	470uF	20.00%	10V (DE975)
C265	1-126-964-11	ELECT	10uF	20.00%	50V (DE975)
C266	1-126-964-11	ELECT	10uF	20.00%	50V (DE975)
C267	1-126-964-11	ELECT	10uF	20.00%	50V (DE975)
C268	1-126-964-11	ELECT	10uF	20.00%	50V (DE975)
C269	1-164-159-11	CERAMIC	0.1uF		50V (DE975)
C270	1-126-947-11	ELECT	47uF	20.00%	35V (DE975)
C271	1-164-159-11	CERAMIC	0.1uF		50V
C272	1-126-947-11	ELECT	47uF	20.00%	35V
C275	1-126-964-11	ELECT	10uF	20.00%	50V
C277	1-128-805-11	CERAMIC	47PF	5%	50V
C280	1-164-159-11	CERAMIC	0.1uF		50V
C281	1-126-947-11	ELECT	47uF	20.00%	35V
C282	1-128-805-11	CERAMIC	47PF	5%	50V
C283	1-128-825-11	CERAMIC	2200PF	5%	50V
C284	1-126-964-11	ELECT	10uF	20.00%	50V
C285	1-128-825-11	CERAMIC	2200PF	5%	50V
C286	1-126-964-11	ELECT	10uF	20.00%	50V
C287	1-128-805-11	CERAMIC	47PF	5%	50V
C288	1-128-805-11	CERAMIC	47PF	5%	50V
C289	1-128-805-11	CERAMIC	47PF	5%	50V
C290	1-126-964-11	ELECT	10uF	20.00%	50V
C291	1-126-964-11	ELECT	10uF	20.00%	50V
C292	1-128-805-11	CERAMIC	47PF	5%	50V
C293	1-128-805-11	CERAMIC	47PF	5%	50V
C294	1-128-805-11	CERAMIC	47PF	5%	50V
C295	1-128-825-11	CERAMIC	2200PF	5%	50V
		< CONNECTOR >			
CNP251	1-564-506-11	PLUG, CONNECTOR 3P (DE975)			
CNP252	1-569-321-11	SOCKET, CONNECTOR 15P (DE975)			
CNP252	1-568-442-11	SOCKET, CONNECTOR 9P (DE875)			
CNP253	1-784-921-11	PIN, CONNECTOR 4P (DE975)			
CNP254	1-691-765-11	PLUG (MICRO CONNECTOR) 3P			
		< TRIMMER >			
CT251	1-141-442-91	CAP, CERAMIC TRIMMER 20PF (DE975)			
CT252	1-141-442-91	CAP, CERAMIC TRIMMER 20PF (DE975)			
		< DIODE >			
D251	8-719-911-19	DIODE 1SS133T-72 (DE975)			
D252	8-719-911-19	DIODE 1SS133T-72			
D253	8-719-911-19	DIODE 1SS133T-72			
		< FERRITE BEAD >			
FB251	1-416-300-21	FILTER, NOISE (DE975)			

Ref. No.	Part No.	Description			Remarks
		< IC >			
IC251	8-759-529-20	IC NJM2296D			
IC252	8-759-835-09	IC MB90089PF-G-237-BND (DE975)			
IC253	8-759-666-34	IC BA7622 (DE975)			
		< JACK >			
J251	1-774-227-11	JACK, PIN 1P (MONITOR VIDEO OUT)			
J252	1-770-337-11	JACK, PIN 3P (TV/SAT/DVD/LD VIDEO IN,VIDEO2 VIDEO OUT)			
J253	1-770-337-11	JACK, PIN 3P (VIDEO2 VIDEO IN,VIDEO1 VIDEO IN/OUT)			
		< COIL >			
L251	1-410-973-11	INDUCTOR	22uH (DE975)		
		< TRANSISTOR >			
Q203	8-729-119-79	TRANSISTOR	2SC2785TP-FEK (DE975)		
Q204	8-729-119-79	TRANSISTOR	2SC2785TP-FEK (DE975)		
		< RESISTOR >			
R251	1-249-410-11	CARBON	270	5%	1/4W F (DE975)
R252	1-249-425-11	CARBON	4.7K	5%	1/4W F (DE975)
R253	1-249-417-11	CARBON	1K	5%	1/4W F (DE975)
R254	1-249-417-11	CARBON	1K	5%	1/4W F (DE975)
R255	1-249-417-11	CARBON	1K	5%	1/4W F (DE975)
R256	1-249-417-11	CARBON	1K	5%	1/4W F (DE975)
R257	1-249-424-11	CARBON	3.9K	5%	1/4W F (DE975)
R258	1-249-437-11	CARBON	47K	5%	1/4W (DE975)
R259	1-249-437-11	CARBON	47K	5%	1/4W (DE975)
R260	1-249-437-11	CARBON	47K	5%	1/4W (DE975)
R261	1-249-418-11	CARBON	1.2K	5%	1/4W F (DE975)
R262	1-249-437-11	CARBON	47K	5%	1/4W (DE975)
R263	1-249-393-11	CARBON	10	5%	1/4W F (DE975)
R264	1-249-393-11	CARBON	10	5%	1/4W F (DE975)
R271	1-247-804-11	CARBON	75	5%	1/4W
R272	1-247-804-11	CARBON	75	5%	1/4W
R273	1-247-804-11	CARBON	75	5%	1/4W
R274	1-247-804-11	CARBON	75	5%	1/4W
R275	1-247-804-11	CARBON	75	5%	1/4W
R276	1-247-804-11	CARBON	75	5%	1/4W
R277	1-247-804-11	CARBON	75	5%	1/4W
R278	1-247-804-11	CARBON	75	5%	1/4W
		< VIBRATOR >			
X251	1-781-821-21	VIBRATOR, CRYSTAL (14.31818MHz)(DE975)			

****

VIDEO 3

Ref. No.	Part No.	Description			Remarks
	1-680-592-11	VIDEO 3 BOARD (DE975)			
		**********			
		< CAPACITOR >			
C152	1-128-805-11	CERAMIC	47PF	5%	50V (DE975)
C153	1-128-809-11	CERAMIC	100PF	5%	50V (DE975)
C154	1-128-809-11	CERAMIC	100PF	5%	50V (DE975)
C155	1-128-821-11	CERAMIC	1000PF	5%	50V (DE975)
C156	1-128-821-11	CERAMIC	1000PF	5%	50V (DE975)
		< CONNECTOR >			
CNP104	1-784-922-11	PIN, CONNECTOR 5P (DE975)			
		< JACK >			
J140	1-815-431-11	JACK, PIN 3P (VIDE3 INPUT AUDIO R/L,VIDEO) (DE975)			
		< RESISTOR >			
R151	1-249-417-11	CARBON	1K	5%	1/4W F (DE975)
R152	1-249-417-11	CARBON	1K	5%	1/4W F (DE975)
**********					
		MISCELLANEOUS			
		**********			
57	1-769-907-11	WIRE (FLAT TYPE) (9 CORE) (DE875)			
57	1-773-041-11	WIRE (FLAT TYPE) (17 CORE) (DE975)			
59	1-693-539-21	TUNER UNIT (DE875:US,CND/DE975)			
59	1-693-540-21	TUNER UNIT (DE875:AEP,UK,E,MY,SP,CH,AUS)			
60	1-773-004-11	WIRE (FLAT TYPE) (15 CORE) (DE975)			
61	1-773-002-11	WIRE (FLAT TYPE) (15 CORE)			
61	1-773-007-11	WIRE (FLAT TYPE) (15 CORE) (DE875)			
⚠68	1-696-847-11	CORD, POWER (DE875:AUS)			
⚠68	1-777-071-21	CORD, POWER (DE875:AEP,UK,E,MY,SP)			
⚠68	1-783-205-11	CORD, POWER (DE875:CH)			
⚠68	1-783-820-11	CORD, POWER (DE875:CND,US/DE975)			
⚠71	1-569-008-21	ADAPTOR, CONVERSION 2P (DE875:E)			
⚠T901	1-435-944-11	POWER TRANSFORMER (DE875:E)			
⚠T901	1-435-942-11	TRANSFORMER, POWER (DE875:AEP,UK,MY,SP,CH)			
⚠T901	1-435-943-11	TRANSFORMER, POWER (DE875:AUS)			
⚠T901	1-435-945-11	TRANSFORMER, POWER (DE875:US/DE975:US)			
⚠T901	1-435-946-11	TRANSFORMER, POWER (DE875:CND/DE975:CND)			

Ref. No.	Part No.	Description	Remarks
		ACCESSORIES & PACKING MATERIALS	
		**********	
	1-476-552-21	COMMANDER, STANDARD (RM-U305A) (DE875:AEP,UK)	
	1-476-606-11	REMOTE COMMANDER (RM-PP505) (DE875:US,CND,E,MY,SP,CH,AUS)	
	1-476-607-11	REMOTE COMMANDER (RM-PP505L) (DE975)	
	1-501-374-11	ANTENNA, LOOP (AM)	
	1-501-594-11	ANTENNA (FM) (DE875:AEP,UK,CH,MY,SP,AUS)	
	1-793-184-21	CONNECTOR (F TYPE ADAPTOR) (FM) (DE875:US,CND,E/DE975)	
	4-228-696-01	COVER, BATTERY (FOR RM-U305A) (DE875:AEP,UK)	
	4-983-536-01	COVER, BATTERY (FOR RM-PP505, RM-PP505L) (EXCEPT DE875:AEP,UK)	
	4-234-334-11	INSTRUCTION MANUAL (ENGLISH) (DE875:US/DE975:US)	
	4-234-334-21	INSTRUCTION MANUAL (FRENCH) (DE875:CND/DE975:CND)	
	4-234-334-31	INSTRUCTION MANUAL (ENGLISH) (DE875:E,MY,SP,CH,AUS)	
	4-234-334-41	INSTRUCTION MANUAL (FRENCH,SPANISH,CHINESE)(DE875:E,MY,SP)	
	4-234-334-51	INSTRUCTION MANUAL (CHINESE)(DE875:CH)	
	4-234-334-61	INSTRUCTION MANUAL (ENGLISH) (DE875:AEP,UK)	
	4-234-334-71	INSTRUCTION MANUAL (CHINESE, DUTCH, SWEDISH)(DE875:AEP)	
	4-234-334-81	INSTRUCTION MANUAL (GERMAN, SPANISH) (DE875:AEP)	
	4-234-334-91	INSTRUCTION MANUAL (ITALIAN, POLISH) (DE875:AEP)	
	4-235-738-11	INSTRUCTION MANUAL (DENISH,FINNISH) (DE875:AEP)	
	4-236-897-11	INSTRUCTION MANUAL (ENGLISH)	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 ⚠ 标志来识别的零部件，在安全方面具有关键性，因此只能以规定号码的零部件来更换。

MEMO

REVISION HISTORY

Clicking the version allows you to jump to the revised page.
Also, clicking the version at the upper right on the revised page allows you to jump to the next revised page.

Ver.	Date	Description of Revision
1.0	2001.05	New
1.1	2002.09	Correction of part number for RV101, RV102 and RV103 (SPM-02075)
1.2	2003.09	Correction of Part No. of Ref.No. T902 (for DE875 : AEP, UK, MY, SP, CH, AUS) (SPM-03078)
1.3	2006.02	Correction of part number of IC103 (SPM-06001)